Mitsubishi ilmalämpöpumput huoltaa ja korjaa: Jäähdytinpalvelu RefGroup Oy

Changes for the Better

MITSUBISHI ELECTRIC

SPLIT-TYPE, HEAT PUMP AIR CONDITIONERS

No. OB379

HFC utilized R410A

SERVICE MANUAL

Wireless type
Models

MUZ-GA25VA - E1
MUZ-GA35VA - E1
MUZ-GA25VAH - E1
MUZ-GA35VAH - E1

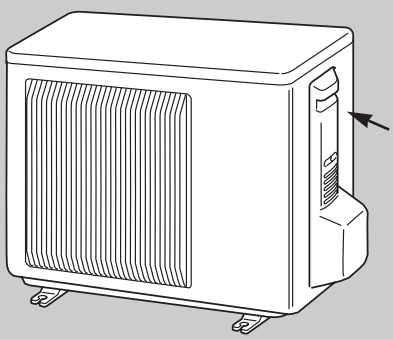

Indication of model name
MUZ-GA25VA -E1
MUZ-GA35VA -E1
MUZ-GA25VAH -E1
MUZ-GA35VAH -E1

CONTENTS

1. TECHNICAL CHANGES ····· 2
2. PART NAMES AND FUNCTIONS ····· 6
3. SPECIFICATION ····· 7
4. NOISE CRITERIA CURVES ····· 9
5. OUTLINES AND DIMENSIONS ····· 10
6. WIRING DIAGRAM ····· 11
7. REFRIGERANT SYSTEM DIAGRAM ····· 15
8. PERFORMANCE CURVES ····· 17
9. ACTUATOR CONTROL ····· 25
10. SERVICE FUNCTIONS ····· 26
11. TROUBLESHOOTING ····· 26
12. DISASSEMBLY INSTRUCTIONS ····· 45
13. PARTS LIST ····· 48

NOTE:
This service manual describes technical data of the outdoor units.
•As for indoor units MSZ-GA22VA-E1, MSZ-GA25VA-E1 and MSZ-GA35VA-E1, refer to the service manual OB378.

CE

www.ilmalämpöpumput.com

1 TECHNICAL CHANGES

MUZ-A09YV -E1 → MUZ-GA25VA -E1
MUZ-A09YVH -E1 → MUZ-GA25VAH -E1

1.Indication of capacity has been changed.(BTU base → kW base)
2.Control method between indoor and outdoor unit has been changed.
3.Power supply method has been changed (change to supply from outdoor unit).
4.Terminal block for power supply has been added.
5.Power P.C. board has been changed.
6.Inverter P.C. board has been changed.
7.Refrigerant circuit has been changed.
- Compressor has been changed.(KNB073FBVH→KNB065FDTH)
- LEV has been removed and capillary tube has been added.
- Bypass circuit for low outside temperature operation has been added.
- Specification and position of muffler have been changed.
- Path of outdoor heat exchanger has been changed.
- 4-way valve and R.V. coil have been changed.
- Stop valve has been changed.

8.Fan motor has been changed. (AC)
9.Shape of grille has been changed.
10.Shape of service panel has been changed.
11.Shape of propeller has been changed.
12.Quick Clean Kit has been added.
13.Symbol on terminal block has been changed (to S1/S2/S3).

MUZ-A12YV -E1 → MUZ-GA35VA -E1
MUZ-A12YVH -E1 → MUZ-GA35VAH -E1

1.Indication of capacity has been changed.(BTU base → kW base)
2.Control method between indoor and outdoor unit has been changed.
3.Power supply method has been changed (change to supply from outdoor unit).
4.Terminal block for power supply has been added.
5.Power P.C. board has been changed.
6.Inverter P.C. board has been changed.
7.Refrigerant circuit has been changed.
- Compressor has been changed.(KNB092FAAH→KNB073FDVH)
- Specification and position of muffler have been changed.
- Path of outdoor heat exchanger has been changed.
- 4-way valve and R.V. coil have been changed.
- Stop valve has been changed.

8.Fan motor has been changed.(AC→DC)
9.Shape of grille has been changed.
10.Shape of service panel has been changed.
11.Shape of propeller has been changed.
12.Quick Clean Kit has been added.
13.Symbol on terminal block has been changed (to S1/S2/S3).

www.ilmalämpöpumput.com

INFORMATION FOR THE AIR CONDITIONER WITH R410A REFRIGERANT

- This room air conditioner adopts HFC refrigerant (R410A) which never destroys the ozone layer.
- Pay particular attention to the following points, though the basic installation procedure is same as that for R22 air conditioners.

① As R410A has working pressure approximate 1.6 times as high as that of R22, some special tools and piping parts/ materials are required. Refer to the table below.
② Take sufficient care not to allow water and other contaminations to enter the R410A refrigerant during storage and installation, since it is more susceptible to contaminations than R22.
③ For refrigerant piping, use clean, pressure-proof parts/materials specifically designed for R410A. (Refer to 2. Refrigerant piping.)
④ Composition change may occur in R410A since it is a mixed refrigerant. When charging, charge liquid refrigerant to prevent composition change.

		New refrigerant	Previous refrigerant
Refrigerant	Refrigerant	R410A	R22
	Composition (Ratio)	HFC-32: HFC-125 (50%:50%)	R22 (100%)
	Refrigerant handling	Pseudo-azeotropic refrigerant	Single refrigerant
	Chlorine	Not included	Included
	Safety group (ASHRAE)	A1/A1	A1
	Molecular weight	72.6	86.5
	Boiling point (℃)	-51.4	-40.8
	Steam pressure [25℃](Mpa)	1.557	0.94
	Saturated steam density [25℃](Kg/m³)	64	44.4
	Combustibility	Non combustible	Non combustible
	ODP ※1	0	0.055
	GWP ※2	1730	1700
	Refrigerant charge method	From liquid phase in cylinder	Gas phase
	Additional charge on leakage	Possible	Possible
Refrigeration oil	Kind	Incompatible oil	Compatible oil
	Color	Non	Light yellow
	Smell	Non	Non

※1 :Ozone Destruction Parameter : based on CFC-11
※2 :Global Warmth Parameter : based on CO_2

	New Specification	Current Specification
Compressor	The incompatible refrigeration oil easily separates from refrigerant and is in the upper layer inside the suction muffler. Raising position of the oil back hole enables to back the refrigeration oil of the upper layer to flow back to the compressor. 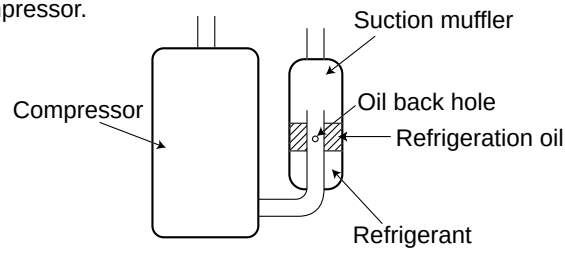	Since refrigerant and refrigeration oil are compatible each, refrigeration oil goes back to the compressor through the lower position oil back hole. 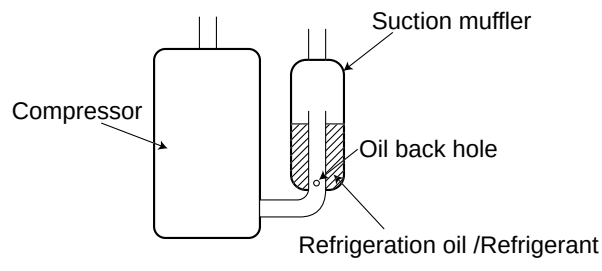

NOTE : The unit of pressure has been changed to MPa on the international system of units(SI unit system).
The conversion factor is: **1(MPa [Gauge]) =10.2(kgf/㎠ [Gauge])**

www.ilmalämpöpumput.com

Conversion chart of refrigerant temperature and pressure

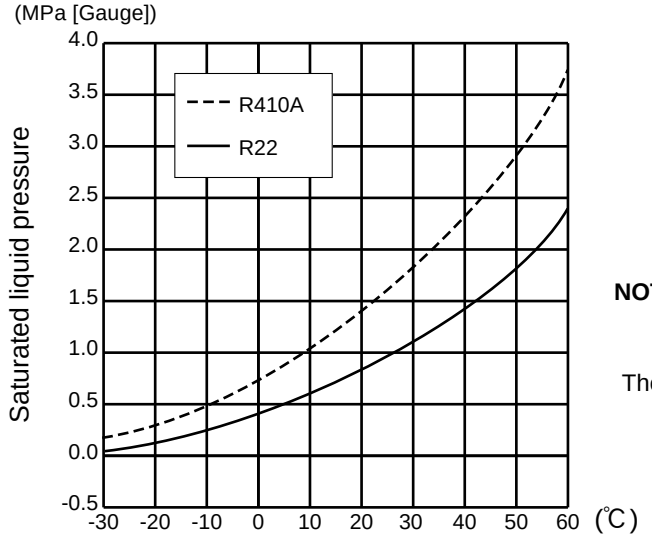

NOTE : The unit of pressure has been changed to MPa on the international system of units(SI unit system).

The conversion factor is: **1(MPa [Gauge]) =10.2(kgf/㎠ [Gauge])**

1.Tools dedicated for the air conditioner with R410A refrigerant

The following tools are required for R410A refrigerant. Some R22 tools can be substituted for R410A tools.
The diameter of the service port on the stop valve in outdoor unit has been changed to prevent any other refrigerant being charged into the unit. Cap size has been changed from 7/16 UNF with 20 threads to 1/2 UNF with 20 threads.

R410A tools	Can R22 tools be used?	Description
Gauge manifold	No	R410A has high pressures beyond the measurement range of existing gauges. Port diameters have been changed to prevent any other refrigerant from being charged into the unit.
Charge hose	No	Hose material and cap size have been changed to improve the pressure resistance.
Gas leak detector	No	Dedicated for HFC refrigerant.
Torque wrench	Yes	6.35 mm and 9.52 mm
	No	12.7 mm
Flare tool	Yes	Clamp bar hole has been enlarged to reinforce the spring strength in the tool.
Flare gauge	New	Provided for flaring work (to be used with R22 flare tool).
Vacuum pump adapter	New	Provided to prevent the back flow of oil. This adapter enables you to use vacuum pumps.
Electronic scale for refrigerant charging	New	It is difficult to measure R410A with a charging cylinder because the refrigerant bubbles due to high pressure and high-speed vaporization

No : Not Substitutable for R410A Yes : Substitutable for R410A

2.Refrigerant piping

① Specifications

Use the refrigerant pipes that meet the following specifications.

Pipe	Outside diameter mm	Wall thickness	Insulation material
For liquid	6.35	0.8 mm	Heat resisting foam plastic Specific gravity 0.045 Thickness 8 mm
For gas	9.52	0.8 mm	
	12.7	0.8 mm	

• Use a copper pipe or a copper-alloy seamless pipe with a thickness of 0.8 mm. Never use any pipe with a thickness less than 0.8mm, as the pressure resistance is insufficient.

www.ilmalämpöpumput.com

② Flaring work and flare nut
Flaring work for R410A pipe differs from that for R22 pipe.
For details of flaring work, refer to Installation manual “FLARING WORK”.

Pipe diameter	Dimension of flare nut	
mm	R410A	R22
6.35	17	17
9.52	22	22
12.7	26	24

3.Refrigerant oil
Apply the special refrigeration oil (accessories: packed with indoor unit) to the flare and the union seat surfaces.

4.Air purge
- Do not discharge the refrigerant into the atmosphere.
  Take care not to discharge refrigerant into the atmosphere during installation, reinstallation, or repairs to the refrigerant circuit.
- Use the vacuum pump for air purging for the purpose of environmental protection.

5.Additional charge
For additional charging, charge the refrigerant from liquid phase of the gas cylinder.
If the refrigerant is charged from the gas phase, composition change may occur in the refrigerant inside the cylinder and the outdoor unit. In this case, ability of the refrigeration cycle decreases or normal operation can be impossible. However, charging the liquid refrigerant all at once may cause the compressor to be locked. Thus, charge the refrigerant slowly.

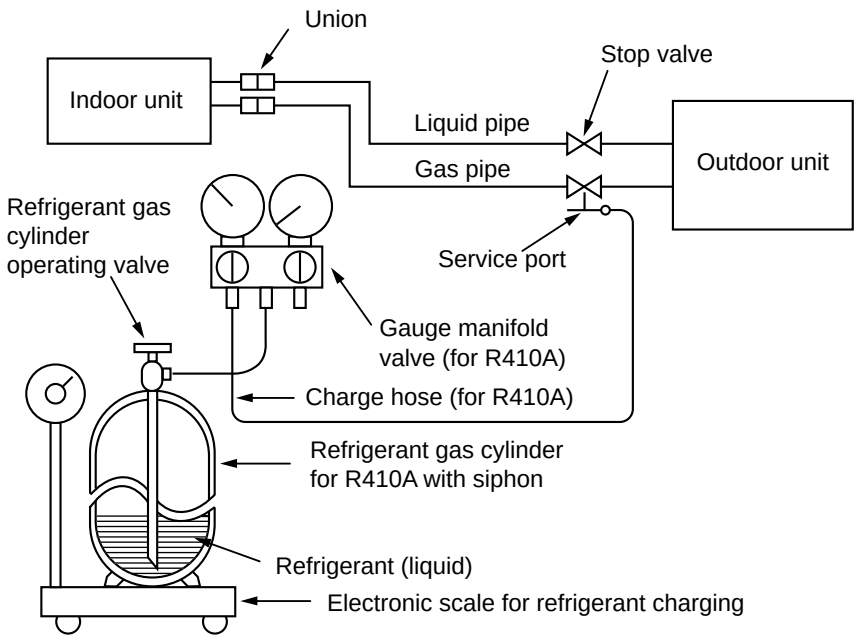

www.ilmalämpöpumput.com

2 PART NAMES AND FUNCTIONS

MUZ-GA25VA -E1 **MUZ-GA35VA -E1**
MUZ-GA25VAH -E1 **MUZ-GA35VAH -E1**

OUTDOOR UNIT

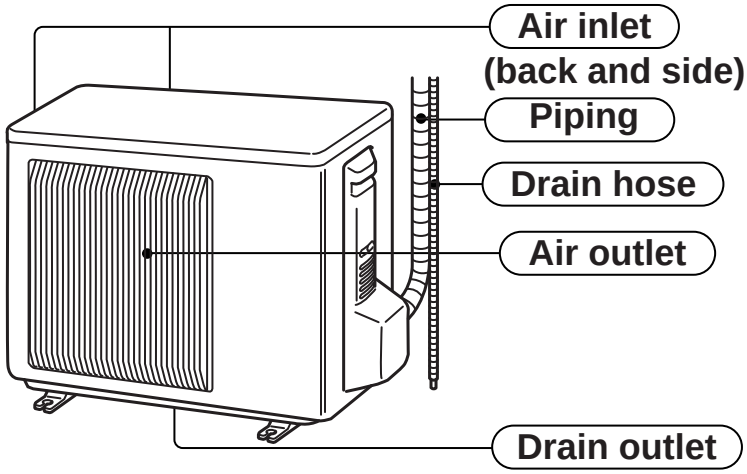

ACCESSORIES

		MUZ-GA25VA - E1 MUZ-GA35VA - E1	MUZ-GA25VAH - E1 MUZ-GA35VAH - E1
①	Drain socket	1	–
②	Quick clean kit	1	1

www.ilmalämpöpumput.com

3 SPECIFICATION

Outdoor model			MUZ-GA25VA -E1 MUZ-GA25VAH -E1		MUZ-GA35VA -E1 MUZ-GA35VAH -E1	
Function			Cooling	Heating	Cooling	Heating
Power supply			Single phase 230V,50Hz		Single phase 230V,50Hz	
Capacity	Capacity Rated frequency(Min.-Max.)	kW	2.5 (0.9-3.0)	3.2 (0.9-4.5)	3.5 (1.0-3.9)	4.0 (0.9-5.0)
	Dehumidification	ℓ /h	1.4	—	2.0	—
	Air flow ✻1	m³ /h	1,890		2,058	2,178
Electrical data	Starting current ✻1	A	3.6		5.0	
	Compressor motor current ✻1	A	2.71	3.11	4.44	4.20
	Fan motor current ✻1	A	0.24		0.31	0.35
Coefficient of performance(C.O.P) ✻1			3.91	4.21	3.24	3.79
Compressor	Model		KNB065FDTH		KNB073FDVH	
	Output	W	500		550	
	Winding resistance(at 20℃)	Ω	U-V 1.88 U-W 1.88 V-W 1.88		U-V 1.53 U-W 1.53 V-W 1.53	
Fan motor	Model		RA6V21-AB		RC0J50-AL	
	Winding resistance(at 20℃)	Ω	WHT-BLK 347 BLK-RED 281		WHT-BLK 37.5 BLK-RED 37.5 RED-WHT 37.5	
Dimensions W×H×D		mm	800×550×285		800×550×285	
Weight		kg	31		33	
Special remarks	Sound level ✻1	dB(A)	46		47	48
	Fan speed(High※/Low※, High※/Med.※/Low※)	rpm	810		810※/750※	880※/810※/650※
	Fan speed regulator		1		2	3
	Refrigerant filling capacity(R410A)	kg	0.85		0.90	
	Refrigeration oil (Model)	cc	320 (NEO22)		320 (NEO22)	
	Thermistor RT61(at 0℃)	kΩ	32.6		32.6	
	Thermistor RT62(at 100℃)	kΩ	13.4		13.4	
	Thermistor RT64(at 50℃)	kΩ	17		17	
	Thermistor RT65(at 25℃)	kΩ	10		10	

NOTE : Test conditions are based on ISO 5151
Cooling : Indoor Dry-bulb temperature 27℃ Wet-bulb temperature 19℃
Outdoor Dry-bulb temperature 35℃ Wet-bulb temperature(24℃)
Heating : Indoor Dry-bulb temperature 20℃ Wet-bulb temperature 15℃
Outdoor Dry-bulb temperature 7℃ Wet-bulb temperature 6℃
Refrigerant piping length (one way): 5m
✻1 Measured under rated operating frequency
※ Reference value

www.ilmalämpöpumput.com

Specifications and rating conditions of main electric parts

OUTDOOR UNIT

Item \ Model	MUZ-GA25VA - E1	MUZ-GA25VAH - E1	MUZ-GA35VA - E1	MUZ-GA35VAH - E1
Current transformer (CT)	ETA19Z59BZ			
Current transformer (CT761, CT781)	ETQ19Z71AY			
Smoothing capacitor (C63A, C63B, C63C)	620μF 420V			
Diode module (DB61, DB65)	D25XB60			
Fuse (F61)	250V 20A			
Fuse (F71, F801)	250V 3.15A			
Defrost heater (H)	—	230V 130W	—	230V 130W
Intelligent power module (IPM)	PS21244-A-203			
Expansion valve coil (LEV)	—		CAM-MD12ME 12VDC	
Reactor (L61)	10A 23.0mH			
Current-detecting resistor (R61)	45mΩ 5W (1 element)			
Current-detecting resistor (R831)	25mΩ 5W			
Current-limiting resistor (R64A, R64B)	10Ω 5W			
Terminal block (TB1,TB2)	3P			
Relay (X63)	G5NB-1a			
Relay (X64)	G4A-1A-PS			
Relay (X66)	—	G5NB-1a	—	G5NB-1a
Relay (X69)	G5NB-1a		—	
R.V. coil (21S4)	SHF-4-10W5		STF-01AJ503	
Solid state relay (SR61)	G3MC-202PL		—	
Solenoid valve coil (21R1)	FQ-208-RK		—	
Heater protector (26H)	—	Open 45℃	—	Open 45℃
Outdoor fan motor thermal fuse	Open 152℃		—	

www.ilmalämpöpumput.com

4 NOISE CRITERIA CURVES

MUZ-GA25VA -E1
MUZ-GA25VAH -E1

FUNCTION	SPL(dB(A))	LINE
COOLING	46	●—●
HEATING	46	○—○

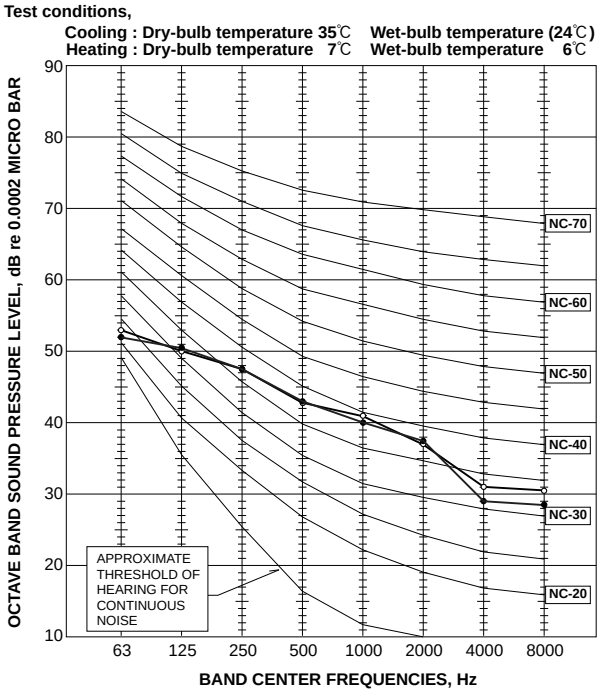

MUZ-GA35VA -E1
MUZ-GA35VAH -E1

FAN SPEED	FUNCTION	SPL(dB(A))	LINE
High Med.	COOLING	47	●—●
	HEATING	48	○—○

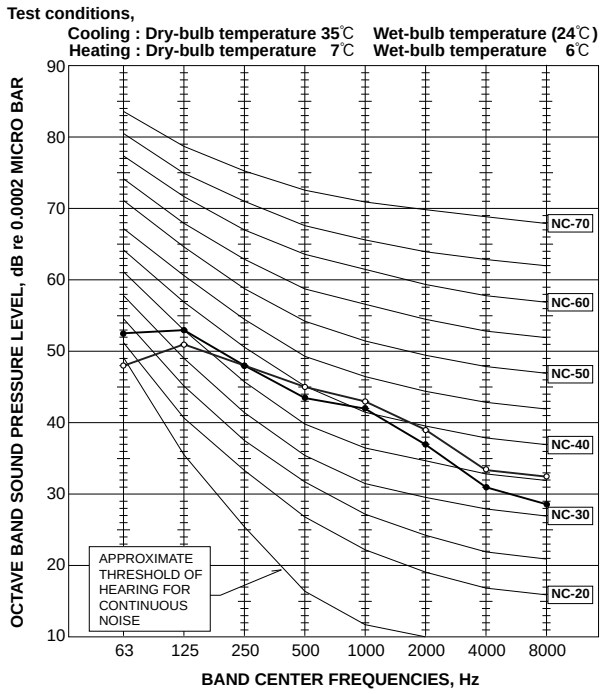

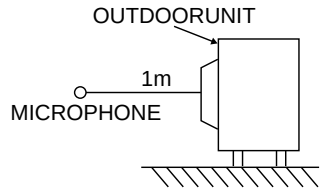

5 OUTLINES AND DIMENSIONS

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1

Unit: mm

OUTDOOR UNIT

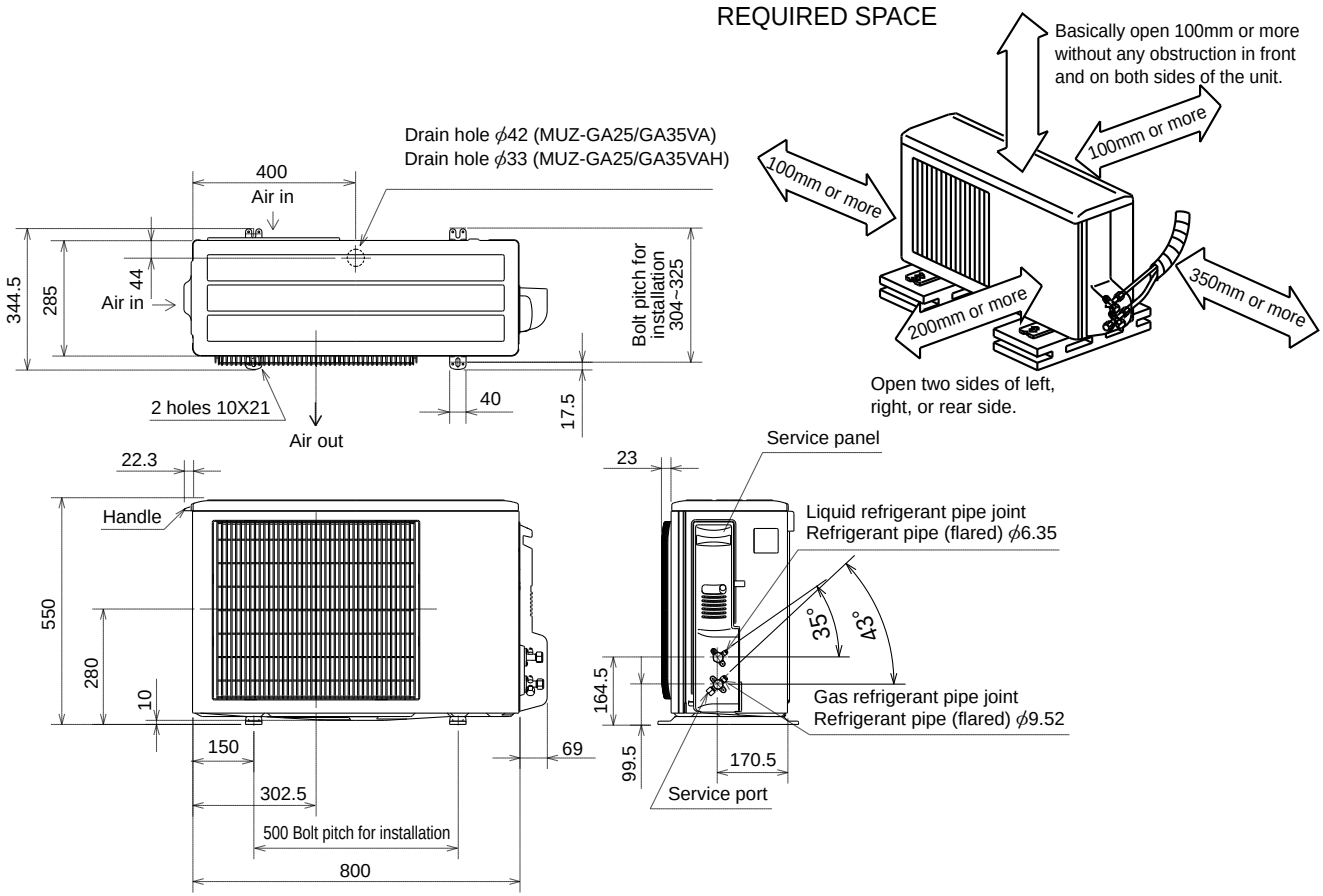

6 WIRING DIAGRAM

MUZ-GA25VA -E1 MODEL WIRING DIAGRAM

OUTDOOR UNIT

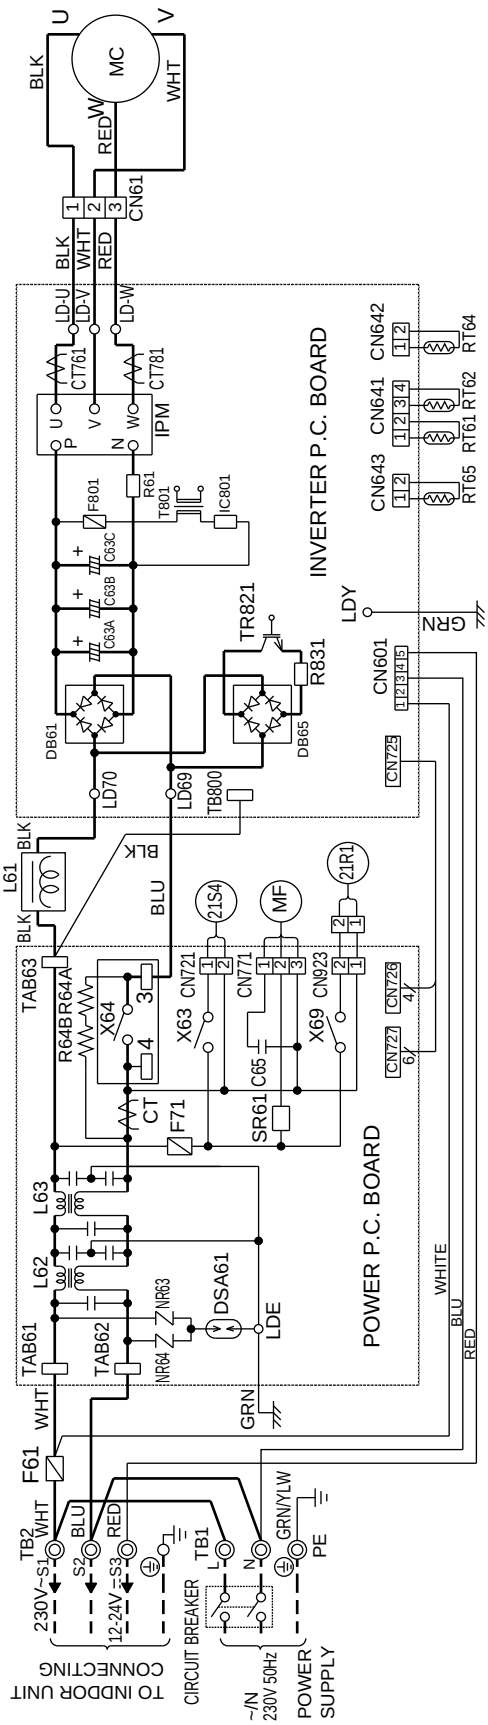

NOTE:1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for servicing.
2. Use copper conductors only. (For field wiring)
3. Symbols below indicate.
◎: Terminal block, □□□□: Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CT,CT761,CT781	CURRENT TRANSFORMER	L61	REACTOR	R61,R831	CURRENT-DETECTING RESISTOR
C63A,C63B,C63C	SMOOTHING CAPACITOR	L62,L63	CMC COIL	R64A,R64B	CURRENT-LIMITING RESISTOR
C65	OUTDOOR FAN CAPACITOR	MC	COMPRESSOR	SR61	SOLID STATE RELAY
DB61,DB65	DIODE MODULE	MF	OUTDOOR FAN MOTOR(INNER FUSE)	TB1,TB2	TERMINAL BLOCK
DSA61	SURGE ABSORBER	NR63,NR64	VARISTOR	TR821	SWITCHING POWER TRANSISTOR
F61	FUSE (T20AL250V)	RT61	DEFROST THERMISTOR	T801	TRANSFORMER
F71,F801	FUSE (T3.15AL250V)	RT62	DISCHARGE TEMPERATURE THERMISTOR	X63,X64,X69	RELAY
IC801	INTELLIGENT POWER DEVICE	RT64	FIN TEMPERATURE THERMISTOR	21S4	R.V. COIL
IPM	INTELLIGENT POWER MODULE	RT65	AMBIENT TEMPERATURE THERMISTOR	21R1	SOLENOID VALVE COIL

MUZ-GA25VAH -E1 MODEL WIRING DIAGRAM

OUTDOOR UNIT

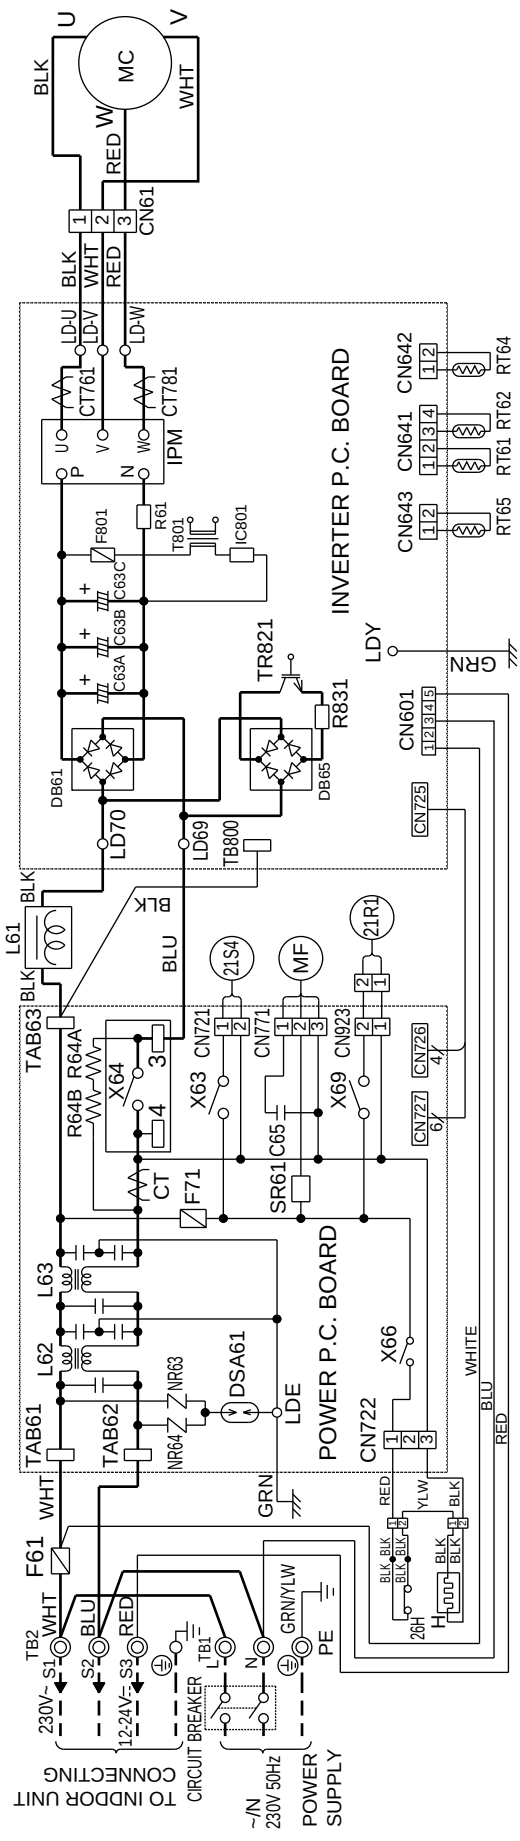

NOTE:1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for servicing.
2. Use copper conductors only. (For field wiring)
3. Symbols below indicate.
◎: Terminal block, □□□□: Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CT,CT761,CT781	CURRENT TRANSFORMER	L61	REACTOR	R64A,R64B	CURRENT-LIMITING RESISTOR
C63A,C63B,C63C	SMOOTHING CAPACITOR	L62,L63	CMC COIL	SR61	SOLID STATE RELAY
C65	OUTDOOR FAN CAPACITOR	MC	COMPRESSOR	TB1,TB2	TERMINAL BLOCK
DB61,DB65	DIODE MODULE	MF	OUTDOOR FAN MOTOR(INNER FUSE)	TR821	SWITCHING POWER TRANSISTOR
DSA61	SURGE ABSORBER	NR63,NR64	VARISTOR	T801	TRANSFORMER
F61	FUSE (T20AL250V)	RT61	DEFROST THERMISTOR	X63,X64,X66,X69	RELAY
F71,F801	FUSE (T3.15AL250V)	RT62	DISCHARGE TEMPERATURE THERMISTOR	21S4	R.V. COIL
H	DEFROST HEATER	RT64	FIN TEMPERATURE THERMISTOR	21R1	SOLENOID VALVE COIL
IC801	INTELLIGENT POWER DEVICE	RT65	AMBIENT TEMPERATURE THERMISTOR	26H	HEATER PROTECTOR
IPM	INTELLIGENT POWER MODULE	R61,R831	CURRENT-DETECTING RESISTOR		

MUZ-GA35VA -E1 MODEL WIRING DIAGRAM

OUTDOOR UNIT

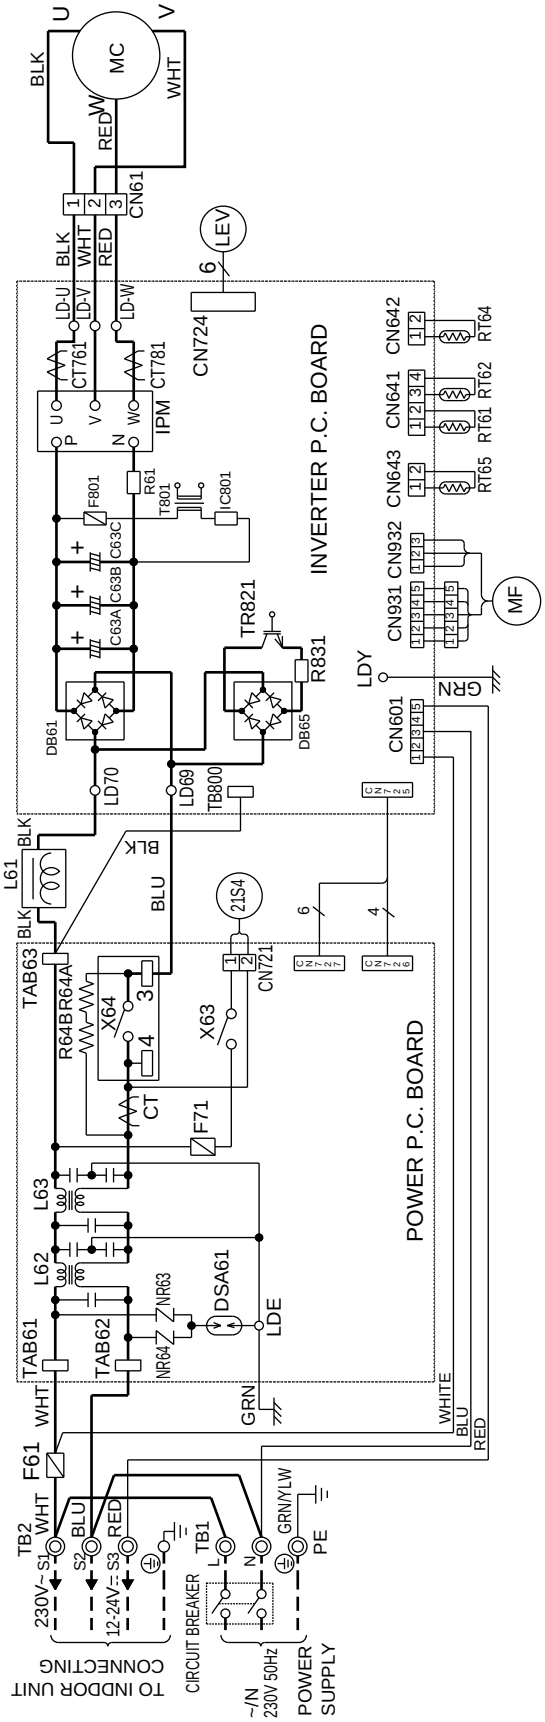

NOTE:1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for servicing.
2. Use copper conductors only. (For field wiring)
3. Symbols below indicate.
◎: Terminal block, □□□□: Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CT,CT761,CT781	CURRENT TRANSFORMER	L61	REACTOR	R61,R831	CURRENT-DETECTING RESISTOR
C63A,C63B,C63C	SMOOTHING CAPACITOR	L62,L63	CMC COIL	R64A,R64B	CURRENT-LIMITING RESISTOR
DB61,DB65	DIODE MODULE	MC	COMPRESSOR	TB1,TB2	TERMINAL BLOCK
DSA61	SURGE ABSORBER	MF	OUTDOOR FAN MOTOR	TR821	SWITCHING POWER TRANSISTOR
F61	FUSE (T20AL250V)	NR63,NR64	VARISTOR	T801	TRANSFORMER
F71,F801	FUSE (T3.15AL250V)	RT61	DEFROST THERMISTOR	X63,X64	RELAY
IC801	INTELLIGENT POWER DEVICE	RT62	DISCHARGE TEMPERATURE THERMISTOR	21S4	R.V. COIL
IPM	INTELLIGENT POWER MODULE	RT64	FIN TEMPERATURE THERMISTOR		
LEV	EXPANSION VALVE COIL	RT65	AMBIENT TEMPERATURE THERMISTOR		

MUZ-GA35VAH -E1 MODEL WIRING DIAGRAM

OUTDOOR UNIT

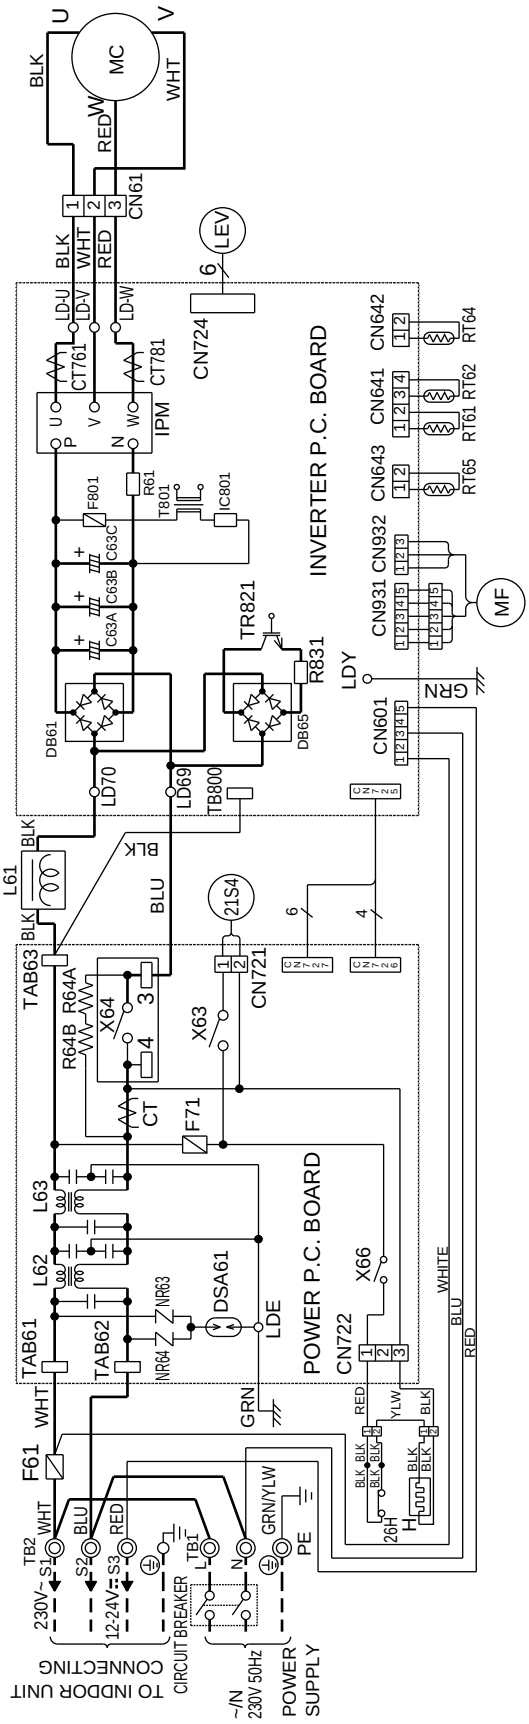

NOTE:1. About the indoor side electric wiring refer to the indoor unit electric wiring diagram for servicing.
2. Use copper conductors only. (For field wiring)
3. Symbols below indicate.
◎: Terminal block, □□□□: Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CT,CT761,CT781	CURRENT TRANSFORMER	L61	REACTOR	R64A,R64B	CURRENT-LIMITING RESISTOR
C63A,C63B,C63C	SMOOTHING CAPACITOR	L62,L63	CMC COIL	TB1,TB2	TERMINAL BLOCK
DB61,DB65	DIODE MODULE	MC	COMPRESSOR	TR821	SWITCHING POWER TRANSISTOR
DSA61	SURGE ABSORBER	MF	OUTDOOR FAN MOTOR	T801	TRANSFORMER
F61	FUSE (T20AL250V)	NR63,NR64	VARISTOR	X63,X64,X66	RELAY
F71,F801	FUSE (T3.15AL250V)	RT61	DEFROST THERMISTOR	21S4	R.V. COIL
H	DEFROST HEATER	RT62	DISCHARGE TEMPERATURE THERMISTOR	26H	HEATER PROTECTOR
IC801	INTELLIGENT POWER DEVICE	RT64	FIN TEMPERATURE THERMISTOR		
IPM	INTELLIGENT POWER MODULE	RT65	AMBIENT TEMPERATURE THERMISTOR		
LEV	EXPANSION VALVE COIL	R61,R831	CURRENT-DETECTING RESISTOR		

7 REFRIGERANT SYSTEM DIAGRAM

MUZ-GA25VA -E1
MUZ-GA25VAH -E1

Unit:mm

OUTDOOR UNIT

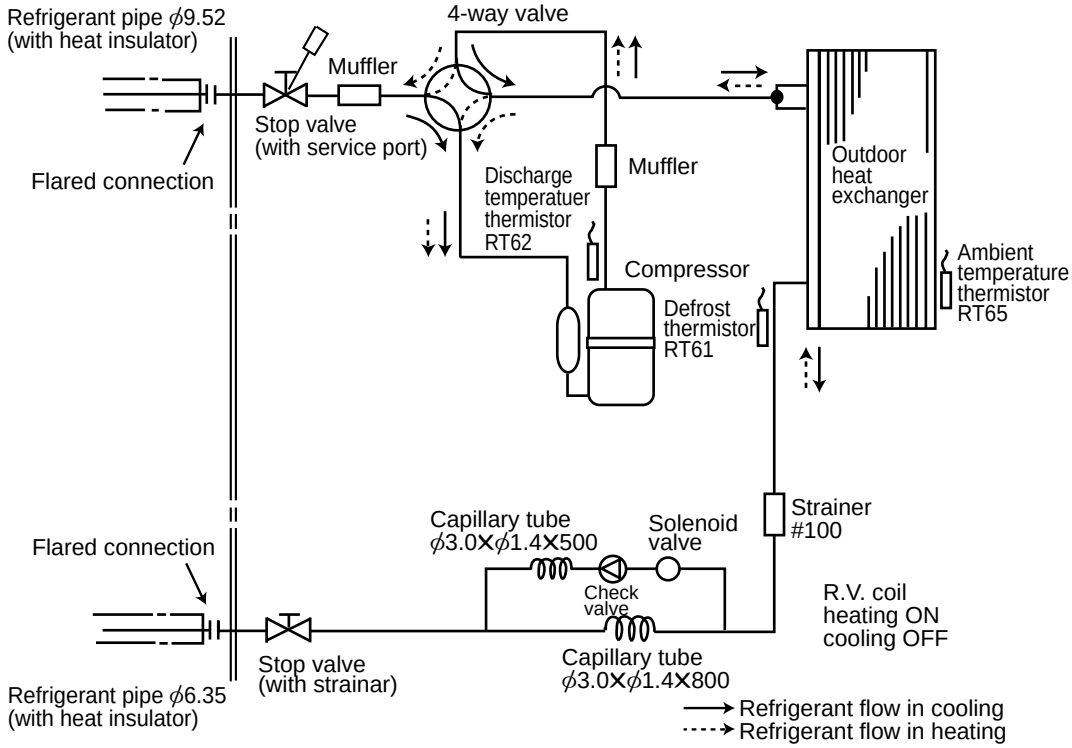

MUZ-GA35VA -E1
MUZ-GA35VAH -E1

Unit:mm

OUTDOOR UNIT

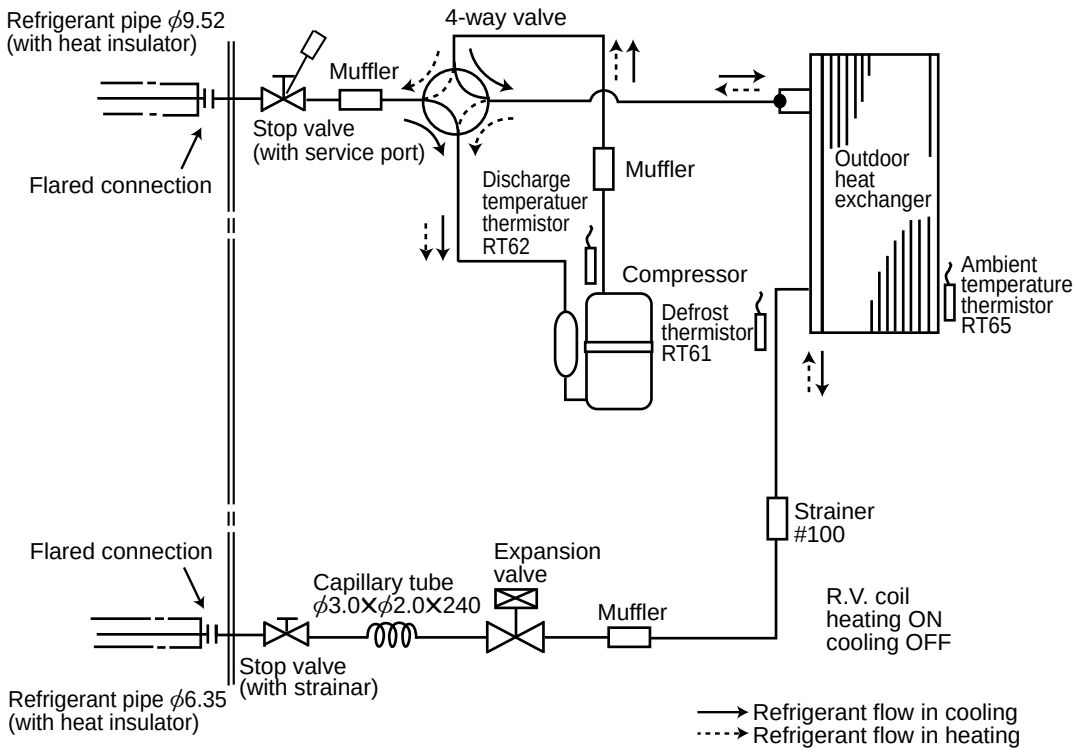

www.ilmalämpöpumput.com

MAX. REFRIGERANT PIPING LENGTH

Model	Refrigerant piping Max. length : m A	Piping size O.D : mm		Length of connecting pipe : m	
		Gas	Liquid	Indoor unit	Outdoor unit
MUZ-GA25VA - E1 **MUZ-GA25VAH -** E1 **MUZ-GA35VA -** E1 **MUZ-GA35VAH -** E1	20	9.52	6.35	Gas 0.43 Liquid 0.5	———

MAX. HEIGHT DIFFERENCE

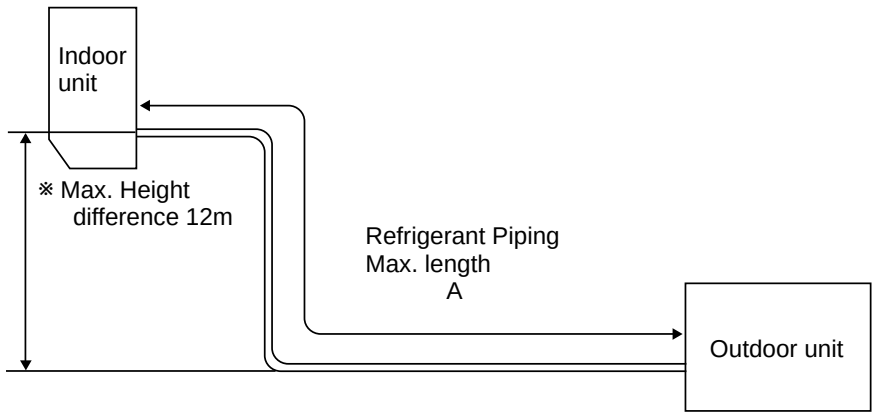

※ Height difference should be within 12m regardless of which unit, indoor or outdoor position is high.

ADDITIONAL REFRIGERANT CHARGE (R410A:g)

Model	Outdoor unit precharged	Refrigerant piping length (one way)											
		5m	6m	7m	8m	9m	10m	11m	12m	13m	14m	15m	20m
MUZ-GA25VA - E1 **MUZ-GA25VAH -** E1	850	0	0	0	90	120	150	180	210	240	270	300	450
MUZ-GA35VA - E1 **MUZ-GA35VAH -** E1	900	0	0	0	90	120	150	180	210	240	270	300	450

Calculation : Xg=30g/m×(Refrigerant piping length(m) - 5)

www.ilmalämpöpumput.com

8 PERFORMANCE CURVES

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1

The standard data contained in these specifications apply only to the operation of the air conditioner under normal conditions. Since operating conditions vary according to the areas where these units are installed. The following information has been provided to clarify the operating characteristics of the air conditioner under the conditions indicated by the performance curve.

(1) GUARANTEED VOLTAGE

207 ~ 253V, 50Hz

(2) AIR FLOW

Air flow should be set at MAX.

(3) MAIN READINGS

(1) Indoor intake air wet-bulb temperature :	°C WB	Cooling
(2) Indoor outlet air wet-bulb temperature :	°C WB	
(3) Outdoor intake air dry-bulb temperature :	°C DB	
(4) Total input:	W	
(5) Indoor intake air dry-bulb temperature :	°C DB	Heating
(6) Outdoor intake air wet-bulb temperature :	°C WB	
(7) Total input :	W	

Indoor air wet/dry-bulb temperature difference on the left side of the chart on next page shows the difference between the indoor intake air wet/dry-bulb temperature and the indoor outlet air wet/dry-bulb temperature for your reference at service.

How to measure the indoor air wet-bulb / dry-bulb temperature difference

1. Attach at least 2 sets of wet and dry-bulb thermometers to the indoor air intake as shown in the figure, and at least 2 sets of wet and dry-bulb thermometers to the indoor air outlet. The thermometers must be attached to the position where air speed is high.
2. Attach at least 2 sets of wet and dry-bulb thermometers to the outdoor air intake. Cover the thermometers to prevent direct rays of the sun.
3. Check that the air filter is cleaned.
4. Open windows and doors of room.
5. Press the EMERGENCY OPERATION switch once (twice) to start the EMERGENCY COOL (HEAT) MODE.
6. When system stabilizes after more than 15 minutes, measure temperature and take an average temperature.
7. 10 minutes later, measure temperature again and check that the temperature does not change.

INDOOR UNIT

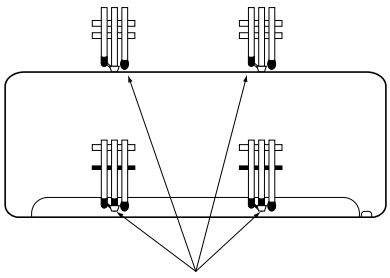

Wet and dry-bulb thermometers
FRONT VIEW

OUTDOOR UNIT

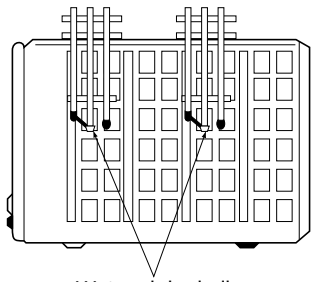

Wet and dry-bulb thermometers
BACK VIEW

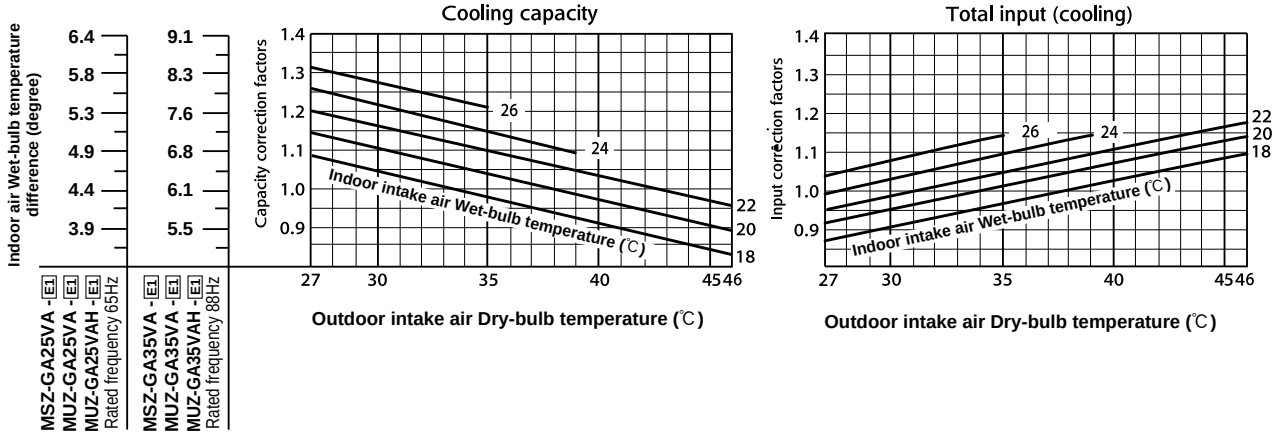

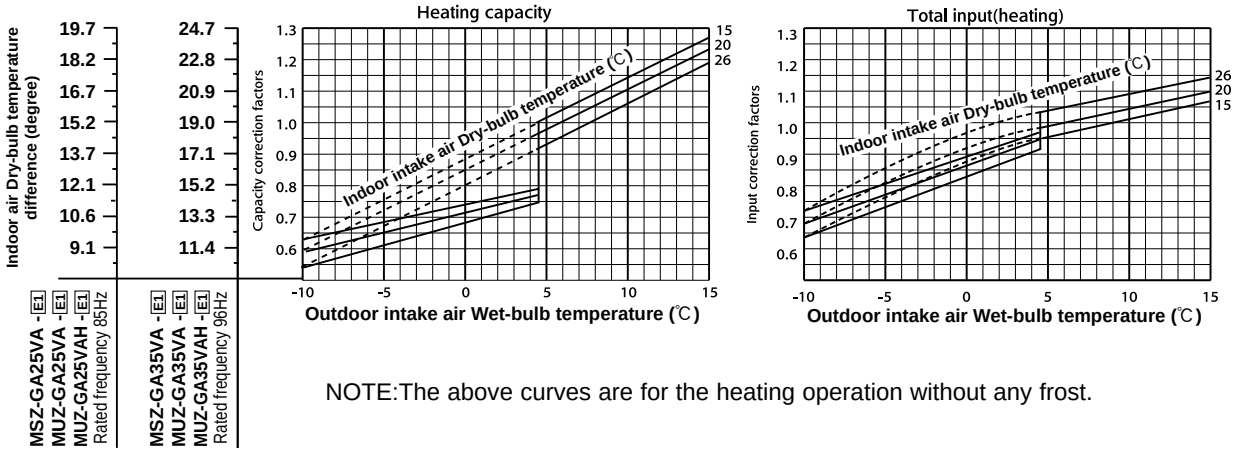

NOTE:The above curves are for the heating operation without any frost.

MUZ-GA25VA - E1
MUZ-GA25VAH - E1

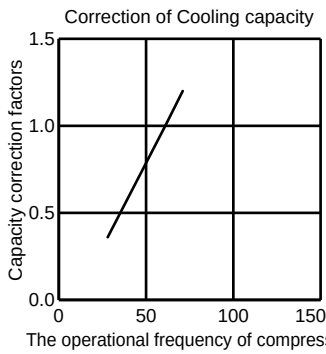

MUZ-GA25VA - E1
MUZ-GA25VAH - E1

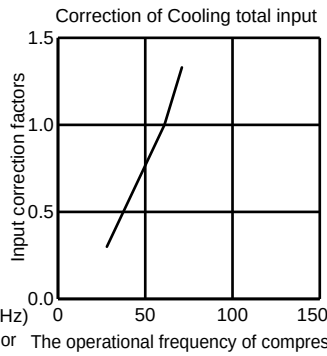

MUZ-GA25VA - E1
MUZ-GA25VAH - E1

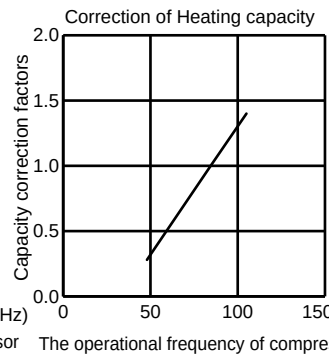

MUZ-GA25VA - E1
MUZ-GA25VAH - E1

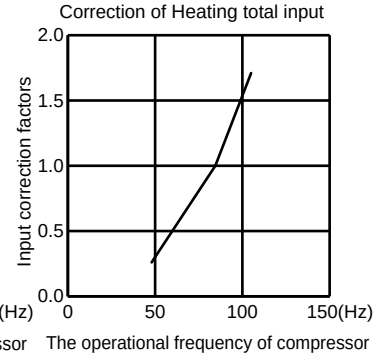

MUZ-GA35VA - E1
MUZ-GA35VAH - E1

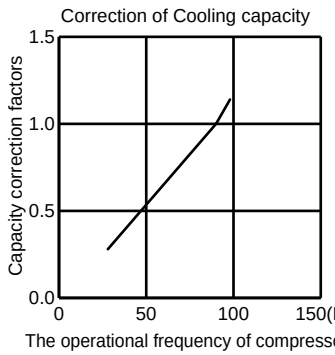

MUZ-GA35VA - E1
MUZ-GA35VAH - E1

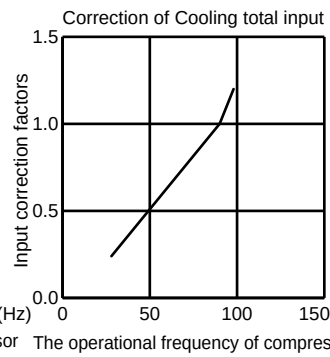

MUZ-GA35VA - E1
MUZ-GA35VAH - E1

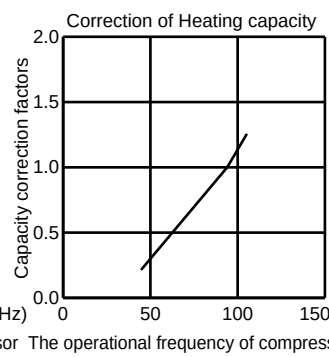

MUZ-GA35VA - E1
MUZ-GA35VAH - E1

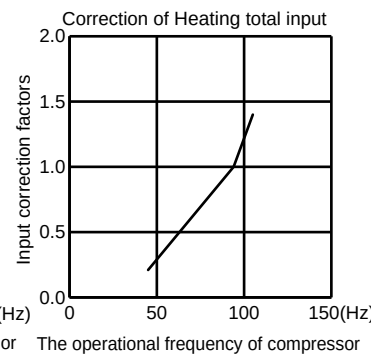

OUTDOOR LOW PRESSURE AND OUTDOOR UNIT CURRENT

<How to operate fixed-frequency operation (Test run operation)>
1. Press EMERGENCY OPERATION switch to COOL or HEAT mode (COOL : Press once, HEAT : Press twice).
2. Test run operation starts and continues to operate for 30 minutes.
3. Compressor operates at rated frequency in COOL mode or 58Hz in HEAT mode.
4. Indoor fan operates at High speed.
5. After 30 minutes, test run operation finishes and EMERGENCY OPERATION starts (Operation frequency of compressor varies).
6. To cancel test run operation (EMERGENCY OPERATION), press EMERGENCY OPERATION switch or any button on remote controller.

NOTE : The unit of pressure has been changed to MPa on the international system of units (SI unit system).
The conversion factor is: **1(MPa [Gauge]) =10.2(kgf/㎠ [Gauge])**

www.ilmalämpöpumput.com

OUTDOOR LOW PRESSURE AND OUTDOOR UNIT CURRENT

COOL operation

① Both indoor and outdoor unit are under the same temperature/humidity condition.
② Air flow : High speed
③ Operational frequency : 65Hz(MUZ-GA25VA, MUZ-GA25VAH)
88Hz(MUZ-GA35VA, MUZ-GA35VAH)

Dry-bulb temperature	Relative humidity(%)
20	50
25	60
30	70

MUZ-GA25VA - E1
MUZ-GA25VAH - E1

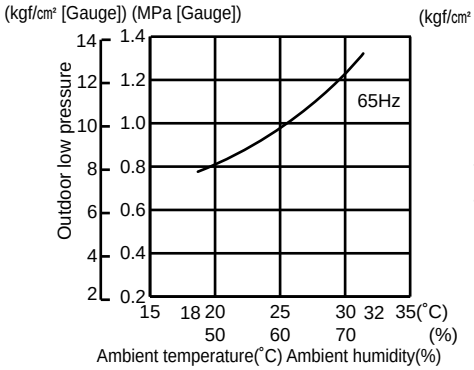

MUZ-GA35VA - E1
MUZ-GA35VAH - E1

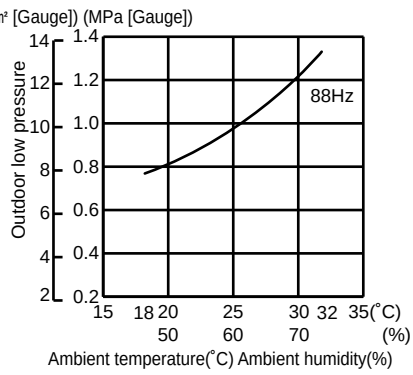

MUZ-GA25VA - E1
MUZ-GA25VAH - E1

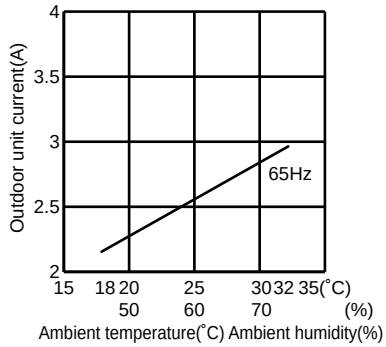

MUZ-GA35VA - E1
MUZ-GA35VAH - E1

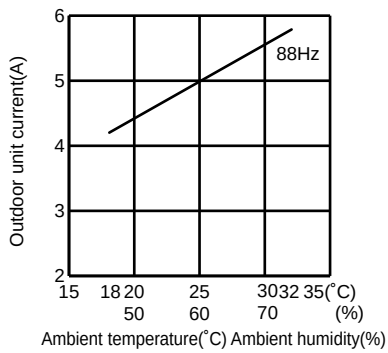

HEAT operation

Condition indoor: Dry bulb temperature 20.0°C
Wet bulb temperature 14.5°C
Condition outdoor: Dry bulb temperature 2,7,15,20.0°C
Wet bulb temperature 1,6,12,14.5°C

MUZ-GA25VA - E1
MUZ-GA25VAH - E1

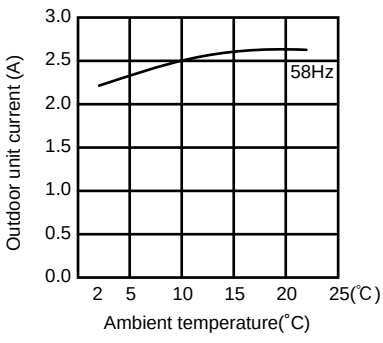

MUZ-GA35VA - E1
MUZ-GA35VAH - E1

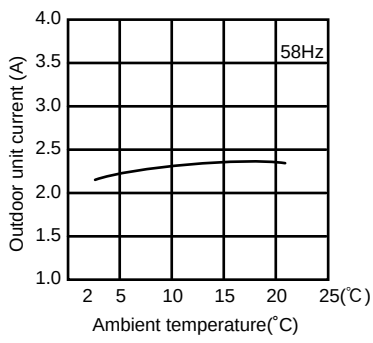

PERFORMANCE DATA COOL operation Rated frequency 65Hz

MSZ-GA25VA -E1 : MUZ-GA25VA -E1 MUZ-GA25VAH -E1

CAPACITY:2.5(kW) SHF:0.79 INPUT:640(W)

		OUTDOOR DB(℃)															
INDOOR DB(℃)	INDOOR WB(℃)	21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	2.94	1.79	0.61	512	2.81	1.72	0.61	538	2.70	1.65	0.61	563	2.60	1.59	0.61	589
21	20	3.06	1.50	0.49	538	2.94	1.44	0.49	570	2.85	1.40	0.49	582	2.75	1.35	0.49	608
22	18	2.94	1.91	0.65	512	2.81	1.83	0.65	538	2.70	1.76	0.65	563	2.60	1.69	0.65	589
22	20	3.06	1.62	0.53	538	2.94	1.56	0.53	570	2.85	1.51	0.53	582	2.75	1.46	0.53	608
22	22	3.19	1.31	0.41	557	3.08	1.26	0.41	592	3.00	1.23	0.41	608	2.88	1.18	0.41	634
23	18	2.94	2.03	0.69	512	2.81	1.94	0.69	538	2.70	1.86	0.69	563	2.60	1.79	0.69	589
23	20	3.06	1.75	0.57	538	2.94	1.67	0.57	570	2.85	1.62	0.57	582	2.75	1.57	0.57	608
23	22	3.19	1.43	0.45	557	3.08	1.38	0.45	592	3.00	1.35	0.45	608	2.88	1.29	0.45	634
24	18	2.94	2.14	0.73	512	2.81	2.05	0.73	538	2.70	1.97	0.73	563	2.60	1.90	0.73	589
24	20	3.06	1.87	0.61	538	2.94	1.79	0.61	570	2.85	1.74	0.61	582	2.75	1.68	0.61	608
24	22	3.19	1.56	0.49	557	3.08	1.51	0.49	592	3.00	1.47	0.49	608	2.88	1.41	0.49	634
24	24	3.35	1.24	0.37	582	3.23	1.19	0.37	614	3.15	1.17	0.37	634	3.05	1.13	0.37	666
25	18	2.94	2.26	0.77	512	2.81	2.17	0.77	538	2.70	2.08	0.77	563	2.60	2.00	0.77	589
25	20	3.06	1.99	0.65	538	2.94	1.91	0.65	570	2.85	1.85	0.65	582	2.75	1.79	0.65	608
25	22	3.19	1.69	0.53	557	3.08	1.63	0.53	592	3.00	1.59	0.53	608	2.88	1.52	0.53	634
25	24	3.35	1.37	0.41	582	3.23	1.32	0.41	614	3.15	1.29	0.41	634	3.05	1.25	0.41	666
26	18	2.94	2.38	0.81	512	2.81	2.28	0.81	538	2.70	2.19	0.81	563	2.60	2.11	0.81	589
26	20	3.06	2.11	0.69	538	2.94	2.03	0.69	570	2.85	1.97	0.69	582	2.75	1.90	0.69	608
26	22	3.19	1.82	0.57	557	3.08	1.75	0.57	592	3.00	1.71	0.57	608	2.88	1.64	0.57	634
26	24	3.35	1.51	0.45	582	3.23	1.45	0.45	614	3.15	1.42	0.45	634	3.05	1.37	0.45	666
26	26	3.45	1.14	0.33	614	3.35	1.11	0.33	646	3.30	1.09	0.33	666	3.20	1.06	0.33	685
27	18	2.94	2.50	0.85	512	2.81	2.39	0.85	538	2.70	2.30	0.85	563	2.60	2.21	0.85	589
27	20	3.06	2.24	0.73	538	2.94	2.14	0.73	570	2.85	2.08	0.73	582	2.75	2.01	0.73	608
27	22	3.19	1.94	0.61	557	3.08	1.88	0.61	592	3.00	1.83	0.61	608	2.88	1.75	0.61	634
27	24	3.35	1.64	0.49	582	3.23	1.58	0.49	614	3.15	1.54	0.49	634	3.05	1.49	0.49	666
27	26	3.45	1.28	0.37	614	3.35	1.24	0.37	646	3.30	1.22	0.37	666	3.20	1.18	0.37	685
28	18	2.94	2.61	0.89	512	2.81	2.50	0.89	538	2.70	2.40	0.89	563	2.60	2.31	0.89	589
28	20	3.06	2.36	0.77	538	2.94	2.26	0.77	570	2.85	2.19	0.77	582	2.75	2.12	0.77	608
28	22	3.19	2.07	0.65	557	3.08	2.00	0.65	592	3.00	1.95	0.65	608	2.88	1.87	0.65	634
28	24	3.35	1.78	0.53	582	3.23	1.71	0.53	614	3.15	1.67	0.53	634	3.05	1.62	0.53	666
28	26	3.45	1.41	0.41	614	3.35	1.37	0.41	646	3.30	1.35	0.41	666	3.20	1.31	0.41	685
29	18	2.94	2.73	0.93	512	2.81	2.62	0.93	538	2.70	2.51	0.93	563	2.60	2.42	0.93	589
29	20	3.06	2.48	0.81	538	2.94	2.38	0.81	570	2.85	2.31	0.81	582	2.75	2.23	0.81	608
29	22	3.19	2.20	0.69	557	3.08	2.12	0.69	592	3.00	2.07	0.69	608	2.88	1.98	0.69	634
29	24	3.35	1.91	0.57	582	3.23	1.84	0.57	614	3.15	1.80	0.57	634	3.05	1.74	0.57	666
29	26	3.45	1.55	0.45	614	3.35	1.51	0.45	646	3.30	1.49	0.45	666	3.20	1.44	0.45	685
30	18	2.94	2.85	0.97	512	2.81	2.73	0.97	538	2.70	2.62	0.97	563	2.60	2.52	0.97	589
30	20	3.06	2.60	0.85	538	2.94	2.50	0.85	570	2.85	2.42	0.85	582	2.75	2.34	0.85	608
30	22	3.19	2.33	0.73	557	3.08	2.24	0.73	592	3.00	2.19	0.73	608	2.88	2.10	0.73	634
30	24	3.35	2.04	0.61	582	3.23	1.97	0.61	614	3.15	1.92	0.61	634	3.05	1.86	0.61	666
30	26	3.45	1.69	0.49	614	3.35	1.64	0.49	646	3.30	1.62	0.49	666	3.20	1.57	0.49	685
31	18	2.94	2.97	1.01	512	2.81	2.84	1.01	538	2.70	2.73	1.01	563	2.60	2.63	1.01	589
31	20	3.06	2.73	0.89	538	2.94	2.61	0.89	570	2.85	2.54	0.89	582	2.75	2.45	0.89	608
31	22	3.19	2.45	0.77	557	3.08	2.37	0.77	592	3.00	2.31	0.77	608	2.88	2.21	0.77	634
31	24	3.35	2.18	0.65	582	3.23	2.10	0.65	614	3.15	2.05	0.65	634	3.05	1.98	0.65	666
31	26	3.45	1.83	0.53	614	3.35	1.78	0.53	646	3.30	1.75	0.53	666	3.20	1.70	0.53	685
32	18	2.94	3.08	1.05	512	2.81	2.95	1.05	538	2.70	2.84	1.05	563	2.60	2.73	1.05	589
32	20	3.06	2.85	0.93	538	2.94	2.73	0.93	570	2.85	2.65	0.93	582	2.75	2.56	0.93	608
32	22	3.19	2.58	0.81	557	3.08	2.49	0.81	592	3.00	2.43	0.81	608	2.88	2.33	0.81	634
32	24	3.35	2.31	0.69	582	3.23	2.23	0.69	614	3.15	2.17	0.69	634	3.05	2.10	0.69	666
32	26	3.45	1.97	0.57	614	3.35	1.91	0.57	646	3.30	1.88	0.57	666	3.20	1.82	0.57	685

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

www.ilmalämpöpumput.com

PERFORMANCE DATA COOL operation Rated frequency 65Hz

MSZ-GA25VA -E1 : MUZ-GA25VA -E1 MUZ-GA25VAH -E1

CAPACITY:2.5(kW) SHF:0.79 INPUT:640(W)

		OUTDOOR DB(℃)											
INDOOR DB (℃)	INDOOR WB (℃)	35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	2.45	1.49	0.61	627	2.25	1.37	0.61	666	2.08	1.27	0.61	691
21	20	2.58	1.26	0.49	653	2.40	1.18	0.49	685	2.23	1.09	0.49	723
22	18	2.45	1.59	0.65	627	2.25	1.46	0.65	666	2.08	1.35	0.65	691
22	20	2.58	1.36	0.53	653	2.40	1.27	0.53	685	2.23	1.18	0.53	723
22	22	2.73	1.12	0.41	678	2.55	1.05	0.41	717	2.38	0.97	0.41	742
23	18	2.45	1.69	0.69	627	2.25	1.55	0.69	666	2.08	1.43	0.69	691
23	20	2.58	1.47	0.57	653	2.40	1.37	0.57	685	2.23	1.27	0.57	723
23	22	2.73	1.23	0.45	678	2.55	1.15	0.45	717	2.38	1.07	0.45	742
24	18	2.45	1.79	0.73	627	2.25	1.64	0.73	666	2.08	1.51	0.73	691
24	20	2.58	1.57	0.61	653	2.40	1.46	0.61	685	2.23	1.36	0.61	723
24	22	2.73	1.34	0.49	678	2.55	1.25	0.49	717	2.38	1.16	0.49	742
24	24	2.88	1.06	0.37	704	2.70	1.00	0.37	736	2.55	0.94	0.37	768
25	18	2.45	1.89	0.77	627	2.25	1.73	0.77	666	2.08	1.60	0.77	691
25	20	2.58	1.67	0.65	653	2.40	1.56	0.65	685	2.23	1.45	0.65	723
25	22	2.73	1.44	0.53	678	2.55	1.35	0.53	717	2.38	1.26	0.53	742
25	24	2.88	1.18	0.41	704	2.70	1.11	0.41	736	2.55	1.05	0.41	768
26	18	2.45	1.98	0.81	627	2.25	1.82	0.81	666	2.08	1.68	0.81	691
26	20	2.58	1.78	0.69	653	2.40	1.66	0.69	685	2.23	1.54	0.69	723
26	22	2.73	1.55	0.57	678	2.55	1.45	0.57	717	2.38	1.35	0.57	742
26	24	2.88	1.29	0.45	704	2.70	1.22	0.45	736	2.55	1.15	0.45	768
26	26	3.03	1.00	0.33	730	2.85	0.94	0.33	762	2.68	0.88	0.33	794
27	18	2.45	2.08	0.85	627	2.25	1.91	0.85	666	2.08	1.76	0.85	691
27	20	2.58	1.88	0.73	653	2.40	1.75	0.73	685	2.23	1.62	0.73	723
27	22	2.73	1.66	0.61	678	2.55	1.56	0.61	717	2.38	1.45	0.61	742
27	24	2.88	1.41	0.49	704	2.70	1.32	0.49	736	2.55	1.25	0.49	768
27	26	3.03	1.12	0.37	730	2.85	1.05	0.37	762	2.68	0.99	0.37	794
28	18	2.45	2.18	0.89	627	2.25	2.00	0.89	666	2.08	1.85	0.89	691
28	20	2.58	1.98	0.77	653	2.40	1.85	0.77	685	2.23	1.71	0.77	723
28	22	2.73	1.77	0.65	678	2.55	1.66	0.65	717	2.38	1.54	0.65	742
28	24	2.88	1.52	0.53	704	2.70	1.43	0.53	736	2.55	1.35	0.53	768
28	26	3.03	1.24	0.41	730	2.85	1.17	0.41	762	2.68	1.10	0.41	794
29	18	2.45	2.28	0.93	627	2.25	2.09	0.93	666	2.08	1.93	0.93	691
29	20	2.58	2.09	0.81	653	2.40	1.94	0.81	685	2.23	1.80	0.81	723
29	22	2.73	1.88	0.69	678	2.55	1.76	0.69	717	2.38	1.64	0.69	742
29	24	2.88	1.64	0.57	704	2.70	1.54	0.57	736	2.55	1.45	0.57	768
29	26	3.03	1.36	0.45	730	2.85	1.28	0.45	762	2.68	1.20	0.45	794
30	18	2.45	2.38	0.97	627	2.25	2.18	0.97	666	2.08	2.01	0.97	691
30	20	2.58	2.19	0.85	653	2.40	2.04	0.85	685	2.23	1.89	0.85	723
30	22	2.73	1.99	0.73	678	2.55	1.86	0.73	717	2.38	1.73	0.73	742
30	24	2.88	1.75	0.61	704	2.70	1.65	0.61	736	2.55	1.56	0.61	768
30	26	3.03	1.48	0.49	730	2.85	1.40	0.49	762	2.68	1.31	0.49	794
31	18	2.45	2.47	1.01	627	2.25	2.27	1.01	666	2.08	2.10	1.01	691
31	20	2.58	2.29	0.89	653	2.40	2.14	0.89	685	2.23	1.98	0.89	723
31	22	2.73	2.10	0.77	678	2.55	1.96	0.77	717	2.38	1.83	0.77	742
31	24	2.88	1.87	0.65	704	2.70	1.76	0.65	736	2.55	1.66	0.65	768
31	26	3.03	1.60	0.53	730	2.85	1.51	0.53	762	2.68	1.42	0.53	794
32	18	2.45	2.57	1.05	627	2.25	2.36	1.05	666	2.08	2.18	1.05	691
32	20	2.58	2.39	0.93	653	2.40	2.23	0.93	685	2.23	2.07	0.93	723
32	22	2.73	2.21	0.81	678	2.55	2.07	0.81	717	2.38	1.92	0.81	742
32	24	2.88	1.98	0.69	704	2.70	1.86	0.69	736	2.55	1.76	0.69	768
32	26	3.03	1.72	0.57	730	2.85	1.62	0.57	762	2.68	1.52	0.57	794

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

www.ilmalämpöpumput.com

PERFORMANCE DATA COOL operation Rated frequency 88Hz

MSZ-GA35VA -E1 : MUZ-GA35VA -E1 MUZ-GA35VAH -E1

CAPACITY:3.5(kW) SHF:0.76 INPUT:1080(W)

		OUTDOOR DB(℃)															
INDOOR DB(℃)	INDOOR WB(℃)	21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	4.11	2.39	0.58	864	3.94	2.28	0.58	907	3.78	2.19	0.58	950	3.64	2.11	0.58	994
21	20	4.29	1.97	0.46	907	4.11	1.89	0.46	961	3.99	1.84	0.46	983	3.85	1.77	0.46	1026
22	18	4.11	2.55	0.62	864	3.94	2.44	0.62	907	3.78	2.34	0.62	950	3.64	2.26	0.62	994
22	20	4.29	2.14	0.50	907	4.11	2.06	0.50	961	3.99	2.00	0.50	983	3.85	1.93	0.50	1026
22	22	4.46	1.70	0.38	940	4.31	1.64	0.38	999	4.20	1.60	0.38	1026	4.03	1.53	0.38	1069
23	18	4.11	2.71	0.66	864	3.94	2.60	0.66	907	3.78	2.49	0.66	950	3.64	2.40	0.66	994
23	20	4.29	2.32	0.54	907	4.11	2.22	0.54	961	3.99	2.15	0.54	983	3.85	2.08	0.54	1026
23	22	4.46	1.87	0.42	940	4.31	1.81	0.42	999	4.20	1.76	0.42	1026	4.03	1.69	0.42	1069
24	18	4.11	2.88	0.70	864	3.94	2.76	0.70	907	3.78	2.65	0.70	950	3.64	2.55	0.70	994
24	20	4.29	2.49	0.58	907	4.11	2.39	0.58	961	3.99	2.31	0.58	983	3.85	2.23	0.58	1026
24	22	4.46	2.05	0.46	940	4.31	1.98	0.46	999	4.20	1.93	0.46	1026	4.03	1.85	0.46	1069
24	24	4.69	1.59	0.34	983	4.52	1.54	0.34	1037	4.41	1.50	0.34	1069	4.27	1.45	0.34	1123
25	18	4.11	3.04	0.74	864	3.94	2.91	0.74	907	3.78	2.80	0.74	950	3.64	2.69	0.74	994
25	20	4.29	2.66	0.62	907	4.11	2.55	0.62	961	3.99	2.47	0.62	983	3.85	2.39	0.62	1026
25	22	4.46	2.23	0.50	940	4.31	2.15	0.50	999	4.20	2.10	0.50	1026	4.03	2.01	0.50	1069
25	24	4.69	1.78	0.38	983	4.52	1.72	0.38	1037	4.41	1.68	0.38	1069	4.27	1.62	0.38	1123
26	18	4.11	3.21	0.78	864	3.94	3.07	0.78	907	3.78	2.95	0.78	950	3.64	2.84	0.78	994
26	20	4.29	2.83	0.66	907	4.11	2.71	0.66	961	3.99	2.63	0.66	983	3.85	2.54	0.66	1026
26	22	4.46	2.41	0.54	940	4.31	2.32	0.54	999	4.20	2.27	0.54	1026	4.03	2.17	0.54	1069
26	24	4.69	1.97	0.42	983	4.52	1.90	0.42	1037	4.41	1.85	0.42	1069	4.27	1.79	0.42	1123
26	26	4.83	1.45	0.30	1037	4.69	1.41	0.30	1091	4.62	1.39	0.30	1123	4.48	1.34	0.30	1156
27	18	4.11	3.37	0.82	864	3.94	3.23	0.82	907	3.78	3.10	0.82	950	3.64	2.98	0.82	994
27	20	4.29	3.00	0.70	907	4.11	2.88	0.70	961	3.99	2.79	0.70	983	3.85	2.70	0.70	1026
27	22	4.46	2.59	0.58	940	4.31	2.50	0.58	999	4.20	2.44	0.58	1026	4.03	2.33	0.58	1069
27	24	4.69	2.16	0.46	983	4.52	2.08	0.46	1037	4.41	2.03	0.46	1069	4.27	1.96	0.46	1123
27	26	4.83	1.64	0.34	1037	4.69	1.59	0.34	1091	4.62	1.57	0.34	1123	4.48	1.52	0.34	1156
28	18	4.11	3.54	0.86	864	3.94	3.39	0.86	907	3.78	3.25	0.86	950	3.64	3.13	0.86	994
28	20	4.29	3.17	0.74	907	4.11	3.04	0.74	961	3.99	2.95	0.74	983	3.85	2.85	0.74	1026
28	22	4.46	2.77	0.62	940	4.31	2.67	0.62	999	4.20	2.60	0.62	1026	4.03	2.50	0.62	1069
28	24	4.69	2.35	0.50	983	4.52	2.26	0.50	1037	4.41	2.21	0.50	1069	4.27	2.14	0.50	1123
28	26	4.83	1.84	0.38	1037	4.69	1.78	0.38	1091	4.62	1.76	0.38	1123	4.48	1.70	0.38	1156
29	18	4.11	3.70	0.90	864	3.94	3.54	0.90	907	3.78	3.40	0.90	950	3.64	3.28	0.90	994
29	20	4.29	3.34	0.78	907	4.11	3.21	0.78	961	3.99	3.11	0.78	983	3.85	3.00	0.78	1026
29	22	4.46	2.95	0.66	940	4.31	2.84	0.66	999	4.20	2.77	0.66	1026	4.03	2.66	0.66	1069
29	24	4.69	2.53	0.54	983	4.52	2.44	0.54	1037	4.41	2.38	0.54	1069	4.27	2.31	0.54	1123
29	26	4.83	2.03	0.42	1037	4.69	1.97	0.42	1091	4.62	1.94	0.42	1123	4.48	1.88	0.42	1156
30	18	4.11	3.87	0.94	864	3.94	3.70	0.94	907	3.78	3.55	0.94	950	3.64	3.42	0.94	994
30	20	4.29	3.52	0.82	907	4.11	3.37	0.82	961	3.99	3.27	0.82	983	3.85	3.16	0.82	1026
30	22	4.46	3.12	0.70	940	4.31	3.01	0.70	999	4.20	2.94	0.70	1026	4.03	2.82	0.70	1069
30	24	4.69	2.72	0.58	983	4.52	2.62	0.58	1037	4.41	2.56	0.58	1069	4.27	2.48	0.58	1123
30	26	4.83	2.22	0.46	1037	4.69	2.16	0.46	1091	4.62	2.13	0.46	1123	4.48	2.06	0.46	1156
31	18	4.11	4.03	0.98	864	3.94	3.86	0.98	907	3.78	3.70	0.98	950	3.64	3.57	0.98	994
31	20	4.29	3.69	0.86	907	4.11	3.54	0.86	961	3.99	3.43	0.86	983	3.85	3.31	0.86	1026
31	22	4.46	3.30	0.74	940	4.31	3.19	0.74	999	4.20	3.11	0.74	1026	4.03	2.98	0.74	1069
31	24	4.69	2.91	0.62	983	4.52	2.80	0.62	1037	4.41	2.73	0.62	1069	4.27	2.65	0.62	1123
31	26	4.83	2.42	0.50	1037	4.69	2.35	0.50	1091	4.62	2.31	0.50	1123	4.48	2.24	0.50	1156
32	18	4.11	4.19	1.02	864	3.94	4.02	1.02	907	3.78	3.86	1.02	950	3.64	3.71	1.02	994
32	20	4.29	3.86	0.90	907	4.11	3.70	0.90	961	3.99	3.59	0.90	983	3.85	3.47	0.90	1026
32	22	4.46	3.48	0.78	940	4.31	3.36	0.78	999	4.20	3.28	0.78	1026	4.03	3.14	0.78	1069
32	24	4.69	3.10	0.66	983	4.52	2.98	0.66	1037	4.41	2.91	0.66	1069	4.27	2.82	0.66	1123
32	26	4.83	2.61	0.54	1037	4.69	2.53	0.54	1091	4.62	2.49	0.54	1123	4.48	2.42	0.54	1156

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

www.ilmalämpöpumput.com

PERFORMANCE DATA COOL operation Rated frequency 88Hz

MSZ-GA35VA -E1 : MUZ-GA35VA -E1 MUZ-GA35VAH -E1

CAPACITY:3.5(kW) SHF:0.76 INPUT:1080(W)

		OUTDOOR DB(℃)											
INDOOR DB (℃)	INDOOR WB (℃)	35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	3.43	1.99	0.58	1058	3.15	1.83	0.58	1123	2.91	1.68	0.58	1166
21	20	3.61	1.66	0.46	1102	3.36	1.55	0.46	1156	3.12	1.43	0.46	1220
22	18	3.43	2.13	0.62	1058	3.15	1.95	0.62	1123	2.91	1.80	0.62	1166
22	20	3.61	1.80	0.50	1102	3.36	1.68	0.50	1156	3.12	1.56	0.50	1220
22	22	3.82	1.45	0.38	1145	3.57	1.36	0.38	1210	3.33	1.26	0.38	1253
23	18	3.43	2.26	0.66	1058	3.15	2.08	0.66	1123	2.91	1.92	0.66	1166
23	20	3.61	1.95	0.54	1102	3.36	1.81	0.54	1156	3.12	1.68	0.54	1220
23	22	3.82	1.60	0.42	1145	3.57	1.50	0.42	1210	3.33	1.40	0.42	1253
24	18	3.43	2.40	0.70	1058	3.15	2.21	0.70	1123	2.91	2.03	0.70	1166
24	20	3.61	2.09	0.58	1102	3.36	1.95	0.58	1156	3.12	1.81	0.58	1220
24	22	3.82	1.75	0.46	1145	3.57	1.64	0.46	1210	3.33	1.53	0.46	1253
24	24	4.03	1.37	0.34	1188	3.78	1.29	0.34	1242	3.57	1.21	0.34	1296
25	18	3.43	2.54	0.74	1058	3.15	2.33	0.74	1123	2.91	2.15	0.74	1166
25	20	3.61	2.24	0.62	1102	3.36	2.08	0.62	1156	3.12	1.93	0.62	1220
25	22	3.82	1.91	0.50	1145	3.57	1.79	0.50	1210	3.33	1.66	0.50	1253
25	24	4.03	1.53	0.38	1188	3.78	1.44	0.38	1242	3.57	1.36	0.38	1296
26	18	3.43	2.68	0.78	1058	3.15	2.46	0.78	1123	2.91	2.27	0.78	1166
26	20	3.61	2.38	0.66	1102	3.36	2.22	0.66	1156	3.12	2.06	0.66	1220
26	22	3.82	2.06	0.54	1145	3.57	1.93	0.54	1210	3.33	1.80	0.54	1253
26	24	4.03	1.69	0.42	1188	3.78	1.59	0.42	1242	3.57	1.50	0.42	1296
26	26	4.24	1.27	0.30	1231	3.99	1.20	0.30	1285	3.75	1.12	0.30	1339
27	18	3.43	2.81	0.82	1058	3.15	2.58	0.82	1123	2.91	2.38	0.82	1166
27	20	3.61	2.52	0.70	1102	3.36	2.35	0.70	1156	3.12	2.18	0.70	1220
27	22	3.82	2.21	0.58	1145	3.57	2.07	0.58	1210	3.33	1.93	0.58	1253
27	24	4.03	1.85	0.46	1188	3.78	1.74	0.46	1242	3.57	1.64	0.46	1296
27	26	4.24	1.44	0.34	1231	3.99	1.36	0.34	1285	3.75	1.27	0.34	1339
28	18	3.43	2.95	0.86	1058	3.15	2.71	0.86	1123	2.91	2.50	0.86	1166
28	20	3.61	2.67	0.74	1102	3.36	2.49	0.74	1156	3.12	2.31	0.74	1220
28	22	3.82	2.37	0.62	1145	3.57	2.21	0.62	1210	3.33	2.06	0.62	1253
28	24	4.03	2.01	0.50	1188	3.78	1.89	0.50	1242	3.57	1.79	0.50	1296
28	26	4.24	1.61	0.38	1231	3.99	1.52	0.38	1285	3.75	1.42	0.38	1339
29	18	3.43	3.09	0.90	1058	3.15	2.84	0.90	1123	2.91	2.61	0.90	1166
29	20	3.61	2.81	0.78	1102	3.36	2.62	0.78	1156	3.12	2.43	0.78	1220
29	22	3.82	2.52	0.66	1145	3.57	2.36	0.66	1210	3.33	2.19	0.66	1253
29	24	4.03	2.17	0.54	1188	3.78	2.04	0.54	1242	3.57	1.93	0.54	1296
29	26	4.24	1.78	0.42	1231	3.99	1.68	0.42	1285	3.75	1.57	0.42	1339
30	18	3.43	3.22	0.94	1058	3.15	2.96	0.94	1123	2.91	2.73	0.94	1166
30	20	3.61	2.96	0.82	1102	3.36	2.76	0.82	1156	3.12	2.55	0.82	1220
30	22	3.82	2.67	0.70	1145	3.57	2.50	0.70	1210	3.33	2.33	0.70	1253
30	24	4.03	2.33	0.58	1188	3.78	2.19	0.58	1242	3.57	2.07	0.58	1296
30	26	4.24	1.95	0.46	1231	3.99	1.84	0.46	1285	3.75	1.72	0.46	1339
31	18	3.43	3.36	0.98	1058	3.15	3.09	0.98	1123	2.91	2.85	0.98	1166
31	20	3.61	3.10	0.86	1102	3.36	2.89	0.86	1156	3.12	2.68	0.86	1220
31	22	3.82	2.82	0.74	1145	3.57	2.64	0.74	1210	3.33	2.46	0.74	1253
31	24	4.03	2.50	0.62	1188	3.78	2.34	0.62	1242	3.57	2.21	0.62	1296
31	26	4.24	2.12	0.50	1231	3.99	2.00	0.50	1285	3.75	1.87	0.50	1339
32	18	3.43	3.50	1.02	1058	3.15	3.21	1.02	1123	2.91	2.96	1.02	1166
32	20	3.61	3.24	0.90	1102	3.36	3.02	0.90	1156	3.12	2.80	0.90	1220
32	22	3.82	2.98	0.78	1145	3.57	2.78	0.78	1210	3.33	2.59	0.78	1253
32	24	4.03	2.66	0.66	1188	3.78	2.49	0.66	1242	3.57	2.36	0.66	1296
32	26	4.24	2.29	0.54	1231	3.99	2.15	0.54	1285	3.75	2.02	0.54	1339

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

www.ilmalämpöpumput.com

PERFORMANCE DATA HEAT operation

MSZ-GA25VA -E1 : MUZ-GA25VA -E1 MUZ-GA25VAH -E1 Rated frequency 85Hz

CAPACITY:3.2(kW) INPUT:760(W)

	OUTDOOR WB(℃)													
INDOOR DB(℃)	-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	2.02	494	2.43	593	2.85	669	3.26	722	3.68	768	4.06	790	4.48	806
21	1.92	532	2.30	631	2.72	699	3.10	752	3.52	790	3.90	813	4.30	844
26	1.73	570	2.14	669	2.53	737	2.94	790	3.36	828	3.74	851	4.16	874

NOTE Q:Total capacity (kW) INPUT:Total power input (W) DB : Dry-bulb temperature WB : Wet-bulb temperature

MSZ-GA35VA -E1 : MUZ-GA35VA -E1 MUZ-GA35VAH -E1 Rated frequency 96Hz

CAPACITY:4.0(kW) INPUT:1055(W)

	OUTDOOR WB(℃)													
INDOOR DB(℃)	-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	2.52	686	3.04	823	3.56	928	4.08	1002	4.60	1066	5.08	1097	5.60	1118
21	2.40	739	2.88	876	3.40	971	3.88	1044	4.40	1097	4.88	1129	5.38	1171
26	2.16	791	2.68	928	3.16	1023	3.68	1097	4.20	1150	4.68	1182	5.20	1213

NOTE Q:Total capacity (kW) INPUT:Total power input (W) DB : Dry-bulb temperature WB : Wet-bulb temperature

9 ACTUATOR CONTROL

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1

9-1. Outdoor fan motor control

The fan motor turns ON/OFF, interlocking with the compressor.
[ON] The fan motor turns ON 5 seconds before the compressor starts up.
[OFF] The fan motor turns OFF 15 seconds after the compressor has stopped running.

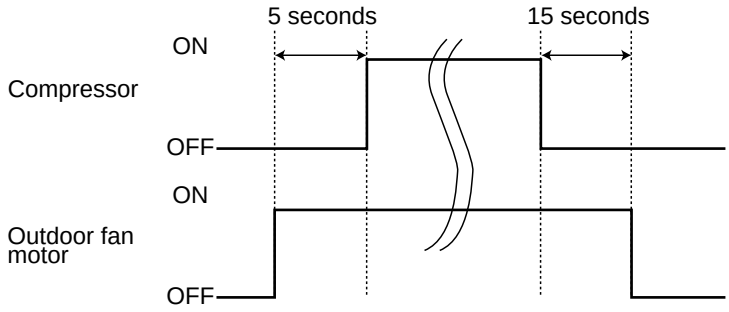

9-2. R.V. coil control

Heating · · · · · · · · · · · · · · · · ON
Cooling. . . . . OFF
Dry· · · · · · · · · · · · · · · · · · · OFF

NOTE: The 4-way valve reverses for 5 seconds right before start-up of the compressor.

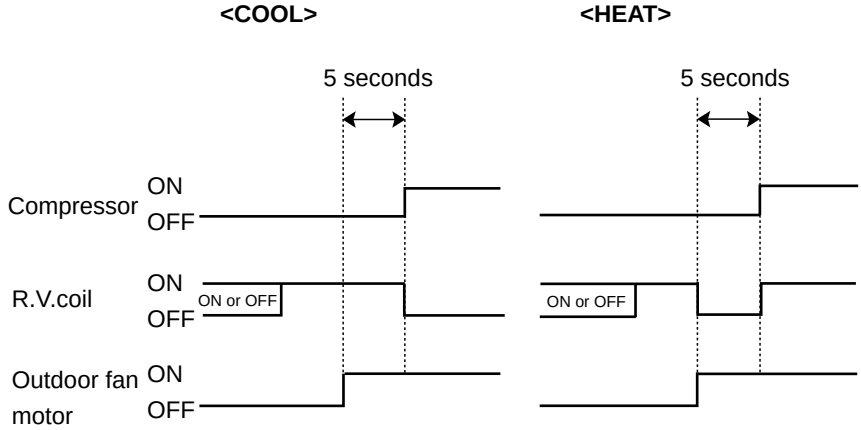

9-3. Relation between main sensor and actuator

Sensor	Purpose	Actuator						
		Compressor	LEV	Outdoor fan motor	R.V. coil	Indoor fan motor	Defrost heater	Solenoid valve
Discharge temperature thermistor	Protection	○	○ ※1					
Indoor coil temperature thermistor	Cooling : Coil frost prevention	○						
	Heating : High pressure protection	○	○ ※1					
Defrost thermistor	Cooling : High pressure protection	○	○ ※1					
	Heating : Defrosting	○	○ ※1	○	○	○		
Fin temperature thermistor	Protection	○		○ ※1				
Ambient temperature thermistor	Cooling : Low ambient temperature operation	○	○ ※1	○				○ ※2
	Heating : Defrosting (Heater)						○	

※1 MUZ-GA35VA
MUZ-GA35VAH

※2 MUZ-GA25VA
MUZ-GA25VAH

www.ilmalämpöpumput.com

10 SERVICE FUNCTIONS

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1

CHANGE IN DEFROST SETTING

<JS> When the JS wire of the outdoor Inverter P.C. board is cut/ soldered, the defrost finish temperature is changed.
(Refer to 11-7-1.)

Jumper wire		Defrost finish temperature			
		MUZ-GA25VA - E1	MUZ-GA25VAH - E1	MUZ-GA35VA - E1	MUZ-GA35VAH - E1
JS	soldered (Initial setting)	5℃	8℃	5℃	8℃
	none (cut)	8℃	15℃	8℃	15℃

11 TROUBLESHOOTING

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1

11-1. Cautions on troubleshooting

1. Before troubleshooting, check the following:

1) Check the power supply voltage.
2) Check the indoor/outdoor connecting wire for mis-wiring.

2. Take care the following during servicing.

1) Before servicing the air conditioner, be sure to turn off the main unit first with the remote controller, and then after confirming the horizontal vane is closed, turn off the breaker and / or disconnect the power plug.
2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the electronic control P.C. board.
3) When removing the electrical parts, be careful to the residual voltage of smoothing capacitor.
4) When removing the electronic control P.C. board, hold the edge of the board with care NOT to apply stress on the components.
5) When connecting or disconnecting the connectors, hold the housing of the connector. DO NOT pull the lead wires.

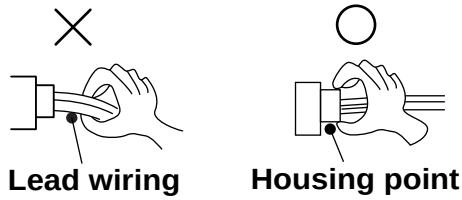

3. Troubleshooting procedure

1) First, check if the OPERATION INDICATOR lamp on the indoor unit is flashing on and off to indicate an abnormality. To make sure, check how many times the abnormality indication is flashing on and off before starting service work.
2) Before servicing check that the connector and terminal are connected properly.
3) If the electronic control P.C. board is supposed to be defective, check the copper foil pattern for disconnection and the components for bursting and discoloration.
4) When troubleshooting, refer to 11-2., 11-3. and 11-4.

www.ilmalämpöpumput.com

11-2. Failure mode recall function

Outline of the function

This air conditioner can memorize the abnormal condition which has occurred once.

Even though LED indication listed on the troubleshooting check table (11-4.) disappears, the memorized failure details can be recalled.

This mode is very useful when the unit needs to be repaired for the abnormality which doesn't recur.

1. Flow chart of the indoor/outdoor unit failure mode recall function

Operational procedure

The cause of abnormality cannot be found because the abnormality doesn't recur.

Setting up the failure mode recall function

Turn ON the power supply.
① While pressing both OPERATION SELECT button and TOO COOL button on the remote controller at the same time, press RESET button.
② First, release RESET button.
And release the other two buttons since all LCD in operation display section of the remote controller is displayed after 3 seconds.

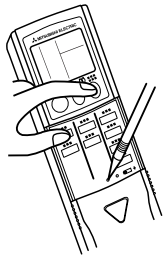

① While pressing both OPERATION SELECT button and TOO COOL button on the remote controller at the same time, press RESET button.
② First, release RESET button.
And release the other two buttons since all LCD in operation display section of the remote controller is displayed after 3 seconds.

※1
Press OPERATE/STOP (ON/OFF) button of the remote controller (the set temperature is displayed).
With the remote controller headed towards the indoor unit, press TOO COOL or TOO WARM button to adjust the set temperature to 24℃.

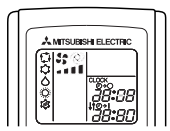

※1. Regardless of normal or abnormal, a short beep is emitted once as the signal is received.

Does the left lamp of OPERATION INDICATOR lamp on the indoor unit blink at the interval of 0.5 seconds?
Blinks: Either indoor or outdoor unit is abnormal.
Beep sounds are emitted at the same timing of the blinking of the left lamp of OPERATION INDICATOR lamp. ※2

No (OFF) → Indoor unit is normal.
There is a possibility that the outdoor unit is abnormal.
Confirm the presence of abnormality according to the flow chart of the detailed outdoor unit failure mode recall function.

Yes (Blinks)

Judgment of indoor/outdoor abnormality

Before blinking, does the left lamp of OPERATION INDICATOR lamp stay ON for 3 seconds?
Stays ON for 3 seconds (without beep): The outdoor unit is abnormal.

Yes →
The outdoor unit is abnormal.
Check the blinking pattern, and refer to confirm the abnormal point (11-2.3.).
Make sure to check at least two consecutive blinking cycles. ※3

No →
The indoor unit is abnormal.
Check the blinking pattern, and refer to confirm the abnormal point.
Make sure to check at least two consecutive blinking cycles. ※2

Releasing the failure mode recall function

Release the failure mode recall function by the following procedures.
①With the remote controller headed towards the indoor unit, press any button that is not used in this failure mode recall function (e.g. TIMER button) .
OR
①Turn OFF the power supply and turn ON it again.
②Press RESET button of the remote controller.

•As for indoor unit, refer to service manual OB378.

Repair the defective parts.

Deleting the abnormal condition

①After repairing the unit, recall the failure mode again according to "Setting up the failure mode recall function" mentioned above.
②Press EMERGENCY OPERATION switch so that the memorized abnormal condition is deleted.
③Release the failure mode recall function according to "Releasing the failure mode recall function" mentioned above.

Note1.Make sure to release the failure mode recall function once it's set up, otherwise the unit cannot operate properly.
2.If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

※2. Blinking pattern when the indoor unit is abnormal:

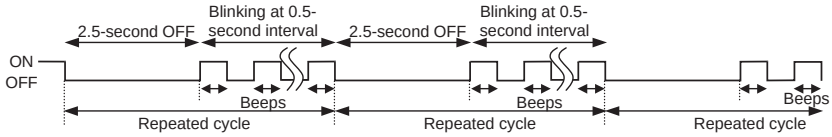

※3.Blinking pattern when the outdoor unit is abnormal:

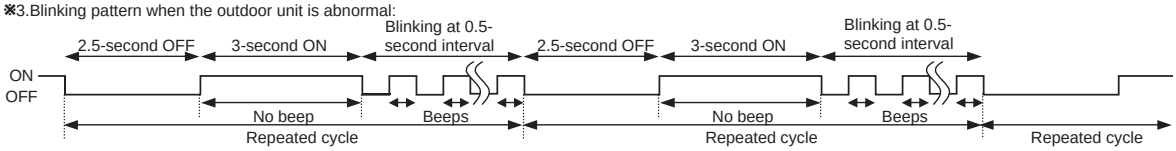

www.ilmalämpöpumput.com

2. Flow chart of the detailed outdoor unit failure mode recall function

Operational procedure

There is a possibility that the outdoor unit is abnormal.
Confirm the presence of abnormality according to the following procedures.

↓

Confirm that the remote controller is in the failure mode recall function.

↓

※1
With the remote controller headed towards the indoor unit, press TOO COOL or TOO WARM button to adjust the set temperature to 25℃.

※1. Regardless of normal or abnormal, 2 short beeps are emitted as the signal is received.

Confirmation of abnormality presence

↓

Does the left lamp of OPERATION INDICATOR lamp on the indoor unit blink at the interval of 0.5 seconds? ※2
Blinks: The outdoor unit is abnormal.
Beep sounds are emitted at the same timing of the blinking of the left lamp of OPERATION INDICATOR lamp.

No (OFF) → The outdoor unit is normal.

↓ Yes (Blinks)

The outdoor unit is abnormal.
Check the blinking pattern, and refer to confirm the abnormal point(11-2.3.).
Make sure to check at least two consecutive blinking cycles. ※2

↓

Releasing the failure mode recall function

Release the failure mode recall function by the following procedures.
①With the remote controller headed towards the indoor unit, press any button that is not used in this failure mode recall function (e.g. TIMER button) .
OR
①Turn OFF the power supply and turn ON it again.
②Press RESET button of the remote controller.

Release the failure mode recall function according to the left mentioned procedure.

↓

Repair the defective parts.

↓

Deleting the abnormal condition

①After repairing the unit, recall the failure mode again according to "Setting up the failure mode recall function" mentioned above.
②Press EMERGENCY OPERATION switch so that the memorized abnormal condition is deleted.
③Release the failure mode recall function according to "Releasing the failure mode recall function" mentioned above.

Note1. Make sure to release the failure mode recall function once it's set up, otherwise the unit cannot operate properly.
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

※2.Blinking pattern when outdoor unit is abnormal:

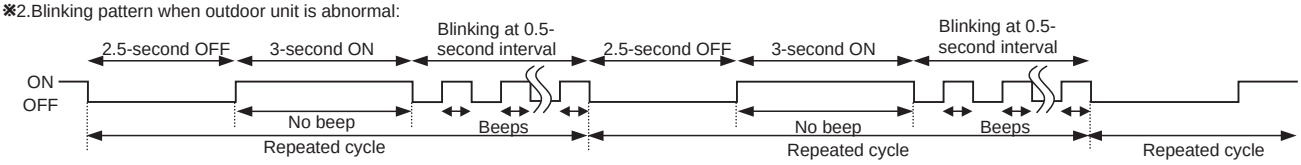

www.ilmalämpöpumput.com

3. Outdoor unit failure mode table

The left lamp of OPERATION INDICATOR lamp	Abnormal point (Failure mode)	Details of abnormal point	LED indication	Detection method	Check point	Indoor/outdoor unit failure mode recall function	Outdoor unit failure mode recall function
OFF	Normal	———	———	———	———	———	———
2-time flash 2.5 seconds OFF	Outdoor power system	Outdoor power system	———	When it consecutively occurs 3 times that the compressor stops for overcurrent protection or start-up failure protection within 1 minute after start-up.	•Reconnect compressor connector. •Refer to 11-6.Ⓐ"How to check inverter/ compressor". •Check stop valve.	○	○
3-time flash 2.5 seconds OFF	Outdoor thermistors	Discharge temperature thermistor	1-time flash every 2.5 seconds	When thermistors short or open during compressor running.	•Refer to 11-6.Ⓖ"Check of outdoor thermistors". ❋Defective outdoor thermistors can be identified by checking the blinking pattern of LED.	○	○
		Defrost thermistor	3-time flash 2.5 seconds OFF				
		Fin temperature thermistor	4-time flash 2.5 seconds OFF				
		P.C. board temperature thermistor	2-time flash 2.5 seconds OFF				
		Ambient temperature thermistor					
4-time flash 2.5 seconds OFF	Overcurrent protection	Overcurrent protection	11-time flash 2.5 seconds OFF	When 14A(MUZ-GA25VA, MUZ-GA25VAH)/ 24A(MUZ-GA35VA, MUZ-GA35VAH) current flow into intelligent power module.	•Reconnect compressor connector. •Refer to 11-6.Ⓐ"How to check inverter/ compressor". •Check stop valve.	———	○
		Compressor synchronous abnormality (Compressor start-up failure protection)	12-time flash 2.5 seconds OFF	When waveform of compressor current is distorted.	•Reconnect compressor connector. •Refer to 11-6.Ⓐ"How to check inverter/ compressor".	———	○
5-time flash 2.5 seconds OFF	Refrigerant system protection	Discharge temperature thermistor overheat protection	———	When discharge temperature thermistor exceeds116℃.	•Check refrigerant circuit and refrigerant amount. •Refer to 11-6.Ⓛ"Check of LEV". •Refer to 11-6.Ⓖ"Check of outdoor thermistors".	———	○
6-time flash 2.5 seconds OFF	High pressure protection	High pressure overheat protection	———	When indoor coil thermistor exceeds 70℃ in HEAT mode. When defrost thermistor exceeds 70℃ in COOL mode.	•Check refrigerant circuit and refrigerant amount. •Check stop valve.	———	○
7-time flash 2.5 seconds OFF	Fin temperature/ P.C. board temperature thermistor overheat protection	Fin temperature/ P.C. board temperature thermistor overheat protection	7-time flash 2.5 seconds OFF	When temperature of fin temperature thermistor on the inverter P.C. board exceeds 82 ℃(MUZ-GA25VA, MUZ-GA25VAH)/ 83℃(MUZ-GA35VA, MUZ-GA35VAH), or temperature of P.C. board temperature thermistor exceeds 81 ℃(MUZ-GA25VA, MUZ-GA25VAH)/ 85℃ (MUZ-GA35VA, MUZ-GA35VAH).	•Check around outdoor unit. •Check outdoor unit air passage. •Refer to 11-6.Ⓘ"Check of outdoor fan motor".	———	○
8-time flash 2.5 seconds OFF	Outdoor fan protection	Outdoor fan protection	———	When outdoor fan has stopped within 30 seconds 3-times in a row after outdoor fan start-up, unit stops.	•Refer to 11-6.Ⓘ"Check of outdoor fan motor. Refer to 11-6.Ⓝ"Check of inverter P.C. board".	———	○
9-time flash 2.5 seconds OFF	Outdoor control system	Nonvolatile memory data	5-time flash 2.5 seconds OFF	When nonvolatile memory data cannot be read properly, unit stops.	•Replace the inverter P.C. board.	○	○
10-time flash 2.5 seconds OFF	Low discharge temperature protection	Low discharge temperature protection	———	When discharge temperature has been 50℃ or less for 20 minutes.	•Check refrigerant circuit and refrigerant amount. •Refer to 11-6.Ⓛ"Check of LEV".	———	○
11-time flash 2.5 seconds OFF	Converter control system	DC voltage	8-time flash 2.5 seconds OFF	When DC voltage of inverter cannot be detected normally.	•Refer to 11-6.Ⓐ"How to check inverter/ compressor".	———	○
		Compressor each phase current	9-time flash 2.5 seconds OFF	When compressor each phase current cannot be detected normally.			
12-time flash 2.5 seconds OFF	Overcurrent protection	Compressor open-phase protection	10-time flash 2.5 seconds OFF	When 14A(MUZ-GA25VA, MUZ-GA25VAH)/ 24A(MUZ-GA35VA, MUZ-GA35VAH) current flow into intelligent power module (IPM). When the open-phase operation of compressor is detected. When the interphase short out occurs in the output of the intelligent power module (IPM). When the compressor winding shorts out.	•Reconnect compressor connector. •Refer to 11-6. Ⓐ"How to check inverter/ compressor".	———	○
14-time flash 2.5 seconds OFF	Outdoor unit (Other abnormality)	Outdoor unit	———	When the inverter P.C. board is failure.	•Replace the inverter P.C. board.	———	○

www.ilmalämpöpumput.com

11-3. Instruction of troubleshooting

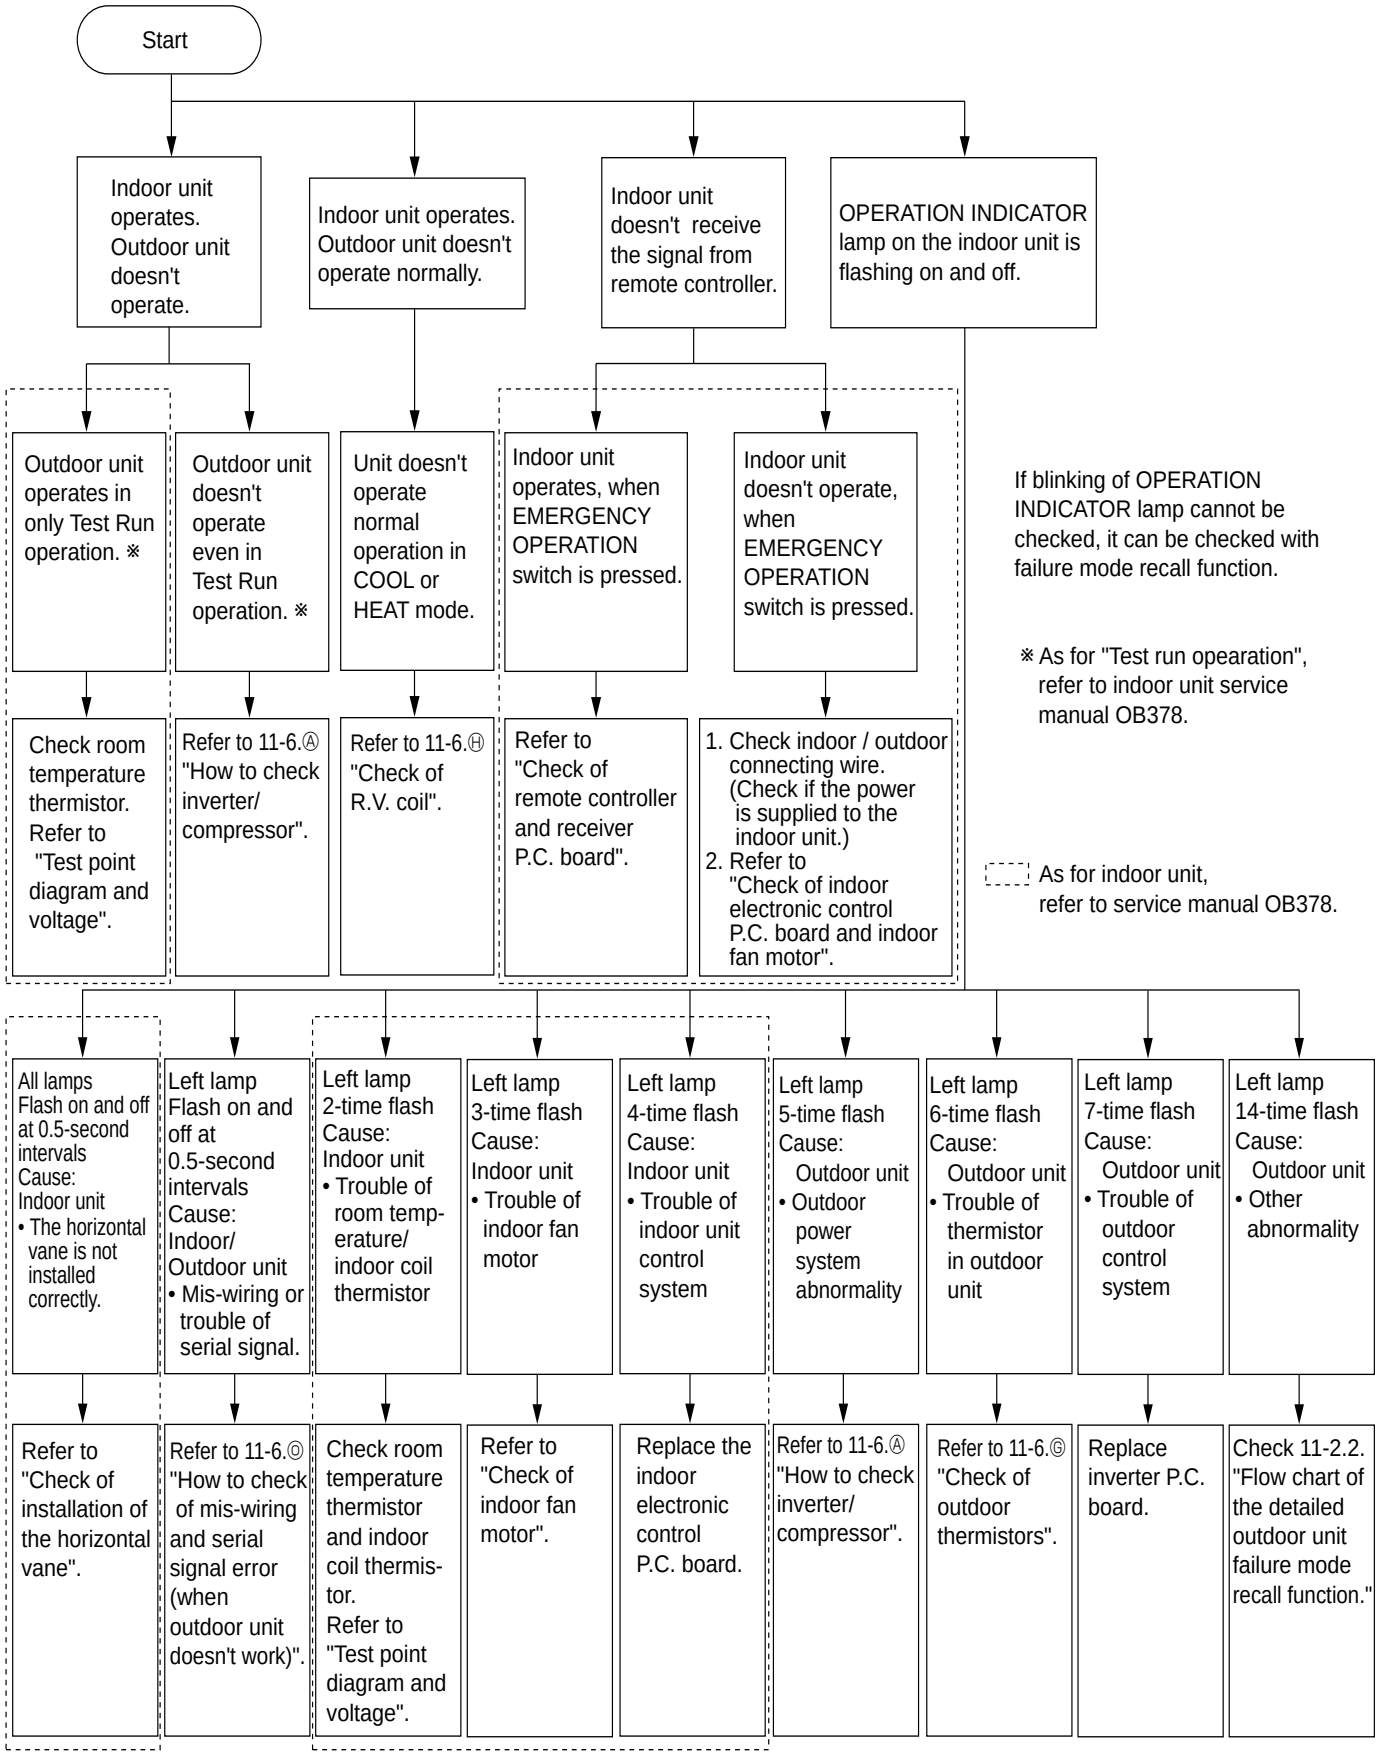
Start
Indoor unit operates. Outdoor unit doesn't operate.
Indoor unit operates. Outdoor unit doesn't operate normally.
Indoor unit doesn't receive the signal from remote controller.
OPERATION INDICATOR lamp on the indoor unit is flashing on and off.
Outdoor unit operates in only Test Run operation. ※
Outdoor unit doesn't operate even in Test Run operation. ※
Unit doesn't operate normal operation in COOL or HEAT mode.
Indoor unit operates, when EMERGENCY OPERATION switch is pressed.
Indoor unit doesn't operate, when EMERGENCY OPERATION switch is pressed.
If blinking of OPERATION INDICATOR lamp cannot be checked, it can be checked with failure mode recall function.
※ As for "Test run opearation", refer to indoor unit service manual OB378.
Check room temperature thermistor. Refer to "Test point diagram and voltage".
Refer to 11-6.Ⓐ "How to check inverter/ compressor".
Refer to 11-6.Ⓗ "Check of R.V. coil".
Refer to "Check of remote controller and receiver P.C. board".
1. Check indoor / outdoor connecting wire. (Check if the power is supplied to the indoor unit.)
2. Refer to "Check of indoor electronic control P.C. board and indoor fan motor".
As for indoor unit, refer to service manual OB378.
All lamps Flash on and off at 0.5-second intervals Cause: Indoor unit • The horizontal vane is not installed correctly.
Left lamp Flash on and off at 0.5-second intervals Cause: Indoor/ Outdoor unit • Mis-wiring or trouble of serial signal.
Left lamp 2-time flash Cause: Indoor unit • Trouble of room temp-erature/ indoor coil thermistor
Left lamp 3-time flash Cause: Indoor unit • Trouble of indoor fan motor
Left lamp 4-time flash Cause: Indoor unit • Trouble of indoor unit control system
Left lamp 5-time flash Cause: Outdoor unit • Outdoor power system abnormality
Left lamp 6-time flash Cause: Outdoor unit • Trouble of thermistor in outdoor unit
Left lamp 7-time flash Cause: Outdoor unit • Trouble of outdoor control system
Left lamp 14-time flash Cause: Outdoor unit • Other abnormality
Refer to "Check of installation of the horizontal vane".
Refer to 11-6.Ⓞ "How to check of mis-wiring and serial signal error (when outdoor unit doesn't work)".
Check room temperature thermistor and indoor coil thermis-tor. Refer to "Test point diagram and voltage".
Refer to "Check of indoor fan motor".
Replace the indoor electronic control P.C. board.
Refer to 11-6.Ⓐ "How to check inverter/ compressor".
Refer to 11-6.Ⓖ "Check of outdoor thermistors".
Replace inverter P.C. board.
Check 11-2.2. "Flow chart of the detailed outdoor unit failure mode recall function."

www.ilmalämpöpumput.com

11-4. Troubleshooting check table

NOTE 1. The location of LED is illustrated at the right figure. Refer to 11-7.1.
2. LED lights up during normal operation.

Inverter P.C. board (Parts side)



No.	Symptom	LED indication	Abnormal point/ Condition	Detection method	Check point
1	Outdoor unit does not operate	1-time flash every 2.5 seconds	Outdoor power system	When it consecutively occurs 3times that the compressor stops for overcurrent protection or start-up failure protection within 1minute start-up.	· Check stop valve. · Reconnect connector of compressor. · Refer to 11-6.Ⓐ "How to check inverter/ compressor". · Refer to 11-6.Ⓒ "Check of intelligent power module".
2		NOTE: For abnormality location, refer to 'Indoor troubleshooting check table'. Refer to service manual OB371.	Outdoor thermistors	When discharge temperature thermistor, fin temperature thermistor, defrost thermistor, P.C. board temperature thermistor or ambient temperature thermistor shorts or opens during compressor running, compressor stops.	· Refer to 11-6.Ⓖ "Check of outdoor thermistors".
3			Outdoor control system	When nonvolatile memory data cannot be read properly, compressor stops. (When the left lamp of OPERATION INDICATOR lamp of indoor unit lights up or flashes 7-time.)	Replace inverter P.C. board.
4		6-time flash 2.5 seconds OFF	serial signal	When the communication failure between the indoor and outdoor unit for 3 minutes.	Refer to 11-6.Ⓞ "How to check mis-wiring and serial signal error.
5		14-time flash 2.5 seconds OFF	Outdoor unit (Other abnormality)	When outdoor unit is failure.	Refer to 11-2.2. Flow chart of the detailed outdoor unit failure mode recall function.
6	'Outdoor unit stops and restarts 3 minutes later' is repeated	2-time flash 2.5 seconds OFF	Overcurrent protection	When 14A(MUZ-GA25VA, MUZ-GA25VAH)/ 24A(MUZ-GA35VA, MUZ-GA35VAH) current flows into intelligent power module, compressor stops and restarts 3 minutes later.	· Check stop valve. · Reconnect connector of compressor. · Refer to 11-6.Ⓐ "How to check inverter/compressor". · Refer to 11-6.Ⓒ "Check of intelligent power module".
7		3-time flash 2.5 seconds OFF	Discharge temperature overheat protection	When discharge temperature thermistor exceeds 116℃, compressor stops. Compressor can restart if discharge temperature thermistor reads 100℃ or less 3 minutes later.	· Check refrigerant circuit and refrigerant amount. · Refer to 11-6.Ⓛ "Check of LEV".
8		4-time flash 2.5 seconds OFF	Fin temperature /P.C. board temperature thermistor overheat protection	When temperature of fin temperature thermistor on the heat sink exceeds 82℃(MUZ-GA25VA, MUZ-GA25VAH)/ 83℃(MUZ-GA35VA, MUZ-GA35VAH) or temperature of P.C. board temperature thermistor exceeds 81℃(MUZ-GA25VA, MUZ-GA25VAH)/ 85℃(MUZ-GA35VA, MUZ-GA35VAH), compressor stops and restarts 3 minutes later.	· Check around outdoor unit. · Check outdoor unit air passage. · Refer to 11-6.Ⓘ "Check of outdoor fan motor".
9		5-time flash 2.5 seconds OFF	High pressure protection	When indoor coil thermistor exceeds 70℃ in HEAT mode. When the defrost thermistor exceeds 70℃ in COOL mode.	· Check refrigerant circuit and refrigerant amount. · Check stop valve.
10		8-time flash 2.5 seconds OFF	Compressor synchronous abnormality	When the waveform of compressor current is distorted.	· Reconnect connector of compressor. · Refer to 11-6.Ⓐ "How to check inverter/compressor". · Refer to 11-6.Ⓒ "Check of intelligent power module".
11		10-time flash 2.5 seconds OFF	Outdoor fan	When outdoor fan has stopped within 30 seconds 3-times a row after outdoor fan start-up, unit stops.	· Refer to 11-6.Ⓘ "Check of outdoor fan motor. · Refer to 11-6.Ⓝ "Check of inverter P.C. board.
12		12-time flash 2.5 seconds OFF	Compressor each phase current	When compressor each phase current cannot be detected normally	· Refer to 11-6.Ⓐ "How to check inverter/compresssor".
13		13-time flash 2.5 seconds OFF	DC voltage	When DC voltage of inverter cannot be detected normally.	· Check for short time power failure by such as lightning strike. · Refer to 11-6.Ⓐ "How to check inverter/compresssor".
14	Outdoor unit operates	1-time flash 2.5 seconds OFF	Frequency drop by current protection	When current from power outlet exceeds 5.2A(MUZ-GA25VA, MUZ-GA25VAH)/ 6.1A(MUZ-GA35VA, MUZ-GA35VAH), compressor frequency lowers.	The unit is normal, but check the following. · Check if indoor filters are clogged. · Check if refrigerant is short. · Check if indoor/outdoor unit air circulation is short cycled.
15		3-time flash 2.5 seconds OFF	Frequency drop by high pressure protection	When indoor coil thermistor exceeds 55℃ in HEAT mode, compressor frequency lowers.	
			Frequency drop by defrosting in COOL mode	When indoor coil thermistor reads 8℃ or less in COOL mode, compressor frequency lowers.	
16		4-time flash 2.5 seconds OFF	Frequency drop by discharge temperature protection	When discharge temperature thermistor exceeds 111℃, compressor frequency lowers.	· Check refrigerant circuit and refrigerant amount. · Refer to 11-6.Ⓛ "Check of LEV". · Refer to 11-6.Ⓖ "Check of outdoor thermistors".
17	Outdoor unit operates	7-time flash 2.5 seconds OFF	Low discharge temperature protection	When discharge temperature has been 50℃ or less for 20 minutes.	· Refer to 11-6.Ⓛ "Check of LEV". · Check refrigerant circuit and refrigerant amount.
18		8-time flash 2.5 seconds OFF	PAM protection PAM: Pulse Amplitude Modulation	When the overcurrent flows into IGBT(Insulated Gate Bipolar transistor : TR821) or when the bus-bar voltage reaches 320V or more, PAM stops and restarts.	This is not malfunction. PAM protection will be activated in the following cases; ①Instantaneous power voltage drop (Short time power failure) ②When the power supply voltage is high.
19		9-time flash 2.5 seconds OFF	Inverter check mode	When the connector of compressor is disconnected, inverter check mode starts.	Check if the connector of the compressor is correctly connected. Refer to 11-6.Ⓐ "How to check inverter/ compressor".

The flashing frequency shows the number of times the LED blinks after every 2.5-second OFF.
(Example) When the flashing frequency is “2”.

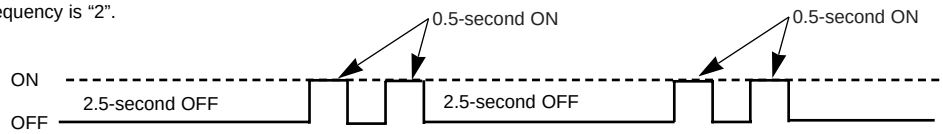

www.ilmalämpöpumput.com

11-5. Trouble criterion of main parts

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1

<table>
<tr><th>Part name</th><th>Check method and criterion</th><th>Figure</th></tr>
<tr><td>Defrost thermistor (RT61)

Ambient temperature thermistor(RT65)</td><td>Measure the resistance with a tester. (Part temperature –10˚C ~ 40˚C)
<table>
<tr><th>Normal</th><th>Abnormal</th></tr>
<tr><td>5 kΩ ~ 55 kΩ</td><td>Open or short-circuit</td></tr>
</table></td><td></td></tr>
<tr><td>Discharge temperature thermistor(RT62)</td><td>Measure the resistance with a tester.
Before measurement, hold the thermistor with your hands to warm it up.
(Part temperature 0˚C ~ 40˚C)
<table>
<tr><th>Normal</th><th>Abnormal</th></tr>
<tr><td>150 kΩ ~ 600 kΩ</td><td>Open or short-circuit</td></tr>
</table></td><td></td></tr>
<tr><td>Fin temperature thermistor(RT64)</td><td>Measure the resistance with a tester.
Before measurement, hold the thermistor with your hands to warm it up.
(Part temperature 0˚C ~ 40˚C)
<table>
<tr><th>Normal</th><th>Abnormal</th></tr>
<tr><td>30 kΩ ~ 180 kΩ</td><td>Open or short-circuit</td></tr>
</table></td><td></td></tr>
<tr><td>Compressor(MC)</td><td>Measure the resistance between the terminals with a tester.
(Part temperature –20˚C ~ 40˚C)
<table>
<tr><th rowspan="2"></th><th colspan="2">Normal</th><th rowspan="2">Abnormal</th></tr>
<tr><th>MUZ-GA25VA
MUZ-GA25VAH</th><th>MUZ-GA35VA
MUZ-GA35VAH</th></tr>
<tr><td>U-V
U-W
V-W</td><td>1.58 Ω ~ 2.03Ω</td><td>1.28 Ω ~ 1.66 Ω</td><td>Open or short-circuit</td></tr>
</table></td><td> 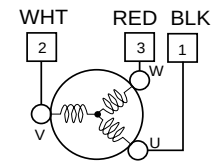
</td></tr>
<tr><td>Outdoor fan motor(MF)
INNER FUSE
(Only MUZ-GA25VA/H)
152± $^{0}_{5}$ ˚C CUT OFF</td><td>Measure the resistance between the terminals with a tester.
(Part temperature –20˚C ~ 40˚C)
<table>
<tr><th rowspan="2">Color of the lead wire</th><th colspan="2">Normal</th><th rowspan="2">Abnormal</th></tr>
<tr><th>MUZ-GA25VA
MUZ-GA25VAH</th><th>MUZ-GA35VA
MUZ-GA35VAH</th></tr>
<tr><td>WHT – BLK</td><td>292 Ω ~ 374 Ω</td><td>31 Ω ~ 41 Ω</td><td rowspan="3">Open or short-circuit</td></tr>
<tr><td>BLK – RED</td><td>236 Ω ~ 304 Ω</td><td>31 Ω ~ 41 Ω</td></tr>
<tr><td>RED – WHT</td><td>——</td><td>31 Ω ~ 41 Ω</td></tr>
</table></td><td>MUZ-GA25VA MUZ-GA35VA
MUZ-GA25VAH MUZ-GA35VAH
 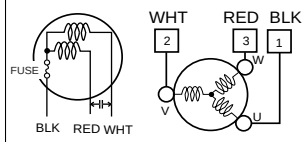
</td></tr>
<tr><td>R.V. coil(21S4)</td><td>Measure the resistance between the terminals with a tester.
(Part temperature –20˚C ~ 40˚C)
<table>
<tr><th colspan="2">Normal</th><th>Abnormal</th></tr>
<tr><td>MUZ-GA25VA
MUZ-GA25VAH</td><td>MUZ-GA35VA
MUZ-GA35VAH</td><td rowspan="2">Open or short-circuit</td></tr>
<tr><td>1.26 kΩ ~ 1.62 kΩ</td><td>1.20 kΩ ~ 1.55 kΩ</td></tr>
</table></td><td></td></tr>
<tr><td>Expansion valve coil(LEV)
MUZ-GA35VA
MUZ-GA35VAH</td><td>Measure the resistance with a tester.
(Part temperature : –20˚C ~ 40˚C)
<table>
<tr><th>Color of the lead wire</th><th>Normal</th><th>Abnormal</th></tr>
<tr><td>WHT – RED</td><td rowspan="4">38 Ω ~ 50 Ω</td><td rowspan="4">Open or short-circuit</td></tr>
<tr><td>RED – ORN</td></tr>
<tr><td>YLW – BRN</td></tr>
<tr><td>BRN – BLU</td></tr>
</table></td><td> 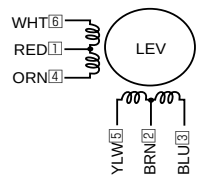
</td></tr>
<tr><td>Defrost heater(H)</td><td>Measure the resistance with a tester.
(Part temperature -20˚C ~ 40˚C)
<table>
<tr><th>Normal</th><th>Abnormal</th></tr>
<tr><td>333 Ω ~ 428 Ω</td><td>Open or short-circuit</td></tr>
</table></td><td></td></tr>
<tr><td>Solenoid valve coil (21R1)
MUZ-GA25VA
MUZ-GA25VAH</td><td>Measure the resistance with a tester.
(Part temperature -20˚C ~ 40˚C)
<table>
<tr><th>Normal</th><th>Abnormal</th></tr>
<tr><td>1,220 Ω ~ 1,580 Ω</td><td>Open or short-circuit</td></tr>
</table></td><td></td></tr>
</table>

www.ilmalämpöpumput.com

11-6. Troubleshooting flow

When OPERATION INDICATOR lamp flashes 5-time.
Outdoor unit does not operate.

Ⓐ How to check inverter/ compressor

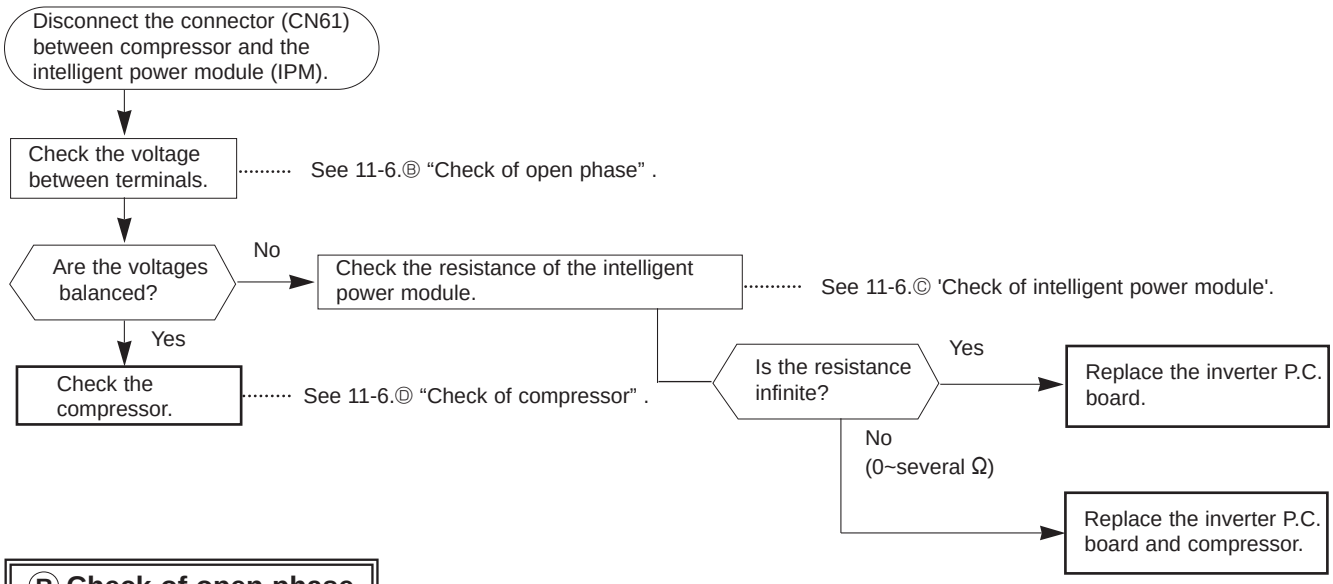
Disconnect the connector (CN61) between compressor and the intelligent power module (IPM).
Check the voltage between terminals.
See 11-6.Ⓑ “Check of open phase” .
Are the voltages balanced?
No
Check the resistance of the intelligent power module.
See 11-6.Ⓒ 'Check of intelligent power module'.
Yes
Check the compressor.
See 11-6.Ⓓ “Check of compressor” .
Is the resistance infinite?
Yes
Replace the inverter P.C. board.
No
(0~several Ω)
Replace the inverter P.C. board and compressor.

Ⓑ Check of open phase

●With the connector between the compressor and the intelligent power module disconnected, activate the inverter and check if the inverter is normal by measuring the balance of voltage between the terminals.

Output voltage [V]
115V

<< Operation method>>
Start cooling or heating operation by pressing EMERGENCY OPERATION switch on the indoor unit. (test-run mode : refer to page 18)

<<Measurement point>>
at 3 points
BLK (U)-WHT (V)
BLK (U)-RED (W)
WHT(V)-RED (W)

※ Measure AC voltage between the lead wires at 3 points.

NOTE 1. Output voltage varies according to power supply voltage.
2. Measure the voltage by analog type tester.
3. During this check, LED of inverter P.C. board flashes 9 times.

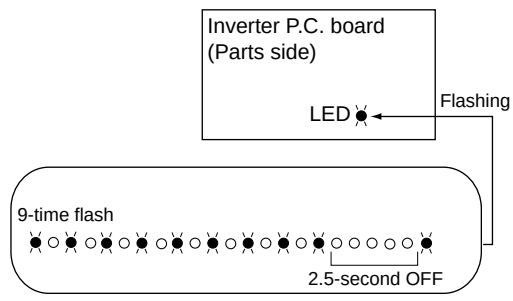

Ⓒ Check of intelligent power module

●Disconnect the connector (CN61) between the compressor and the intelligent power module, and measure the resistance between the terminals on the intelligent power module.

<<Measurement point>>
at 6 points
BLK-WHT, WHT-BLK
BLK-RED, RED-BLK
WHT-RED, RED-WHT

<<Judgement>>
Infinite [Ω]……Normal
0~dozens of ……Abnormal (short)

ohmmeter indication



…… Normal
(infinite)



…… Abnormal
(0~dozens of Ω)

www.ilmalämpöpumput.com

Ⓓ Check of compressor

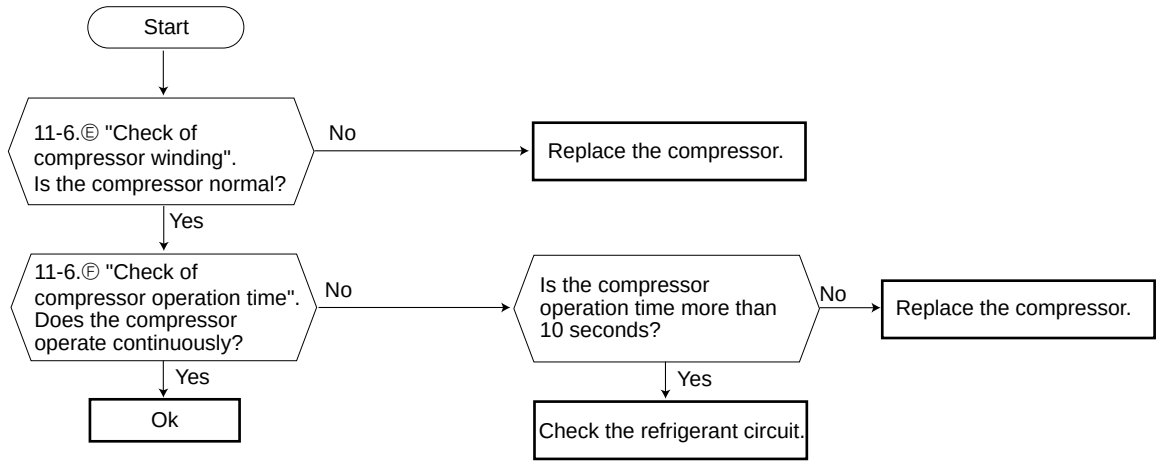

Ⓔ Check of compressor winding

● Disconnect the connector (CN61) between the compressor and intelligent power module, and measure the resistance between the compressor terminals.

<<Measurement point>>
at 3 points
BLK-WHT
BLK-RED
WHT-RED

※ Measure the resistance between the lead wires at 3 points.

<<Judgement>>
Refer to 11-5..
0[Ω] ……Abnormal [short]
Infinite[Ω] …….Abnormal [open]
NOTE 1. Be sure to zero the ohmmeter before measurement.
2. Winding resistance for each phase at 20℃.
Refer to 3.SPECIFICATION.

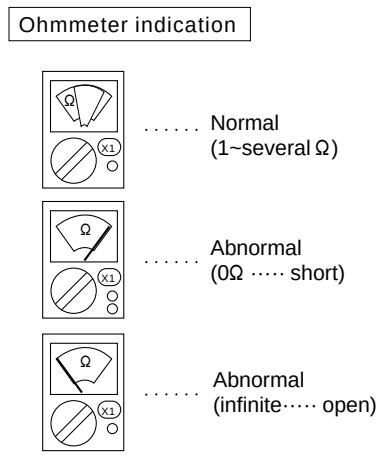

Ⓕ Check of compressor operation time

●Connect the compressor and activate the inverter. Then measure the time until the inverter stops due to over current.

<<Operation method>>
Start heating or cooling operation by pressing EMERGENCY OPERATION switch on the indoor unit. (Test-run mode)

<<Measurement>>
Measure the time from the start of outdoor fan running to the stop of compressor due to over current.

<<Judgement>>
For reference
0~10 seconds·····Abnormal (compressor short or poor contact)
10~60 seconds·····Abnormal (compressor lock-out)
60 seconds~5 minutes·····Abnormal (refrigerant circuit defect)
more than 5 minutes·····Normal

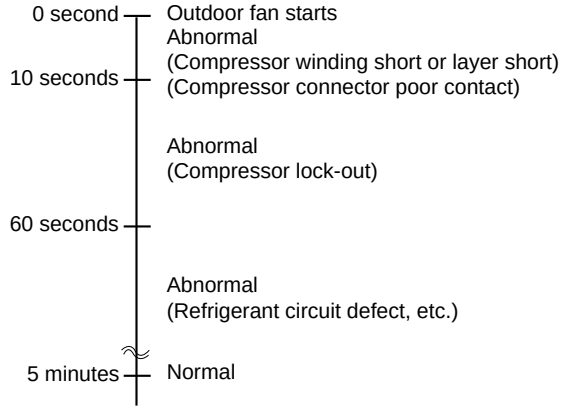

www.ilmalämpöpumput.com

When OPERATION INDICATOR lamp flashes 6-time.
The thermistors in the outdoor unit are abnormal.

Ⓖ Check of outdoor thermistors

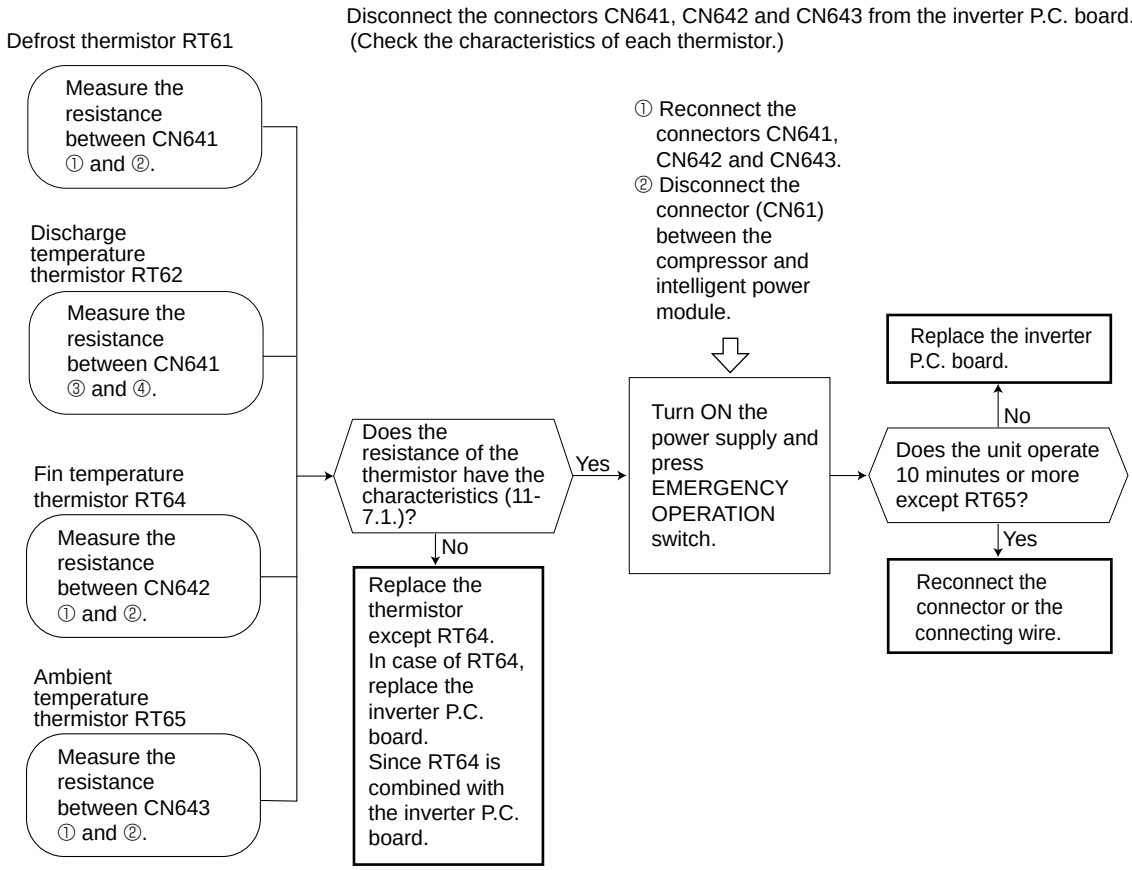
Disconnect the connectors CN641, CN642 and CN643 from the inverter P.C. board.
(Check the characteristics of each thermistor.)
Defrost thermistor RT61
Measure the resistance between CN641 ① and ②.
Discharge temperature thermistor RT62
Measure the resistance between CN641 ③ and ④.
Fin temperature thermistor RT64
Measure the resistance between CN642 ① and ②.
Ambient temperature thermistor RT65
Measure the resistance between CN643 ① and ②.
Does the resistance of the thermistor have the characteristics (11-7.1.)?
Yes
No
Replace the thermistor except RT64. In case of RT64, replace the inverter P.C. board. Since RT64 is combined with the inverter P.C. board.
① Reconnect the connectors CN641, CN642 and CN643.
② Disconnect the connector (CN61) between the compressor and intelligent power module.
Turn ON the power supply and press EMERGENCY OPERATION switch.
Does the unit operate 10 minutes or more except RT65?
No
Replace the inverter P.C. board.
Yes
Reconnect the connector or the connecting wire.

Ⓗ Check of R.V. coil

※ First of all, measure the resistance of R.V. coil to check if the coil is defective. Refer to 11-5..
※ In case CN721 is not connected or R.V. coil is open, voltage is generated between the terminal pins of the connector although any signal is not being transmitted to R.V. coil. Check if CN721 is connected.

Unit operates COOL mode even if it is set to HEAT mode.

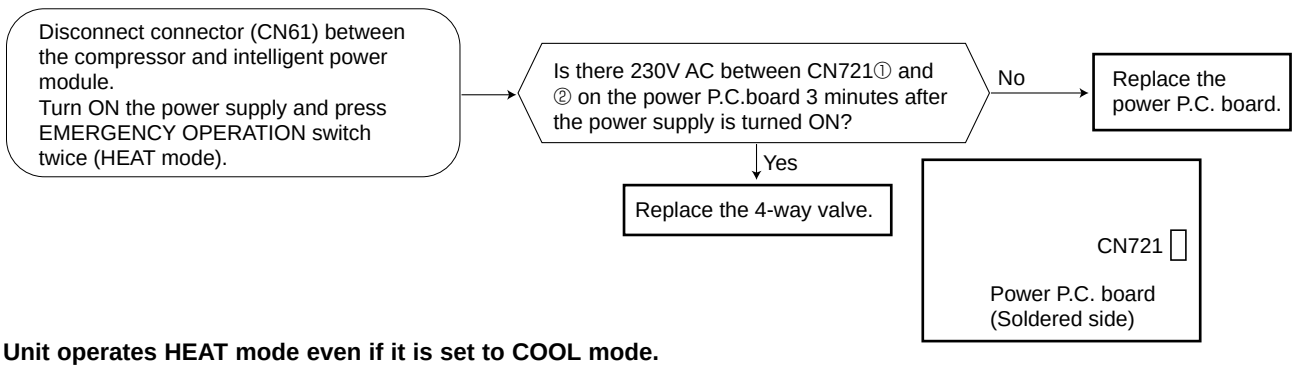
Disconnect connector (CN61) between the compressor and intelligent power module.
Turn ON the power supply and press EMERGENCY OPERATION switch twice (HEAT mode).
Is there 230V AC between CN721① and ② on the power P.C.board 3 minutes after the power supply is turned ON?
No
Replace the power P.C. board.
Yes
Replace the 4-way valve.
CN721
Power P.C. board (Soldered side)

Unit operates HEAT mode even if it is set to COOL mode.

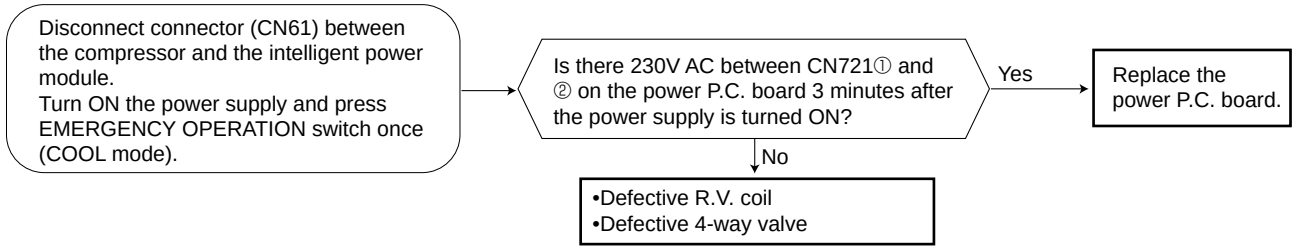
Disconnect connector (CN61) between the compressor and the intelligent power module.
Turn ON the power supply and press EMERGENCY OPERATION switch once (COOL mode).
Is there 230V AC between CN721① and ② on the power P.C. board 3 minutes after the power supply is turned ON?
Yes
Replace the power P.C. board.
No
•Defective R.V. coil
•Defective 4-way valve

www.ilmalämpöpumput.com

Outdoor fan motor does not operate.

ⓘ Check of outdoor fan motor

MUZ-GA25VA - E1
MUZ-GA25VAH - E1

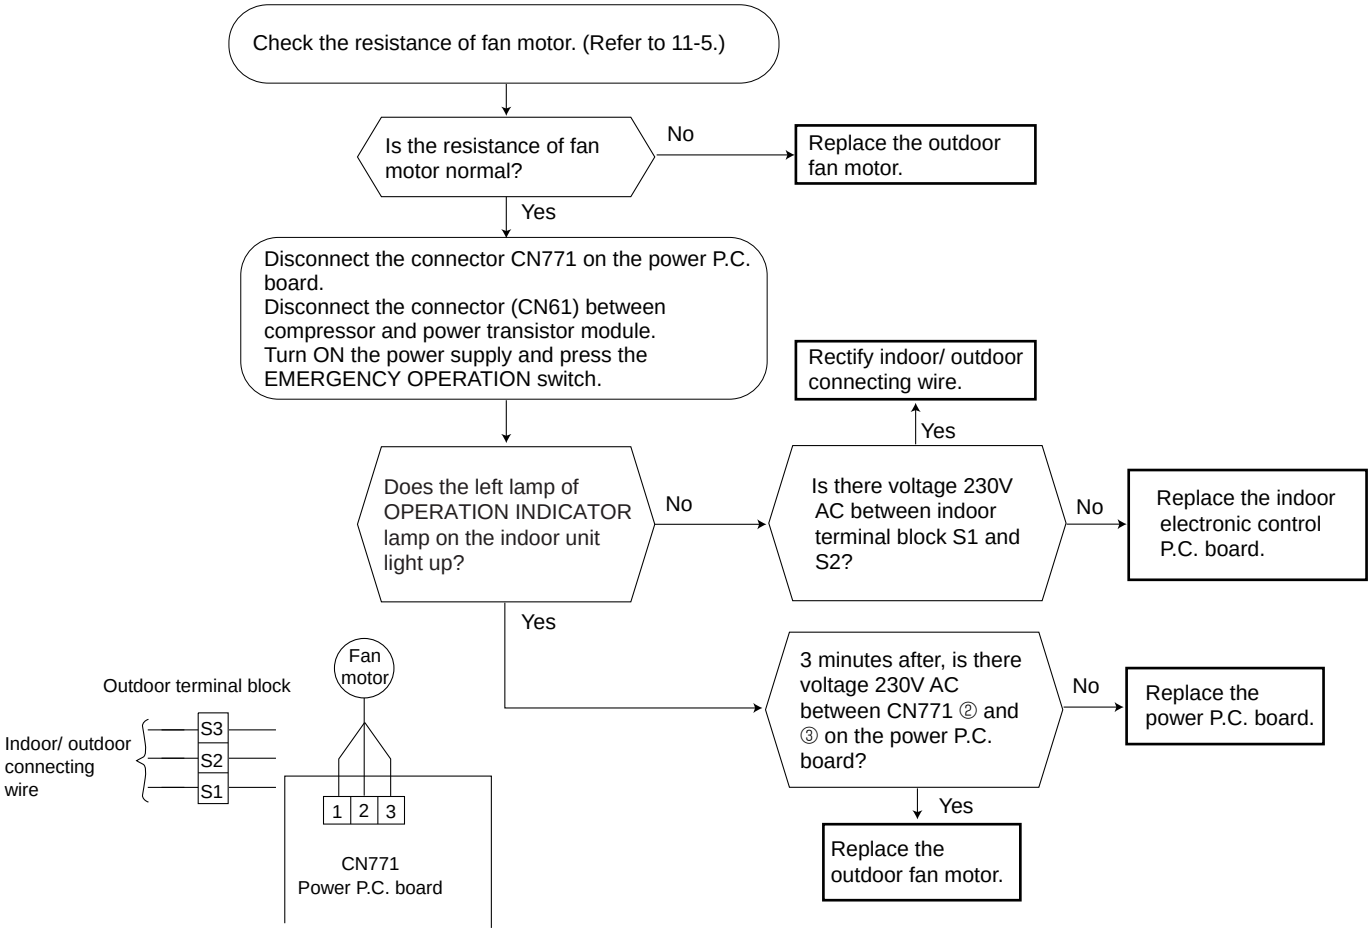
Check the resistance of fan motor. (Refer to 11-5.)
Is the resistance of fan motor normal?
No
Replace the outdoor fan motor.
Yes
Disconnect the connector CN771 on the power P.C. board.
Disconnect the connector (CN61) between compressor and power transistor module.
Turn ON the power supply and press the EMERGENCY OPERATION switch.
Rectify indoor/ outdoor connecting wire.
Yes
Does the left lamp of OPERATION INDICATOR lamp on the indoor unit light up?
No
Is there voltage 230V AC between indoor terminal block S1 and S2?
No
Replace the indoor electronic control P.C. board.
Yes
Fan motor
Outdoor terminal block
Indoor/ outdoor connecting wire
S3
S2
S1
1 2 3
CN771
Power P.C. board
3 minutes after, is there voltage 230V AC between CN771 ② and ③ on the power P.C. board?
No
Replace the power P.C. board.
Yes
Replace the outdoor fan motor.

www.ilmalämpöpumput.com

Outdoor fan motor does not operate.

Ⓘ Check of outdoor fan motor

MUZ-GA35VA - E1
MUZ-GA35VAH - E1

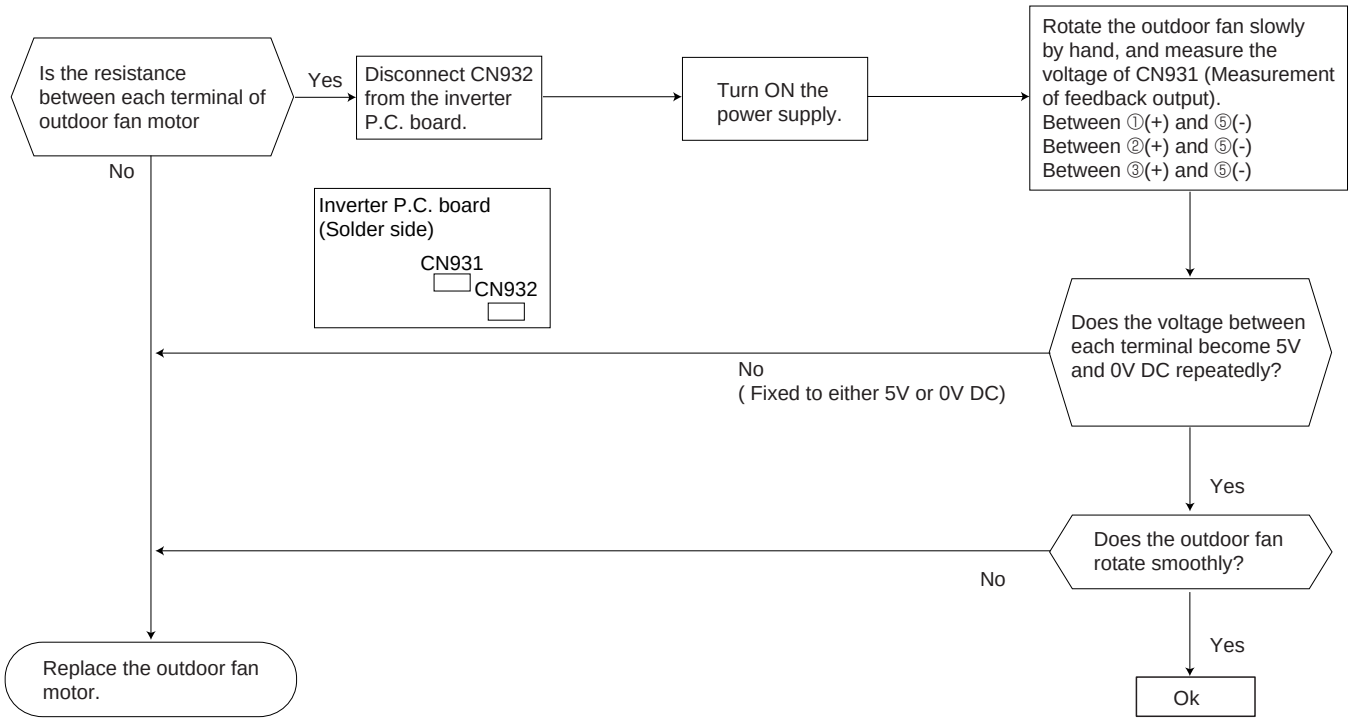
Is the resistance between each terminal of outdoor fan motor
Yes
Disconnect CN932 from the inverter P.C. board.
Turn ON the power supply.
Rotate the outdoor fan slowly by hand, and measure the voltage of CN931 (Measurement of feedback output).
Between ①(+) and ⑤(-)
Between ②(+) and ⑤(-)
Between ③(+) and ⑤(-)
No
Inverter P.C. board (Solder side)
CN931
CN932
Does the voltage between each terminal become 5V and 0V DC repeatedly?
No
(Fixed to either 5V or 0V DC)
Yes
Does the outdoor fan rotate smoothly?
No
Yes
Replace the outdoor fan motor.
Ok

Inverter does not operate.

Ⓙ Check of power supply

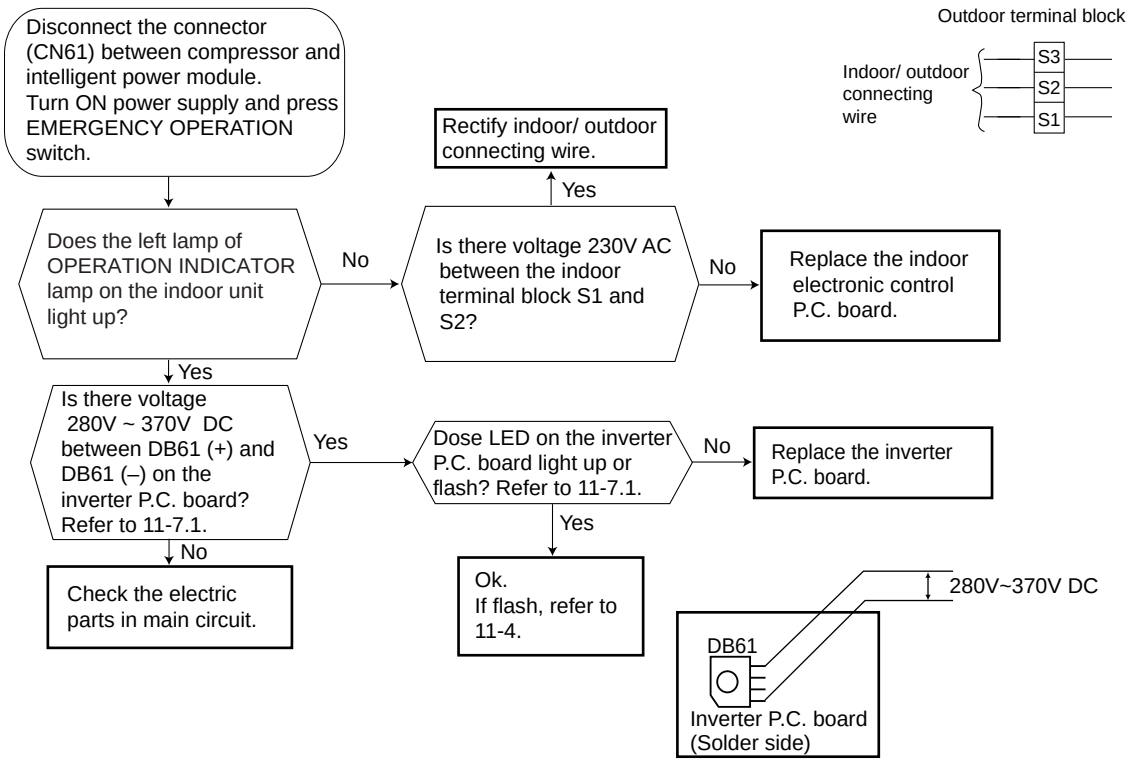
Disconnect the connector (CN61) between compressor and intelligent power module.
Turn ON power supply and press EMERGENCY OPERATION switch.
Outdoor terminal block
Indoor/ outdoor connecting wire
S3
S2
S1
Rectify indoor/ outdoor connecting wire.
Yes
Does the left lamp of OPERATION INDICATOR lamp on the indoor unit light up?
No
Is there voltage 230V AC between the indoor terminal block S1 and S2?
No
Replace the indoor electronic control P.C. board.
Yes
Is there voltage 280V ~ 370V DC between DB61 (+) and DB61 (–) on the inverter P.C. board? Refer to 11-7.1.
Yes
Dose LED on the inverter P.C. board light up or flash? Refer to 11-7.1.
No
Replace the inverter P.C. board.
Yes
No
Check the electric parts in main circuit.
Ok.
If flash, refer to 11-4.
280V~370V DC
DB61
Inverter P.C. board (Solder side)

www.ilmalämpöpumput.com

Outdoor unit does not operate at all, or stops immediately due to overcurrent.

Ⓚ Check of current-limiting resistor

When the current-limiting resistor is open, the rush current limiting relay (X64) may not work properly.

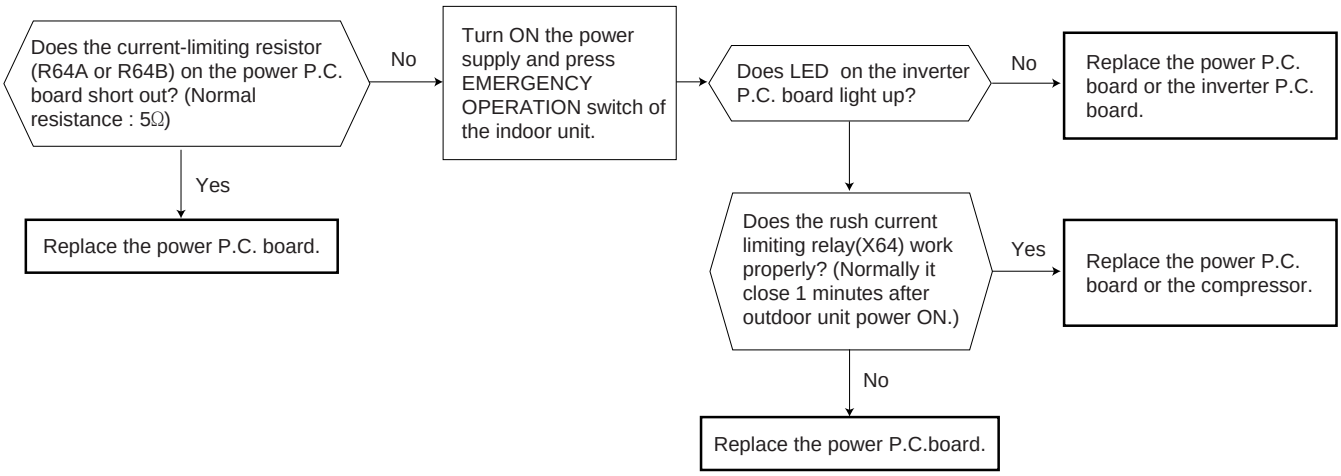
Does the current-limiting resistor (R64A or R64B) on the power P.C. board short out? (Normal resistance : 5Ω)
No
Turn ON the power supply and press EMERGENCY OPERATION switch of the indoor unit.
Does LED on the inverter P.C. board light up?
No
Replace the power P.C. board or the inverter P.C. board.
Yes
Replace the power P.C. board.
Does the rush current limiting relay(X64) work properly? (Normally it close 1 minutes after outdoor unit power ON.)
Yes
Replace the power P.C. board or the compressor.
No
Replace the power P.C.board.

● Check other electric parts in the main circuit together in the case of the defective current-limiting resistor.

Heating/Cooling does not work sufficiently.

Ⓛ Check of LEV (Expansion valve)

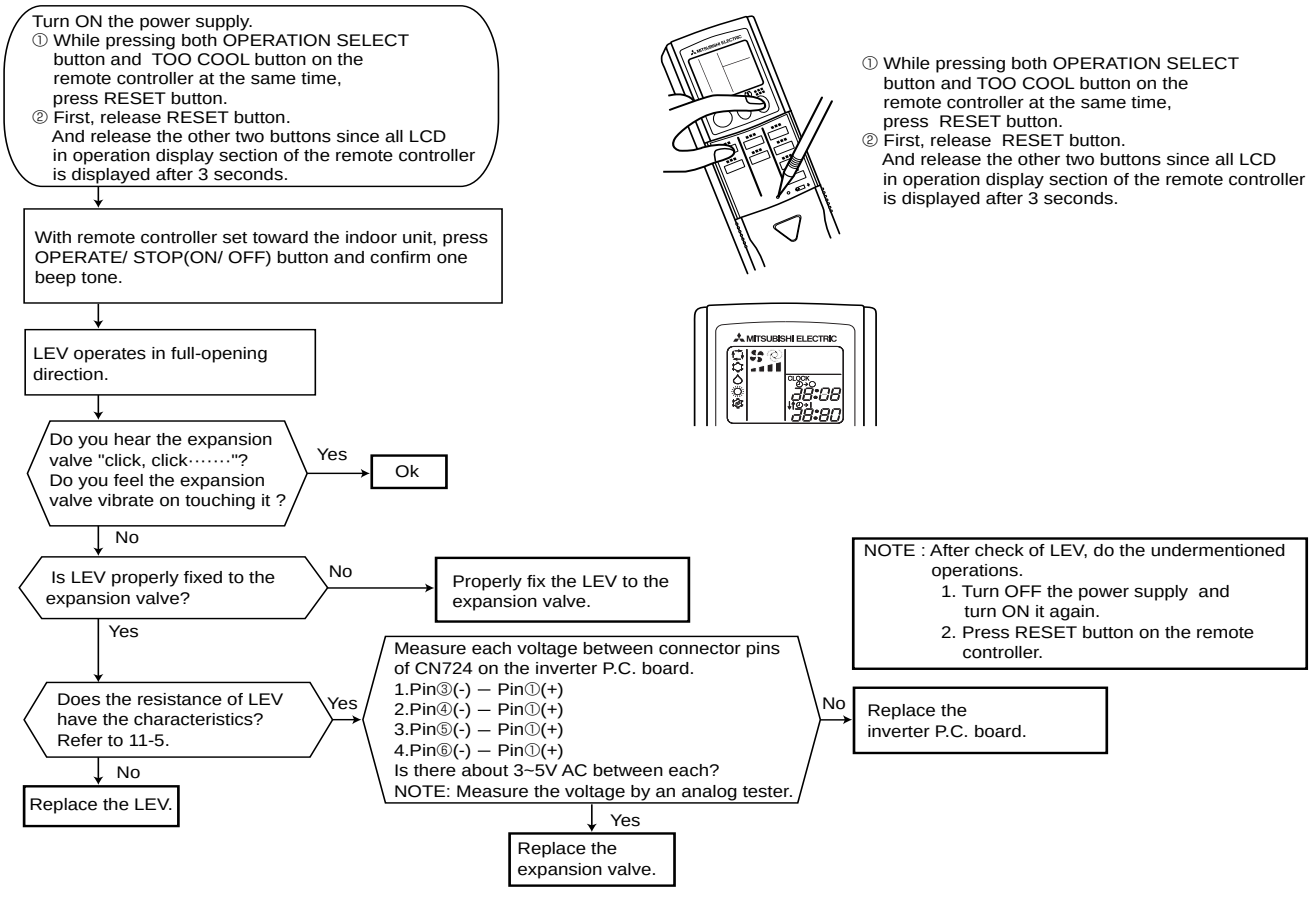
Turn ON the power supply.
① While pressing both OPERATION SELECT button and TOO COOL button on the remote controller at the same time, press RESET button.
② First, release RESET button.
And release the other two buttons since all LCD in operation display section of the remote controller is displayed after 3 seconds.
With remote controller set toward the indoor unit, press OPERATE/ STOP(ON/ OFF) button and confirm one beep tone.
LEV operates in full-opening direction.
Do you hear the expansion valve "click, click·····"? Do you feel the expansion valve vibrate on touching it ?
Yes
Ok
No
Is LEV properly fixed to the expansion valve?
No
Properly fix the LEV to the expansion valve.
Yes
Does the resistance of LEV have the characteristics? Refer to 11-5.
Yes
Measure each voltage between connector pins of CN724 on the inverter P.C. board.
1.Pin③(-) — Pin①(+)
2.Pin④(-) — Pin①(+)
3.Pin⑤(-) — Pin①(+)
4.Pin⑥(-) — Pin①(+)
Is there about 3~5V AC between each?
NOTE: Measure the voltage by an analog tester.
No
Replace the inverter P.C. board.
No
Replace the LEV.
Yes
Replace the expansion valve.
① While pressing both OPERATION SELECT button and TOO COOL button on the remote controller at the same time, press RESET button.
② First, release RESET button.
And release the other two buttons since all LCD in operation display section of the remote controller is displayed after 3 seconds.
MITSUBISHI ELECTRIC
NOTE : After check of LEV, do the undermentioned operations.
1. Turn OFF the power supply and turn ON it again.
2. Press RESET button on the remote controller.

www.ilmalämpöpumput.com

Outdoor base gets frozen.

Ⓜ Check of defrost heater

<MUZ-GA25VAH MUZ-GA35VAH>

Check the following points before checking electric continuity.
1) Does the resistance of ambient temperature thermistor have the characteristics? Refer to 11-7.1.
2) Is the resistance of defrost heater normal? Refer to 11-5.
3) Does the heater protector remain conducted (not open)?
4) Are both ambient temperature thermistor and circuit of defrost heater securely connected to connectors?

In HEAT mode, for more than 5 minutes, let the ambient temperature thermistor continue to read 5℃ or less, and let the defrost thermistor continue to read -1℃ or less.

NOTE: In case both thermistors are more than the above temperature, cool them with cold water etc...

Is there 230V AC between CN722 ① and ③ on the power P.C. board? Refer to 11-7.2.

Yes → No problem of the power P.C. board.

No

Is the voltage between CN726 ②(+)-③(-) on the power P.C. board 0V DC? Refer to 11-7.2.

Yes → Replace the power P.C. board.

No

Replace the inverter P.C. board.

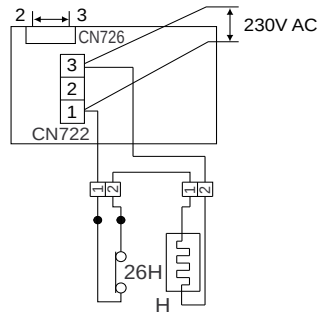

Outdoor fan motor does not operate, or stops immediately after starting up.

Ⓝ Check of inverter P.C. board

Check the outdoor fan motor. Refer to11-6.①.

Check the connection of the connectors.
CN932 : driving output
CN931 : feedback signal

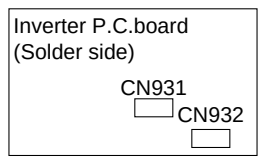

Make the outdoor unit operate by starting EMERGENCY OPERATION .

Check the LED indication on the inverter P.C. board. Does LED indicate 10-time flash?

No → Check the corresponding section by LED indication.

Yes
(10-time flash)

Outdoor fan motor protection

Replace the inverter P.C. board.

www.ilmalämpöpumput.com

When OPERATION INDICATOR lamp flashes ON and OFF in every 0.5-second.
Outdoor unit doesn't operate.

Ⓞ How to check mis-wiring and serial signal error (when outdoor unit does not work)

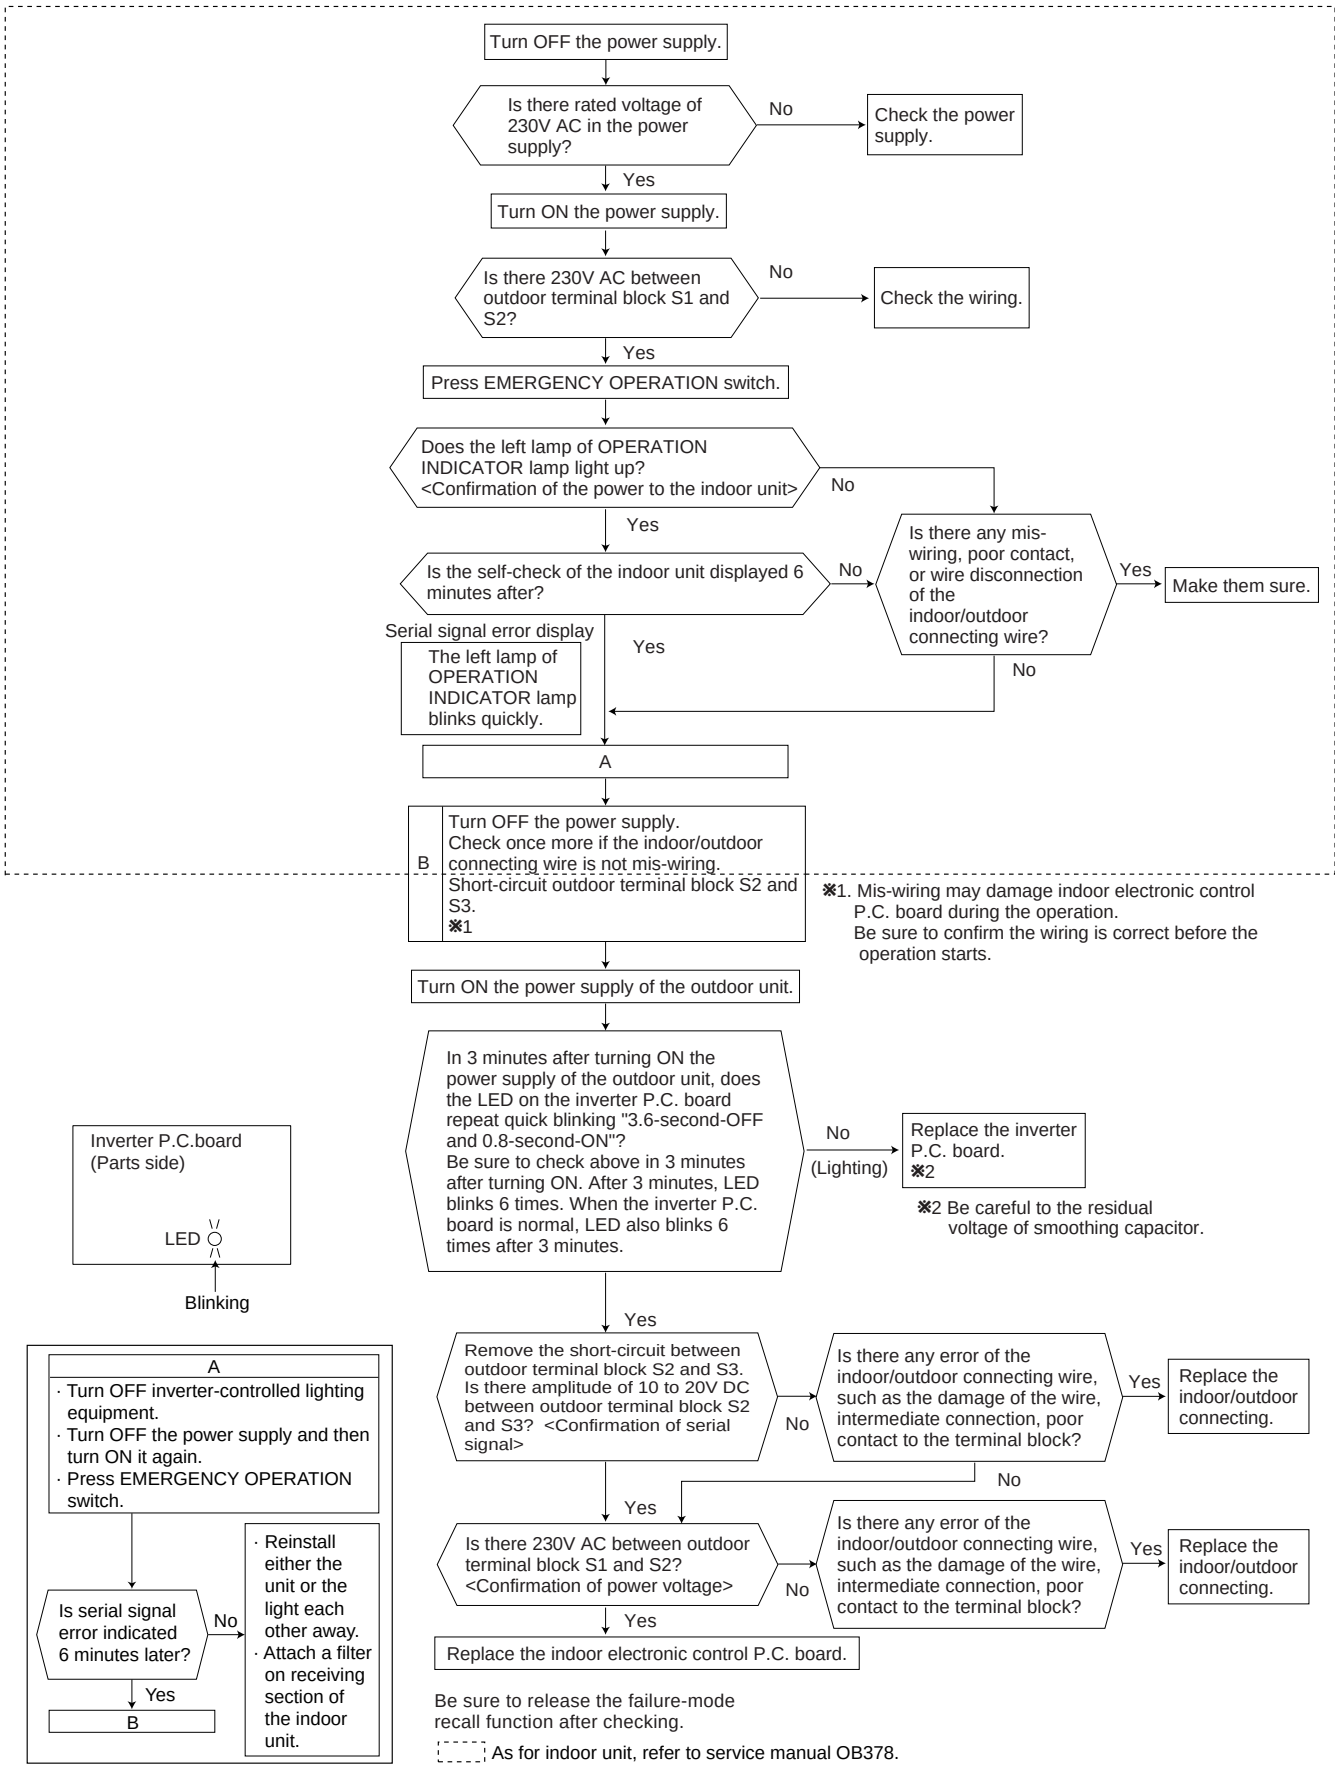
Turn OFF the power supply.
Is there rated voltage of 230V AC in the power supply?
No
Check the power supply.
Yes
Turn ON the power supply.
Is there 230V AC between outdoor terminal block S1 and S2?
No
Check the wiring.
Yes
Press EMERGENCY OPERATION switch.
Does the left lamp of OPERATION INDICATOR lamp light up? <Confirmation of the power to the indoor unit>
No
Yes
Is the self-check of the indoor unit displayed 6 minutes after?
No
Is there any mis-wiring, poor contact, or wire disconnection of the indoor/outdoor connecting wire?
Yes
Make them sure.
No
Serial signal error display
The left lamp of OPERATION INDICATOR lamp blinks quickly.
Yes
A
B
Turn OFF the power supply.
Check once more if the indoor/outdoor connecting wire is not mis-wiring.
Short-circuit outdoor terminal block S2 and S3.
※1
※1. Mis-wiring may damage indoor electronic control P.C. board during the operation.
Be sure to confirm the wiring is correct before the operation starts.
Turn ON the power supply of the outdoor unit.
In 3 minutes after turning ON the power supply of the outdoor unit, does the LED on the inverter P.C. board repeat quick blinking "3.6-second-OFF and 0.8-second-ON"?
Be sure to check above in 3 minutes after turning ON. After 3 minutes, LED blinks 6 times. When the inverter P.C. board is normal, LED also blinks 6 times after 3 minutes.
No
(Lighting)
Replace the inverter P.C. board.
※2
※2 Be careful to the residual voltage of smoothing capacitor.
Inverter P.C.board
(Parts side)
LED
Blinking
Yes
Remove the short-circuit between outdoor terminal block S2 and S3. Is there amplitude of 10 to 20V DC between outdoor terminal block S2 and S3? <Confirmation of serial signal>
No
Is there any error of the indoor/outdoor connecting wire, such as the damage of the wire, intermediate connection, poor contact to the terminal block?
Yes
Replace the indoor/outdoor connecting.
No
Yes
Is there 230V AC between outdoor terminal block S1 and S2? <Confirmation of power voltage>
No
Is there any error of the indoor/outdoor connecting wire, such as the damage of the wire, intermediate connection, poor contact to the terminal block?
Yes
Replace the indoor/outdoor connecting.
Yes
Replace the indoor electronic control P.C. board.
A
· Turn OFF inverter-controlled lighting equipment.
· Turn OFF the power supply and then turn ON it again.
· Press EMERGENCY OPERATION switch.
Is serial signal error indicated 6 minutes later?
No
· Reinstall either the unit or the light each other away.
· Attach a filter on receiving section of the indoor unit.
Yes
B
Be sure to release the failure-mode recall function after checking.
As for indoor unit, refer to service manual OB378.

When the cool air does not blow out from the indoor unit in Low Outside Temperature Operation, or the condensed water drops from the indoor unit.

Ⓟ Operation check of the solenoid valve.

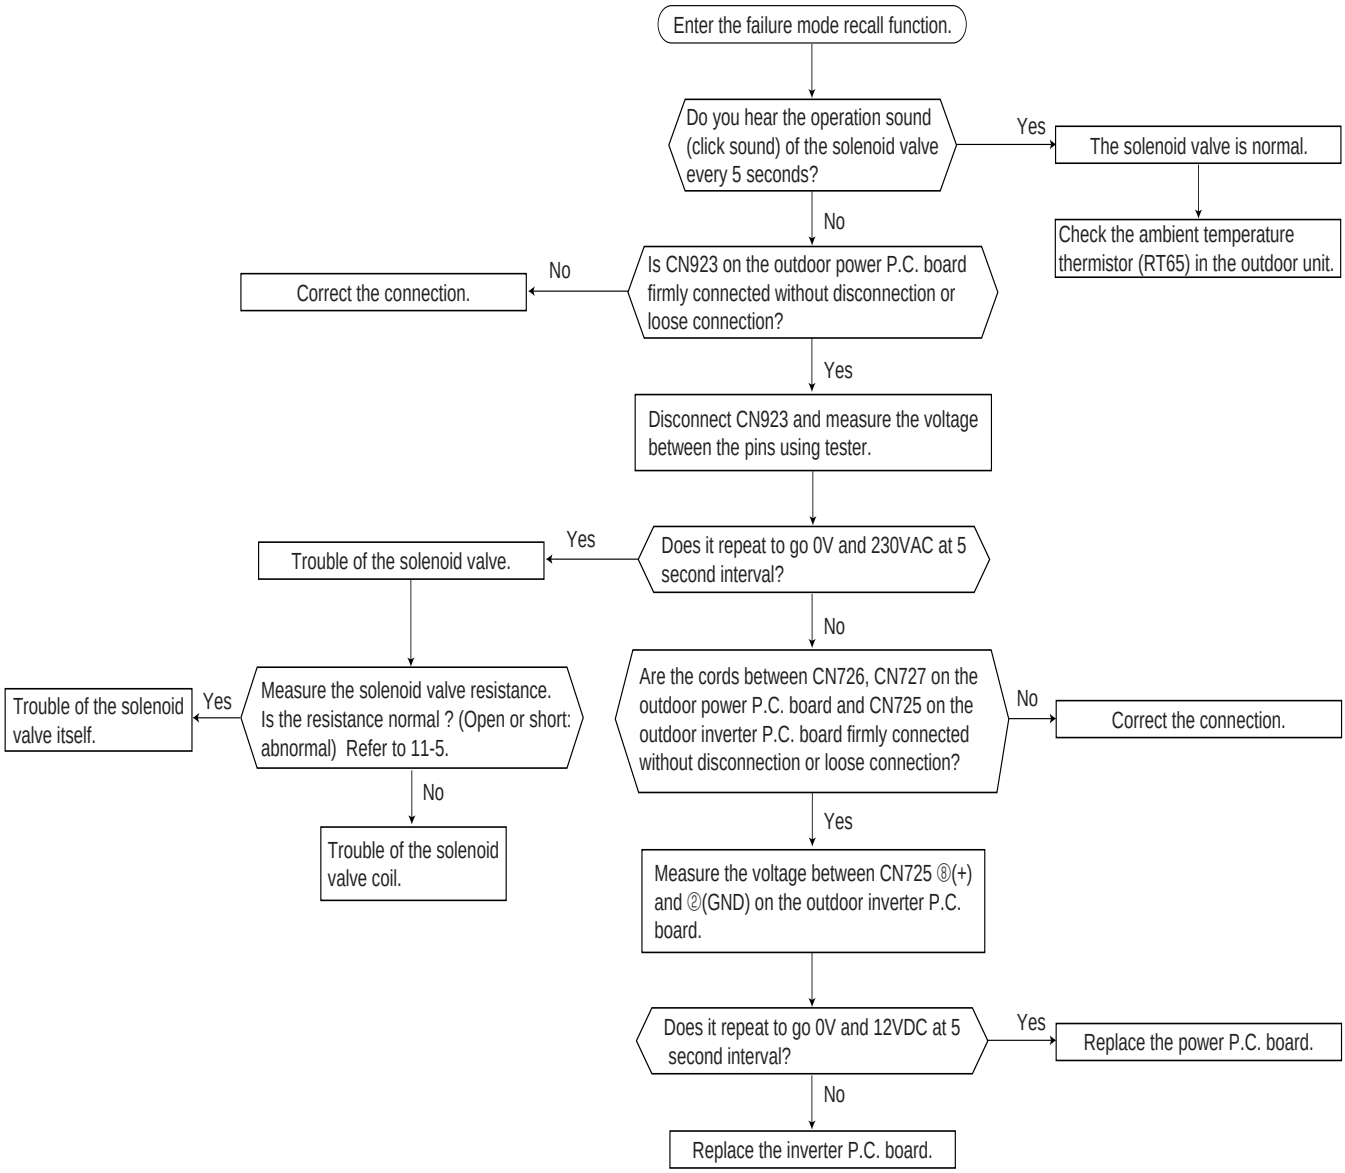
Enter the failure mode recall function.
Do you hear the operation sound (click sound) of the solenoid valve every 5 seconds?
Yes
The solenoid valve is normal.
Check the ambient temperature thermistor (RT65) in the outdoor unit.
No
Is CN923 on the outdoor power P.C. board firmly connected without disconnection or loose connection?
No
Correct the connection.
Yes
Disconnect CN923 and measure the voltage between the pins using tester.
Does it repeat to go 0V and 230VAC at 5 second interval?
Yes
Trouble of the solenoid valve.
Measure the solenoid valve resistance. Is the resistance normal ? (Open or short: abnormal) Refer to 11-5.
Yes
Trouble of the solenoid valve itself.
No
Trouble of the solenoid valve coil.
No
Are the cords between CN726, CN727 on the outdoor power P.C. board and CN725 on the outdoor inverter P.C. board firmly connected without disconnection or loose connection?
No
Correct the connection.
Yes
Measure the voltage between CN725 ⑧(+) and ②(GND) on the outdoor inverter P.C. board.
Does it repeat to go 0V and 12VDC at 5 second interval?
Yes
Replace the power P.C. board.
No
Replace the inverter P.C. board.

www.ilmalämpöpumput.com

Ⓠ Electromagnetic noise enters into TV sets or radios

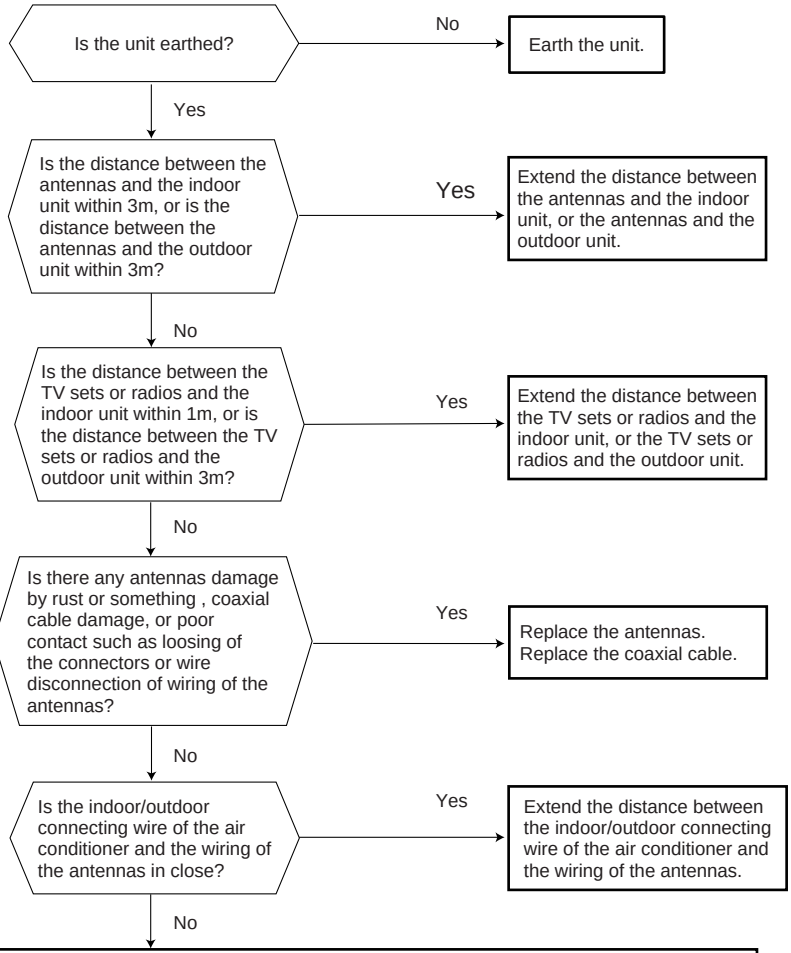
Is the unit earthed?
No
Earth the unit.
Yes
Is the distance between the antennas and the indoor unit within 3m, or is the distance between the antennas and the outdoor unit within 3m?
Yes
Extend the distance between the antennas and the indoor unit, or the antennas and the outdoor unit.
No
Is the distance between the TV sets or radios and the indoor unit within 1m, or is the distance between the TV sets or radios and the outdoor unit within 3m?
Yes
Extend the distance between the TV sets or radios and the indoor unit, or the TV sets or radios and the outdoor unit.
No
Is there any antennas damage by rust or something , coaxial cable damage, or poor contact such as loosing of the connectors or wire disconnection of wiring of the antennas?
Yes
Replace the antennas.
Replace the coaxial cable.
No
Is the indoor/outdoor connecting wire of the air conditioner and the wiring of the antennas in close?
Yes
Extend the distance between the indoor/outdoor connecting wire of the air conditioner and the wiring of the antennas.
No

Even if all of the above conditions is fulfilled, the electromagnetic noise may enter, depending on the electric field strength or the installation condition (combination of specific conditions such as antennas or wiring).
Check the followings before asking for service.

1.Devices affected by the electromagnetic noise
TV sets, radios (FM/AM broadcast, shortwave)
2.Channel, frequency, broadcast station affected by the electromagnetic noise
3.Channel, frequency, broadcast station unaffected by the electromagnetic noise
4.Layout of ;
indoor/outdoor unit of the air condioner, indoor/outdoor wiring, grounding wire, antennas, wiring from antennas, receiver
5.Electric field intensity of the broadcast station affected by the electromagnetic noise
6.Presence or absence of amplifier such as booster
7.Operation condition of air conditioner when the electromagnetic noise enters in.
1)Turn OFF the power supply once, and then turn ON the power supply. In this situation check for the electromagnetic noise.
2)Within 3 minutes after turning ON the power supply, press OPERATE/STOP (ON/OFF) button on the remote controller for power-on, and check for the electromagnetic noise.
3)After a short time (3 minutes later after turning ON), the outdoor unit starts running. During operation, check for the electromagnetic noise.
4)Press OPERATE/STOP (ON/OFF) button on the remote controller for power off, when the outdoor unit stops but the indoor/outdoor communication still runs on. In this situation check for the electromagnetic noise.

After checking the above, consult the service representative.

www.ilmalämpöpumput.com

11-7. Test point diagram and voltage.

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1

1. Inverter P.C. board

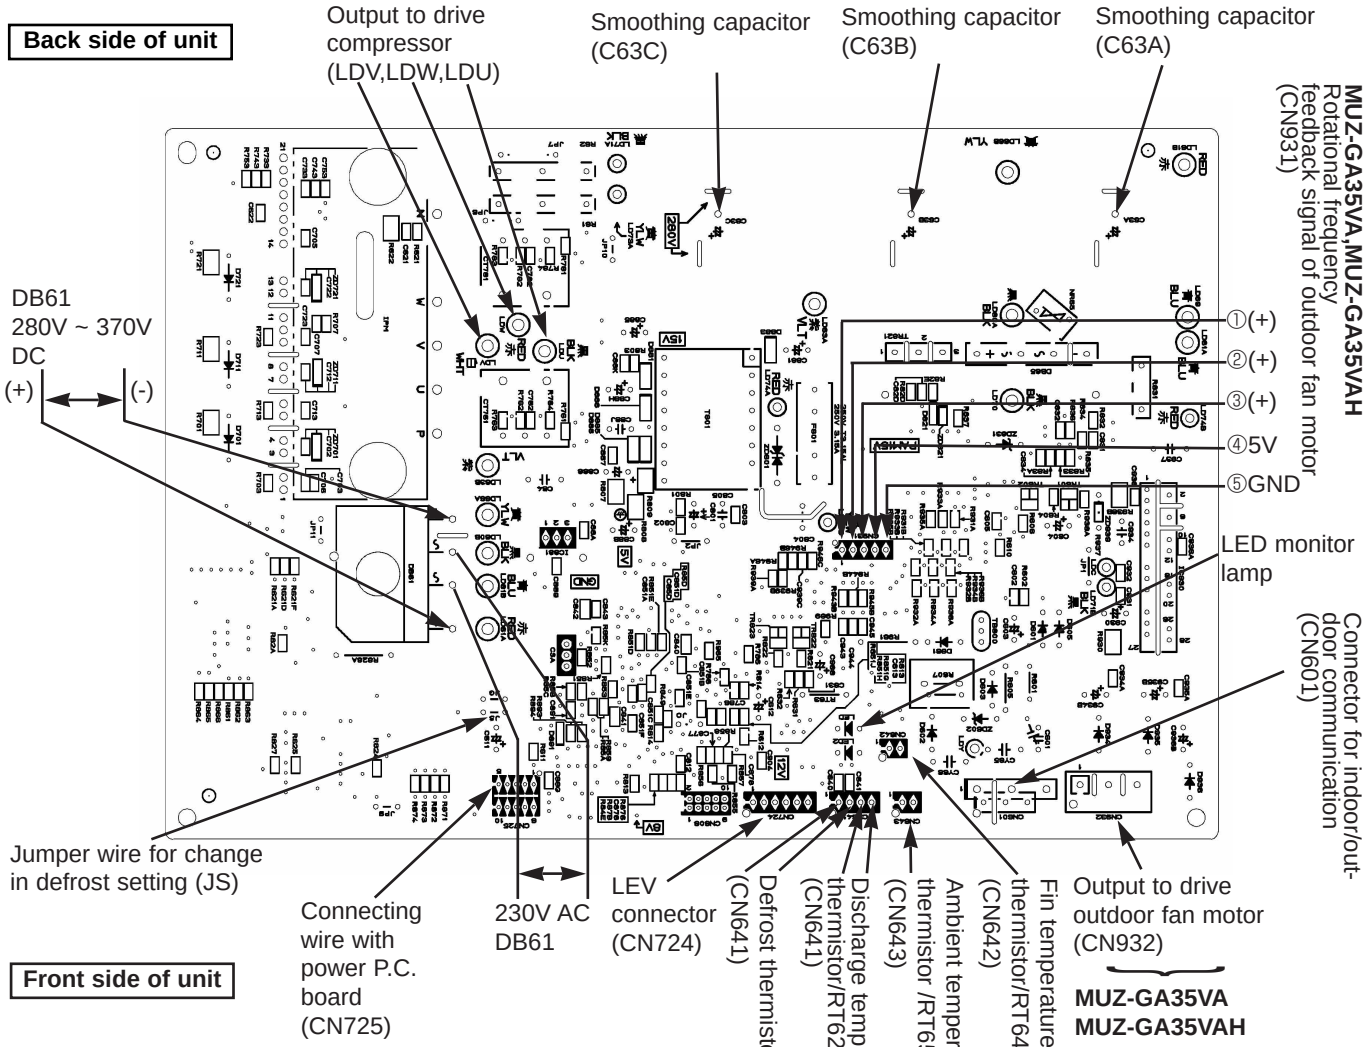

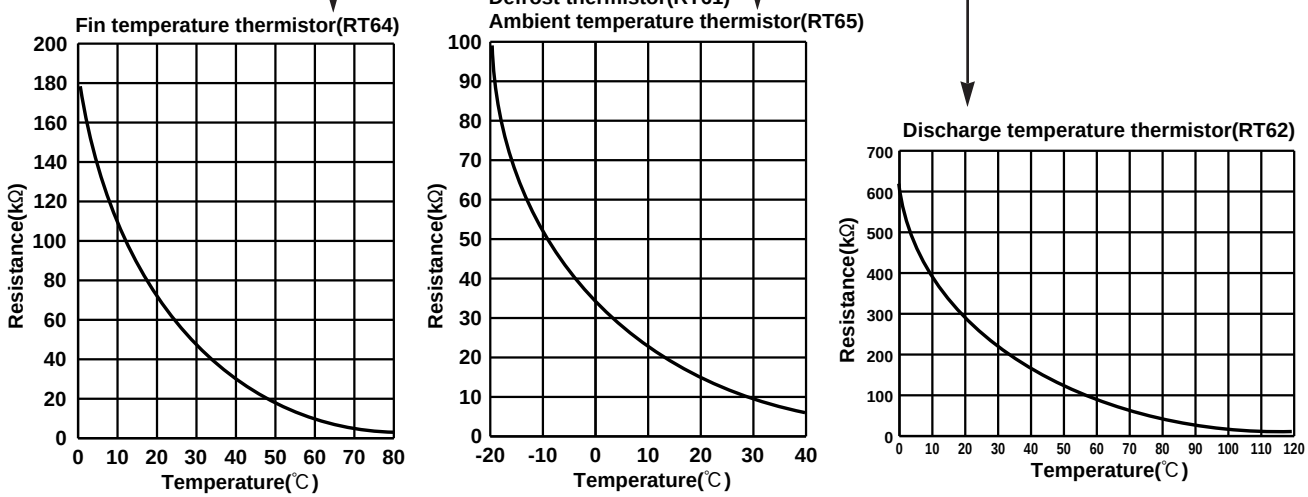

MUZ-GA25VA -E1 **MUZ-GA35VA -E1**
MUZ-GA25VAH -E1 **MUZ-GA35VAH -E1**

2. Power P.C. board

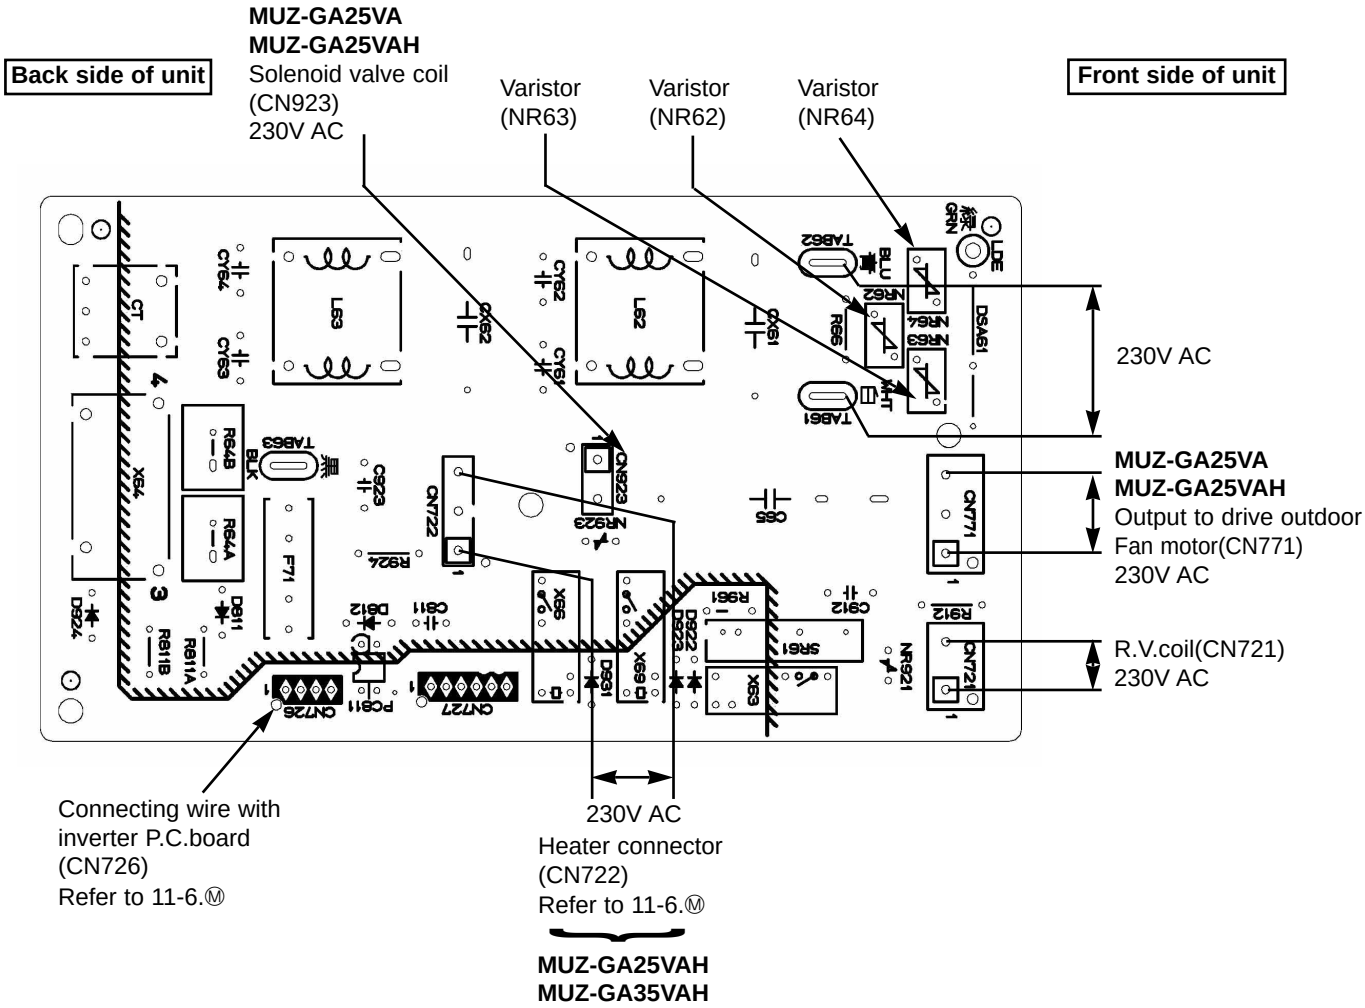

12 DISASSEMBLY INSTRUCTIONS

<"Terminal with locking mechanism" Detaching points>

The terminal which has the locking mechanism can be detached as shown below.
There are two types (Refer to (1) and (2)) of the terminal with locking mechanism.
The terminal without locking mechanism can be detached by pulling it out.
Check the shape of the terminal before detaching.

(1) Slide the sleeve and check if there is a locking lever or not.

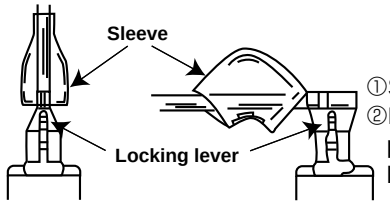

①Slide the sleeve.
②Pull the terminal while pushing the locking lever.

(2) The terminal with this connector has the locking mechanism.

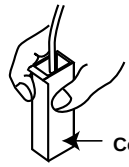

①Hold the sleeve, and pull out the terminal slowly.

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1
OUTDOOR UNIT

OPERATING PROCEDURE	PHOTOS
1. Removing the cabinet. (1) Remove the screw fixing the service panel. (See Photo 2.) (2) Pull down the service panel and remove it. (See Photo 2.) (3) Disconnect the power supply and indoor/outdoor connecting wire. (4) Remove the screws fixing the top panel. (See Photo 1.) (5) Remove the top panel. (See Photo 1.) (6) Remove the screws fixing the cabinet. (7) Remove the cabinet. (8) Remove the screws fixing the back panel. (9) Remove the back panel. **Photo 2** 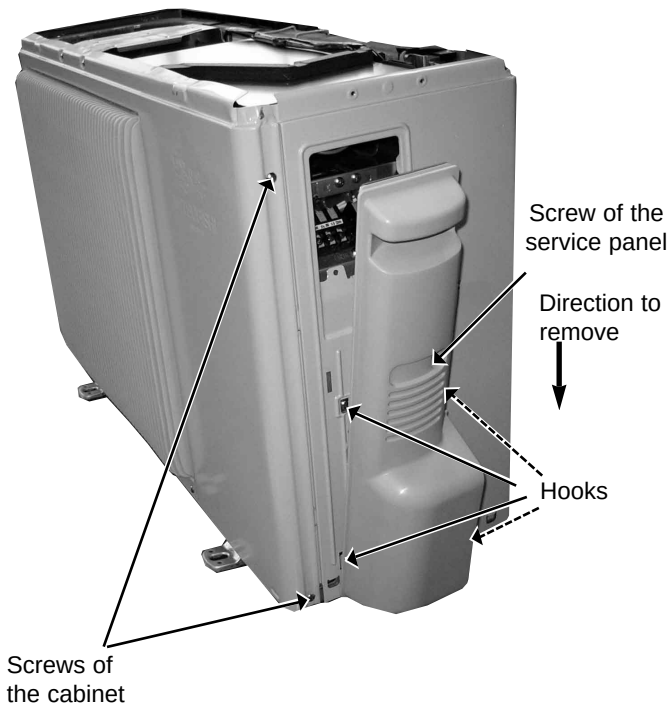 	**Photo 1** 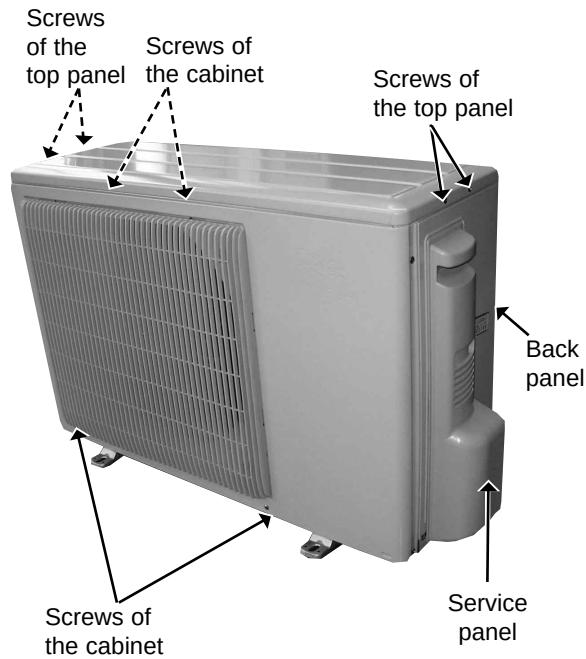

www.ilmalämpöpumput.com

OPERATING PROCEDURE	PHOTOS
2. Removing the inverter assembly, inverter P.C. board and power P.C. board (1) Remove the top panel, cabinet and service panel. (Refer to 1.) (2) Disconnect the power supply and indoor/outdoor connecting wire and remove the back panel. (Refer to 1.) (3) Disconnect the ground wires (See Photo 3.), the lead wire to the reactor and the following connectors; <Power P.C. board> CN721 (4-way valve) CN771 (Fan motor) MUZ-GA25VA/GA25VAH-E1 CN722 (Defrost heater) MUZ-GA25/GA35VAH-E1 CN923 (Solenoid valve coil) MUZ-GA25VA/GA25VAH-E1 <Inverter P.C. board> CN931,CN932 (Fan motor) MUZ-GA35VA/GA35VAH-E1 CN641 (Defrost thermistor and discharge temperature thermistor) CN643 (Ambient temperature thermistor) CN724 (LEV) MUZ-GA35VA/GA35VAH-E1 (4) Remove the compressor connector (CN61). (5) Remove the screws fixing the relay panel. (See Photo 3.) (6) Remove the inverter assembly. (See Photo 3.) (7) Disconnect all connectors and lead wires on the inverter P.C. board. (See Photo 4.) (8) Remove the inverter P.C. board from the inverter assembly. (9) Remove the screw fixing the power P.C. board. (See Photo 4.) (10) Disconnect all connectors and lead wires on the power P.C. board. (11) Remove the power P.C. board from the inverter assembly.	**Photo 3** 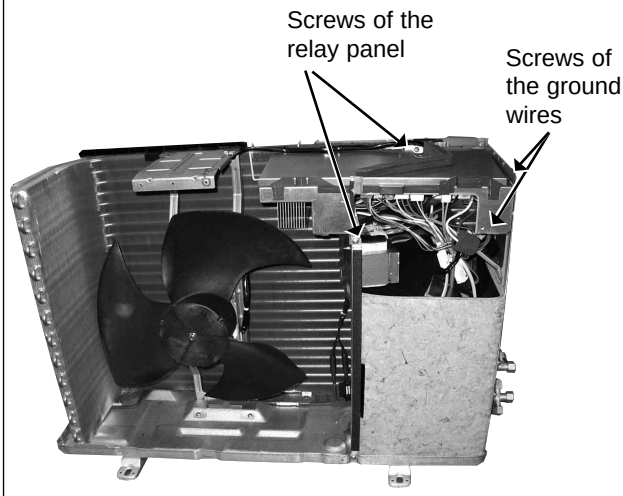
3. Removing R.V. coil (1) Remove the top panel, cabinet and service panel. (Refer to 1.) (2) Disconnect the power supply and indoor/outdoor connecting wire and remove the back panel. (Refer to 1.) (3) Remove the inverter assembly. (Refer to 2.) (4) Remove the R.V. coil. (See Photo 5.)	**Photo 4** 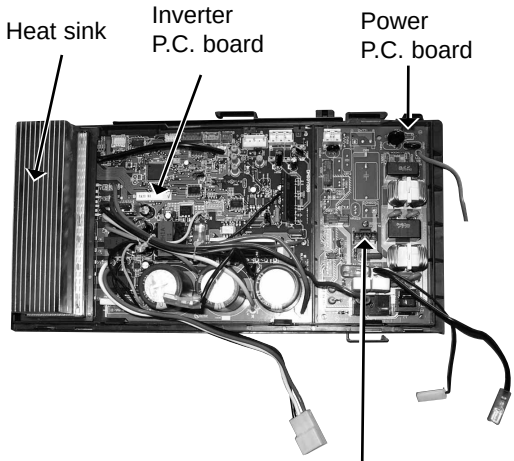
4. Removing the discharge temperature thermistor and defrost thermistor (1) Remove the top panel, cabinet and service panel. (Refer to 1.) (2) Disconnect the power supply and indoor/outdoor connecting wire and remove the back panel. (Refer to 1.) (3) Remove the inverter assembly. (Refer to 2.) (4) Pull out the discharge temperature thermistor from its holder. (See Photo 5.) (5) Pull out the defrost thermistor from its holder. (See Photo 6.)	**Photo 5** 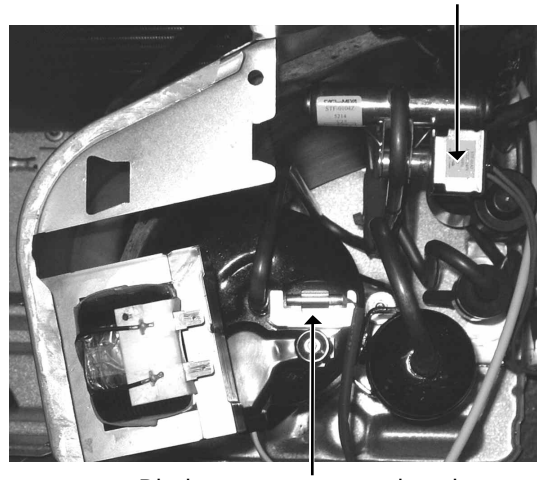

www.ilmalämpöpumput.com

OPERATING PROCEDURE

5. Removing outdoor fan motor

(1) Remove the top panel, cabinet and service panel. (Refer to 1.)
(2) Disconnect the power supply and indoor/outdoor connecting wire and remove the back panel. (Refer to 1.)
(3) Disconnect the connectors for outdoor fan motor.
(4) Remove the propeller nut.
(5) Remove the propeller.
(6) Remove the screws fixing the fan motor. (See Photo 7.)
(7) Remove the fan motor.

6. Removing the compressor and 4-way valve

(1) Remove the top panel, cabinet and service panel. (Refer to 1.)
(2) Disconnect the power supply and indoor/outdoor connecting wire and remove the back panel. (Refer to 1.)
(3) Remove the inverter assembly. (Refer to 2.)
(4) Recover gas from the refrigerant circuit.
NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm^2 (0 MPa).

(5) Detach the welded part of the suction and the discharge pipe connected with compressor.
(6) Remove the nuts of compressor legs.
(7) Remove the compressor.
(8) Detach the welded part of pipes connected with 4-way valve. (See Photo 8.)

PHOTOS

Photo 6

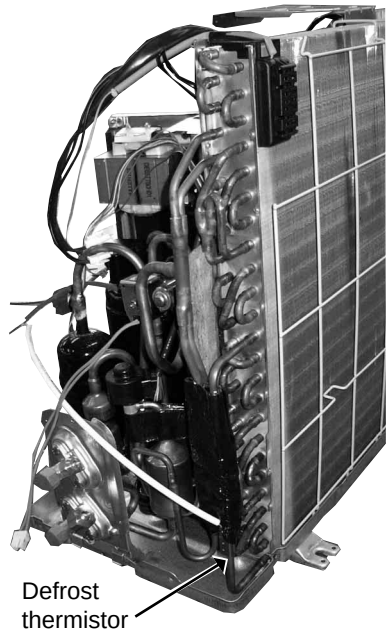

Photo 7

Photo 8

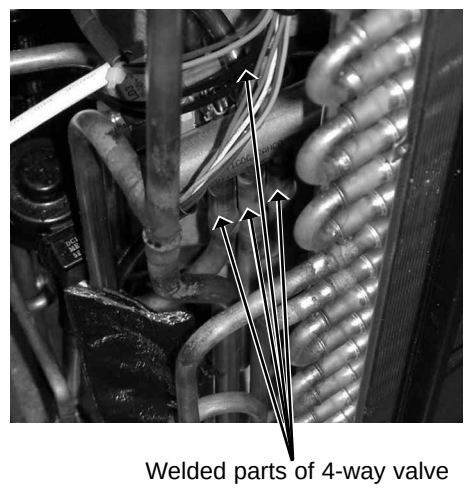

www.ilmalämpöpumput.com

13 PARTS LIST

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1

13-1. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS

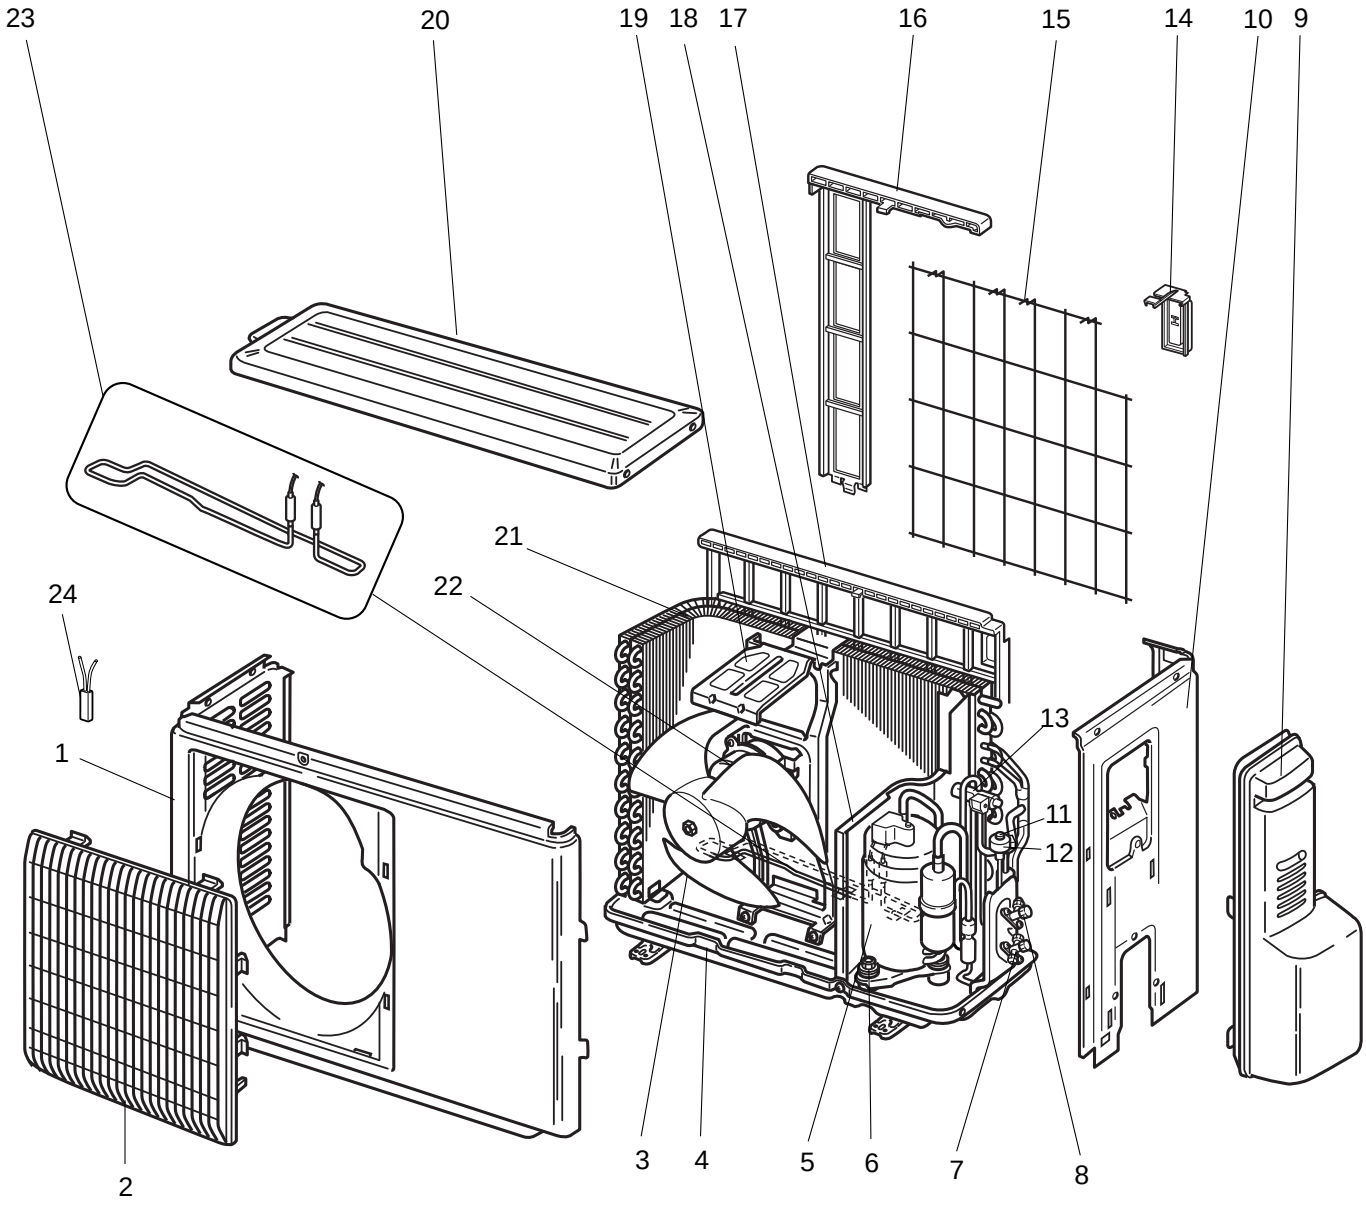

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1

13-1. OUTDOOR UNIT STRUCTURAL PARTS AND FUNCTIONAL PARTS

Part numbers that are circled are not shown in the illustration.

No.	Part No.	Part Name	Symbol in Wiring Diagram	Q'ty/unit				Remarks
				MUZ-GA25VA-E1	MUZ-GA25VAH-E1	MUZ-GA35VA-E1	MUZ-GA35VAH-E1	
1	E02 927 232	CABINET		1	1	1	1	
2	E02 927 521	GRILLE		1	1	1	1	
3	E02 931 501	PROPELLER		1	1			
	E02 927 501	PROPELLER				1	1	
4	E02 927 290	BASE		1		1		
	E02 928 290	BASE			1		1	
5	E02 928 900	COMPRESSOR	MC	1	1			KNB065FDTH
	E02 927 900	COMPRESSOR	MC			1	1	KNB073FDVH
6	E02 065 506	COMPRESSOR RUBBER SET		3	3	3	3	3RUBBERS/SET
7	E02 927 661	STOP VALVE (GAS)		1	1	1	1	ϕ9.52
8	E02 927 662	STOP VALVE (LIQUID)		1	1	1	1	ϕ6.35
9	E02 927 245	SERVICE PANEL		1	1	1	1	
10	E02 927 233	BACK PANEL		1	1	1	1	
11	E02 838 640	EXPANSION VALVE				1	1	
12	E02 927 493	EXPANSION VALVE COIL	LEV			1	1	
13	E02 927 961	4-WAY VALVE				1	1	
	E02 931 961	4-WAY VALVE		1	1			
14	E02 928 079	THERMO HOLDER			1		1	
15	E02 928 525	CONDENSER WIRE NET			1		1	
16	E02 928 523	CONDENSER NET			1		1	
17	E02 838 523	CONDENSER NET		1		1		
18	E02 927 293	SEPARATOR		1		1		
	E02 928 293	SEPARATOR			1		1	
19	E02 838 515	MOTOR SUPPORT		1	1			
	E02 927 515	MOTOR SUPPORT				1	1	
20	E02 927 297	TOP PANEL		1	1	1	1	
21	E02 927 630	OUTDOOR HEAT EXCHANGER		1	1	1	1	
22	E02 931 301	OUTDOOR FAN MOTOR	MF	1	1			RA6V21-□□
	E02 927 301	OUTDOOR FAN MOTOR	MF			1	1	RC0J50-□□
23	E02 840 526	DEFROST HEATER	H		1		1	
24	E02 840 381	HEATER PROTECTOR	26H		1		1	
(25)	E02 927 937	CAPILLARY TUBE				1	1	ϕ3.0×ϕ2.0×240
	E02 096 936	CAPILLARY TUBE		1	1			ϕ3.0×ϕ1.4×800
	E02 156 936	CAPILLARY TUBE		1	1			ϕ3.0×ϕ1.4×500
(26)	E02 096 642	CHECK VALVE		1	1			
(27)	E02 932 490	SOLENOID VALVE COIL	21R1	1	1			
(28)	E02 931 492	SOLENOID VALVE		1	1			

www.ilmalämpöpumput.com

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1

13-2. OUTDOOR UNIT ELECTRICAL PARTS

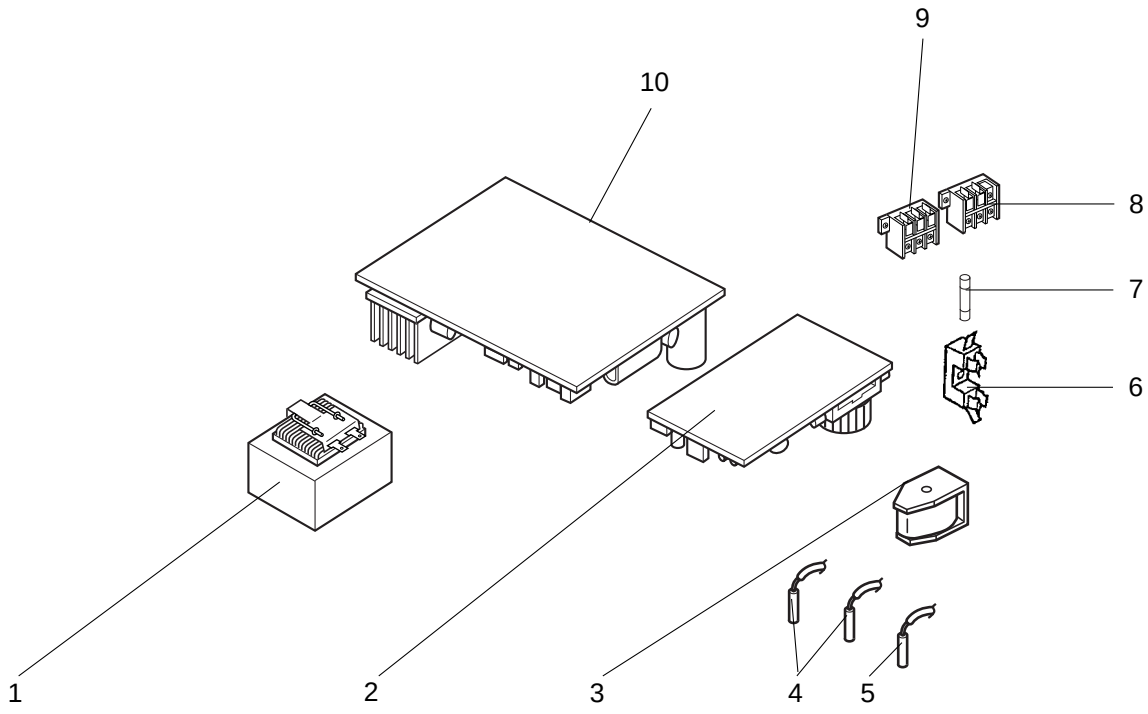

Part numbers that are circled are not shown in the illustration.

No.	Part No.	Part Name	Symbol in Wiring Diagram	Q'ty/unit				Remarks
				MUZ-GA25VA-E1	MUZ-GA25VAH-E1	MUZ-GA35VA-E1	MUZ-GA35VAH-E1	
1	E02 838 337	REACTOR	L61	1	1	1	1	
2	E02 927 444	POWER P.C. BOARD				1		
	E02 931 444	POWER P.C. BOARD					1	
	E02 928 444	POWER P.C. BOARD		1				
	E02 932 444	POWER P.C. BOARD			1			
3	E02 927 490	R.V. COIL	21S4			1	1	
	E02 928 490	R.V. COIL	21S4	1	1			
4	E02 927 306	THERMISTOR SET	RT61,RT62	1	1	1	1	DEFROST, DISCHARGE
5	E02 927 308	AMBIENT TEMPERATURE THERMISTOR	RT65	1	1	1	1	
6	E02 735 241	FUSE HOLDER		1	1	1	1	
7	E02 735 382	FUSE	F61	1	1	1	1	250V/20A
8	E02 573 375	TERMINAL BLOCK	TB1	1	1	1	1	3P
9	E02 927 374	TERMINAL BLOCK	TB2	1	1	1	1	3P
10	E02 928 451	INVERTER P.C. BOARD		1				Including heat sink and RT64
	E02 932 451	INVERTER P.C. BOARD			1			Including heat sink and RT64
	E02 931 451	INVERTER P.C. BOARD				1		Including heat sink and RT64
	E02 934 451	INVERTER P.C. BOARD					1	Including heat sink and RT64
(11)	E02 127 382	FUSE	F71,F801	1	1	1	1	250V/3.15A
(12)	E02 661 385	VARISTOR	NR62,NR63,NR64	1	1	1	1	

www.ilmalämpöpumput.com

MUZ-GA25VA -E1 MUZ-GA35VA -E1
13-3. DRAIN SOCKET

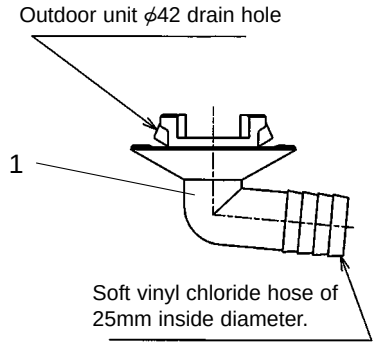

No.	Parts No.	Parts Name	Symbol in Wiring Diagram	Q'ty/unit		Remarks
				MUZ-GA25VA- E1	MUZ-GA35VA- E1	
1	E02 838 704	DRAIN SOCKET		1	1	

MUZ-GA25VA -E1 MUZ-GA35VA -E1
MUZ-GA25VAH -E1 MUZ-GA35VAH -E1
13-4. QUICK CLEAN KIT

●You can clean the surface of the heat exchanger and line flow fan if you attach QUICK CLEAN KIT to your vacuum cleaner.

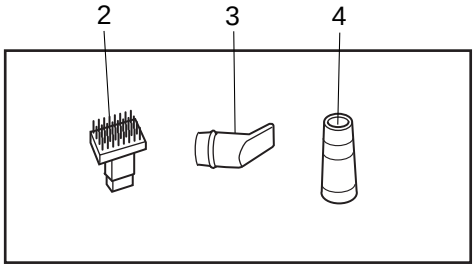

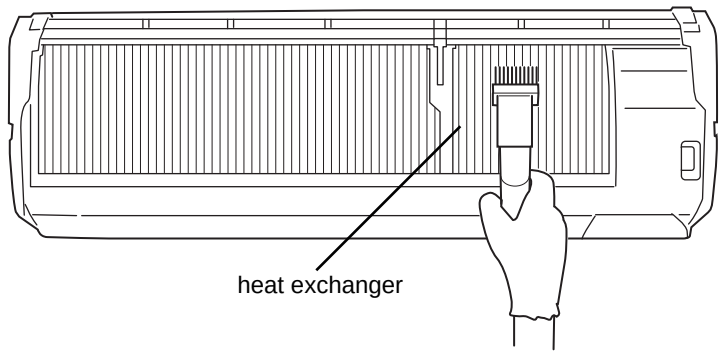

No.	Parts No.	Parts Name	Symbol in Wiring Diagram	Q'ty/unit				Remarks
				MUZ-GA25VA- E1	MUZ-GA25VAH- E1	MUZ-GA35VA- E1	MUZ-GA35VAH- E1	
2	E02 927 113	BRUSH		1	1	1	1	
3	E02 927 115	NOZZLE		1	1	1	1	
4	E02 927 112	UNIVERSAL ADAPTER		1	1	1	1	

www.ilmalämpöpumput.com

Mitsubishi ilmalämpöpumput huoltaa ja korjaa: Jäähdytinpalvelu RefGroup Oy

MITSUBISHI ELECTRIC CORPORATION
HEAD OFFICE: MITSUBISHI DENKI BLDG., 2-2-3, MARUNOUCHI, CHIYODA-KU, TOKYO100-8310, JAPAN

© Copyright 2005 MITSUBISHI ELECTRIC ENGINEERING CO.,LTD
Distributed in Jan. 2005. No. OB379 6
Made in Japan

New publication, effective Jan. 2005
Specifications subject to change without notice.

www.ilmalämpöpumput.com